1xEV-DO Rev. A, Rev. B
Digital Standard for R&S®SMW200A
User Manual

1175.6710.02 ─ 02

Test & Measurement

User Manual

ROHDE&SCHWARZ

This document describes the following software options:

- R&S®SMW-K47/-K87
  1413.3932.02, 1413.6519.02

© 2013 Rohde & Schwarz GmbH & Co. KG
Mühldorfstr. 15, 81671 München, Germany
Phone: +49 89 41 29 - 0
Fax: +49 89 41 29 12 164
E-mail: info@rohde-schwarz.com
Internet: www.rohde-schwarz.com
Subject to change – Data without tolerance limits is not binding.
R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.
Trade names are trademarks of the owners.

The following abbreviations are used throughout this manual: R&S®SMW200A is abbreviated as R&S SMW, R&S®WinIQSIM2 is abbreviated as R&S WinIQSIM2

Contents

1 Preface....5

1.1 Documentation Overview....5

1.2 Conventions Used in the Documentation....6

1.2.1 Typographical Conventions....6

1.2.2 Conventions for Procedure Descriptions....7

2 Welcome to the 1xEV-DO Digital Standard....8

2.1 Accessing the 1xEV-DO Dialog....9

3 About 1xEV-DO....10

3.1 Traffic Scheduling Process....11

4 1xEV-DO Configuration and Settings....12

4.1 General Settings....12

4.2 Trigger Settings....15

4.3 Marker Settings....19

4.4 Clock Settings....22

4.5 Local and Global Connector Settings....23

4.6 Traffic Channel Settings....24

4.7 Multi Carrier Configuration Settings....36

4.8 Access Network Settings....37

4.9 Access Terminal Settings....40

4.10 Filter / Clipping / ARB Settings....53

4.10.1 Filter Settings....54

4.10.2 Clipping Settings....55

4.10.3 ARB Settings....56

4.10.4 I/Q Setting....57

5 Remote-Control Commands....58

5.1 Programming Examples....59

5.2 General Commands....60

5.3 Filter/Clipping/ARB Settings....64

5.4 Trigger Settings....69

5.5 Marker Settings....74

5.6 Clock Settings....76
5.7 Access Network Settings....77
5.8 Multi Carrier Configuration....82
5.9 Configure Traffic User....84
5.10 Configure Access Terminal....93

List of Commands....115

Index....119

1 Preface

1.1 Documentation Overview

The user documentation for the R&S SMW consists of the following parts:

- Getting Started printed manual
- Online Help system on the instrument
- Documentation CD-ROM with:
  - Getting Started
  - Online help system (`*.chm`) as a standalone help
  - User Manuals for base unit and options
  - Service manual
  - Data sheet and product brochure
  - Links to useful sites on the R&S internet

Online Help

The Online Help is embedded in the software. It offers quick, context-sensitive access to the complete information needed for operation and programming. The online help contains help on operating the R&S SMW and all available options.

Getting Started

This manual is delivered with the instrument in printed form and in PDF format on the documentation CD. It provides the information needed to set up and start working with the instrument. Basic operations and typical measurement examples are described. Safety information is also included.

User Manual

User manuals are provided for the base unit and each additional (software) option.

The user manual for the base unit is a supplement to the Getting Started manual and provides basic information on operating the R&S SMW in general. In this manual, all instrument functions are described in detail. Furthermore, it provides a complete description of the remote control commands with programming examples. An introduction to remote control is provided, as well as information on maintenance, instrument interfaces and troubleshooting.

In the user manuals for the individual software options, the specific instrument functions of this option are described in detail. For additional information on default settings and parameters, refer to the data sheets. Basic information on operating the R&S SMW is not included in these user manuals.

The user manuals are available in PDF format - in printable form - on the Documentation CD-ROM delivered with the instrument.

All user manuals are also available for download from the R&S website, on the R&S SMW product page at http://www.rohde-schwarz.com/product/SMW.html.

Service Manual

This manual is available in PDF format on the CD delivered with the instrument. It describes how to check compliance with rated specifications, instrument function, repair, troubleshooting and fault elimination. It contains all information required for repairing the R&S SMW by replacing modules.

Release Notes

The release notes describe the installation of the firmware, new and modified functions, eliminated problems, and last minute changes to the documentation. The corresponding firmware version is indicated on the title page of the release notes. The most recent release notes are available for download from the R&S website, on the R&S SMW product page at http://www.rohde-schwarz.com/product/SMW.html > Downloads > Firmware.

Web Helps

Web helps are provided for the base unit and each additional (software) option. The content of the web helps correspond to the user manuals for the latest product versions.

The web help is an additional file format that offers quick online access. The web helps are not intended for download but rather to access the required information directly form the R&S website.

Web helps are available at the R&S website, on the R&S SMW product page at http://www.rohde-schwarz.com/product/SMW.html > Download > Web Help.

1.2 Conventions Used in the Documentation

1.2.1 Typographical Conventions

The following text markers are used throughout this documentation:

Convention	Description
"Graphical user interface elements"	All names of graphical user interface elements on the screen, such as dialog boxes, menus, options, buttons, and softkeys are enclosed by quotation marks.
KEYS	Key names are written in capital letters.
`File names, commands, program code`	File names, commands, coding samples and screen output are distinguished by their font.
Input	Input to be entered by the user is displayed in italics.

Convention	Description
Links	Links that you can click are displayed in blue font.
"References"	References to other parts of the documentation are enclosed by quotation marks.

1.2.2 Conventions for Procedure Descriptions

When describing how to operate the instrument, several alternative methods may be available to perform the same task. In this case, the procedure using the touchscreen is described. Any elements that can be activated by touching can also be clicked using an additionally connected mouse. The alternative procedure using the keys on the instrument or the on-screen keyboard is only described if it deviates from the standard operating procedures.

The term "select" may refer to any of the described methods, i.e. using a finger on the touchscreen, a mouse pointer in the display, or a key on the instrument or on a keyboard.

2 Welcome to the 1xEV-DO Digital Standard

The R&S SMW-K47/-K87 is a firmware application that adds functionality to generate signals in accordance to the CDMA2000 1xEV-DO (Evolution-Data Optimized), Rev. A and Rev. B.

CDMA2000 1xEV-DO is the North American standard for the third mobile radio generation (3G). CDMA2000 1xEV-DO is a high-speed packet-switched transmission technique with forward peak data rates of 4.9152 Mbps per carrier, designed and optimized for a data-centric broadband network.

The R&S SMW simulates 1xEV-DO signal at the physical layer. In forward link (downlink) mode the signal is generated in realtime. Parameter changes during active signal output take effect immediately without signal interruption. In reverse link (uplink) mode the signal is precalculated and played from the ARB memory. Parameter changes result in a recalculation of the signal.

The following list gives an overview of the main feature provided by the R&S SMW for generating an 1xEV-DO signal in accordance with 3GGP2 C.S0024-B.v3.0.

- Generation of 1xEV-DO signals with a chip rate of 1.2288 Mcps
- Independent configuration of up to 4 traffic channels or 4 access terminals
- Support of physical layer subtypes 0, 1, 2 and 3
- Support of multi-carrier operation with up to 16 simultaneous carriers
- Operating modes "Traffic" and "Access" on the uplink
- Simulation of up to 360 additional MAC users
- Generation of standard compliant forward/downlink and reverse/uplink channel types
- Supports configuration of public data as defined in the standard, such as Long Code Masks for I and Q channel, PreambleLength, DRCLength etc.
- Filling the data files for data channels from all possible sources of the R&S Signal Generator: pattern (all1, all0, user-defined up to 64 bits), PN data or data lists
- Clipping for reducing the crest factor

This user manual contains a description of the functionality that the application provides, including remote control operation.

All functions not discussed in this manual are the same as in the base unit and are described in the R&S SMW User Manual. The latest version is available for download at the product homepage.

Installation

You can find detailed installation instructions in the R&S SMW Getting Started manual or in the Release Notes.

2.1 Accessing the 1xEV-DO Dialog

To open the dialog with 1xEV-DO settings

► In the block diagram of the R&S SMW, select "Baseband > 1xEV-DO".

A dialog box opens that display the provided general settings.

The signal generation is not started immediately. To start signal generation with the default settings, select "State > On".

3 About 1xEV-DO

The following table gives an overview of parameters of the modulation system 1xEV-DO.

Table 3-1: Parameters of the modulation system 1xEV-DO

Parameter	Value
Chip rate	1.2288 Mcps
Channel types	Forward link: • Pilot Channel • Forward Traffic Channel (Rev. A) • Reverse Activity • DRCLock • Reverse Power Control • ARQ (Rev. A) • Control Channel Reverse link, access mode: • Pilot Channel • Data Channel Reverse link, traffic mode: • Pilot Channel • Auxiliary Pilot Channel (Rev. A) • Reverse Rate Indicator • Data Rate Control • Data Source Control (Rev. A) • ACK Channel • Data Channel
Generation mode	Forward link: • Realtime mode Reverse link: • Arbitrary waveform mode • Multicarrier operation up to 16 concurrent carriers supported requires option R&S SMW-K87
Data rates	Forward link: • 38.4 .. 2457.6 kbps (Rev. 0) • 4.8 .. 3072 kbps (Rev. A) • 4.8 .. 4915 kbps (Rev. B) requires option R&S SMW-K87 Reverse link: • 9.6 .. 153.6 kbps (Rev. 0) • 4.8 .. 1843.2 kbps (Rev. A)
Frame length	26.67 ms (1 frame = 16 slots)
Slot duration	1.67 ms (1 slot = 2048 PN chips)
PN offset	0 .. 511
Channel coding	All channel coding modes defined in the standard (channel encoding, block interleaving, repetition, modulation, orthogonal spreading by Walsh function)
Modulation	BPSK, QPSK, 8PSK, 16QAM, 64QAM (requires option R&S SMW-K87)
Multi-code modulation	B4, Q2, Q4, Q4Q2, E4E2

Parameter	Value
Long Code Mask	Separate Long Code Masks for I and Q channel. The Long Code Generator is reloaded at every PN rollover with 0x24B91BFD3A8.
Walsh covers	Different Walsh functions for the different channels

3.1 Traffic Scheduling Process

In the 1xEV-DO system, the Forward Link is govern by a time division multiple access technique; access to Forward Link bandwidth by a user channel is governed by a scheduling process. The schedule process determines who gets access to Forward Link slots to carry user data.

The traffic scheduling process in this instrument follows a number of rules to schedule which user's data is sent for each slot.

The rules are listed in order of priority, with the highest priority rules being listed first. In the event that two rules contradict each other, the circumstances invoking the lower priority rule must be altered to resolve the contradiction.

- A channel with "State = Off" is never transmitted.
- The first slot of the control channel packet is always transmitted at its specified offset at the start of the control channel cycle.
- Once the first slot of a multiple slot packet is sent, the remaining slots are always transmitted with the proper interlace (3 slots skipped after 1 slot sent).
- Packets for a user can be transmitted on 1-4 interlaces (there are a total of 4 interlaces in the 1xEV-DO system). Packets on the different interlaces will be duplicates of those sent on the other interlaces for a given user. The interleave factor user interface parameter is used to control the number of interlaces used for each user.
- Immediately after the transmission of the last slot of a multiple slot packet, a lockout period of three slots is created. No additional packets from the same source may be scheduled before the three slot period expires.
- A control channel packet has priority over all other traffic channels. This may exclude transmission of user channels in advance of the control channel packet, if the other channel would require a slot that the control channel packet would require.
- User1 traffic has priority over User2, User3, and User4 traffic.
- User2 traffic has priority over User3 and User4 traffic.
- User3 traffic has priority over User4 traffic.
- If no traffic is scheduled for a slot, an idle slot will be transmitted.

4 1xEV-DO Configuration and Settings

► To access the 1xEV-DO settings, select "Baseband > 1xEV-DO".

The remote commands required to define these settings are described in chapter 5, "Remote-Control Commands", on page 58.

4.1 General Settings

This tab provides access to the default and the "Save/Recall" settings. The choice of link direction determines which parameters are available.

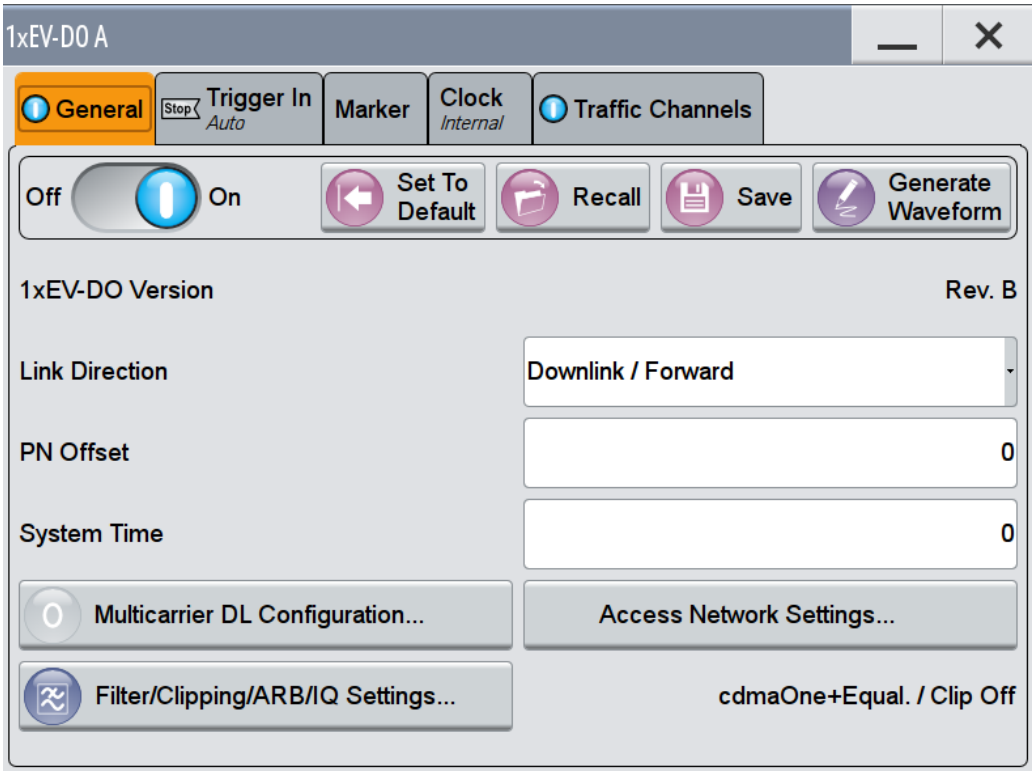

State
Enables/disables the 1xEV-DO standard.

Enabling this standard disables all the other digital standards and digital modulation modes in the same baseband.

Remote command:
`[:SOURce<hw>]:BB:EVDO:STATe` on page 63

Set to Default
Calls the default settings. The values of the main parameters are listed in the following table.

Parameter	Value
State	Not affected by Set to default
Link Direction	Downlink/ Forward
PN Offset	0
System Time	0
Predefined Settings	User Defined
Multicarrier State	off
Filter	CdmaOne + Equalizer
Clipping	Off
Trigger	Auto
Clock	Internal

Remote command:
[:SOURce<hw>]:BB:EVDO:PRESet on page 61

Save/Recall
Accesses the "Save/Recall" dialog, i.e. the standard instrument function for storing and recalling the complete dialog related settings in a file. The provided navigation possibilities in the dialog are self-explanatory.

The file name and the directory it is stored in are user-definable; the file extension is however predefined.

See also, chapter "File and Data Management" in the R&S SMW User Manual.

Remote command:
[:SOURce<hw>]:BB:EVDO:SETTing:CATalog? on page 62
[:SOURce<hw>]:BB:EVDO:SETTing:LOAD on page 62
[:SOURce<hw>]:BB:EVDO:SETTing:STORe on page 62
[:SOURce<hw>]:BB:EVDO:SETTing:DELete on page 62

Generate Waveform File
With enabled signal generation, triggers the instrument to store the current settings as an ARB signal in a waveform file. Waveform files can be further processed by the ARB and/or as a multi carrier or a multi segment signal.

The file name and the directory it is stored in are user-definable; the predefined file extension for waveform files is `*.wv`.

Remote command:
[:SOURce<hw>]:BB:EVDO:WAVeform:CREate on page 64

1xEV-DO Version
Displays the current version of the standard.

The default settings and parameters provided are oriented towards the specifications of the version displayed.

Remote command:
[:SOURce<hw>]:BB:EVDO:VERSion? on page 64

Link Direction
Selects the link direction.

The settings of the traffic channels per user and the access terminals are provided in the following menu section in accordance with the selection.

"Downlink/Forward"
The link direction selected is base station to access terminal. The signal corresponds to that of a base station.

"Uplink/Reverse"
The link direction selected is access terminal to base station. The signal corresponds to that of an access terminal.

Remote command:
[:SOURce<hw>]:BB:EVDO:LINK on page 61

PN Offset
Sets the PN Offset of the 1xEV-DO signal.

Remote command:
[:SOURce<hw>]:BB:EVDO:PNOFfset on page 61

System Time
Sets the System Time value of the 1xEV-DO signal and the base station. The System Time value is expressed in units of 1.67 ms intervals (80 ms/ 48).

Note: In uplink, the value selected for system time must be multiple of 16.

Remote command:
[:SOURce<hw>]:BB:EVDO:STIMe on page 63

Multicarrier Configuration
Access the "Multicarrier Configuration" dialog, see chapter 4.7, "Multi Carrier Configuration Settings", on page 36.

Access Network Settings
In Downlink direktion, provides an access to the "Access Network Settings" dialog, see chapter 4.8, "Access Network Settings", on page 37.

Filter / Clipping / ARB Settings
Access to the dialog for setting baseband filtering, clipping and the sequence length of the arbitrary waveform component, see chapter 4.10, "Filter / Clipping / ARB Settings", on page 53.

4.2 Trigger Settings

This tab provides an access to the settings necessary to select and configure the trigger, like trigger source, mode, trigger delay, trigger suppression, as well as to arm or trigger an internal trigger manually. The current signal generation status is displayed in the header of the tab together with information on the enabled trigger mode. As in the "Marker" and "Clock" tabs, this tab provides also an access to the settings of the related connectors.

This section focuses on the available settings.

For information on how these settings affect the signal, refer to chapter "Basics" in the R&S SMW user manual.

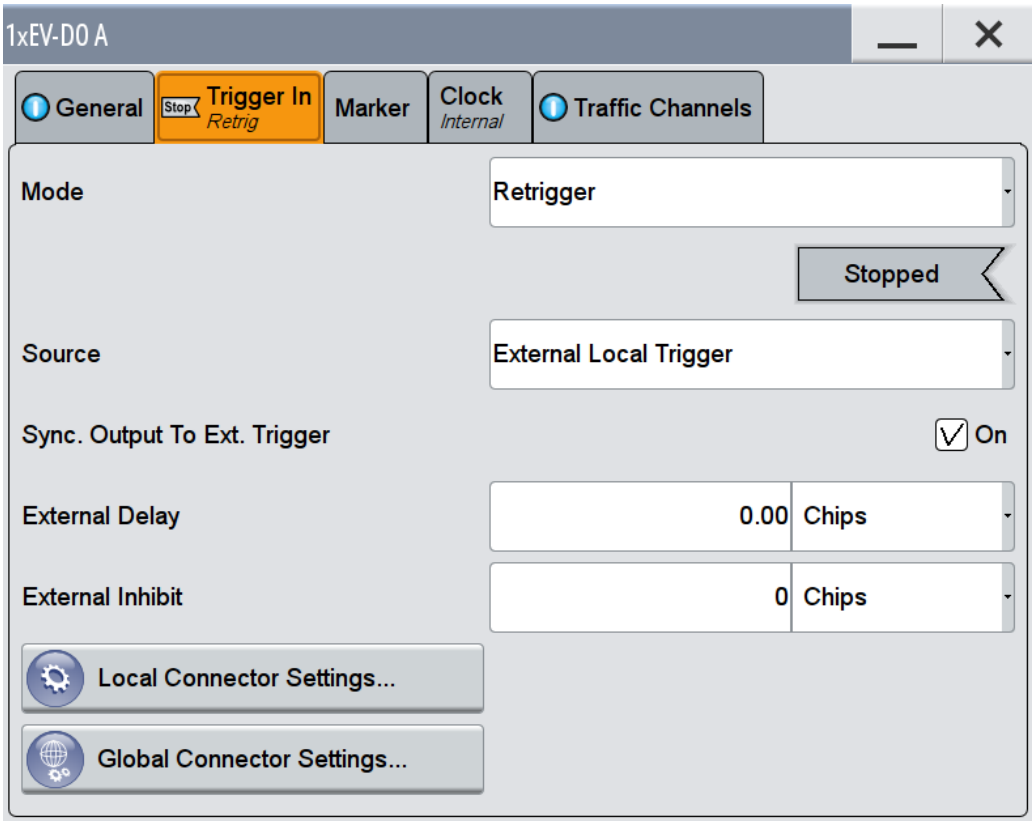

Routing and Enabling a Trigger

The provided trigger signals are not dedicated to a particular connector but can be mapped to one or more globally shared USER or local T/M/(C) connectors.

Use the Local and Global Connector Settings to configure the signal mapping as well as the polarity, the trigger threshold and the input impedance of the input connectors.

To route and enable a trigger signal, perform the following *general steps*:

- Define the signal source and the effect of a trigger event, i.e. select the "Trigger In > Mode" and "Trigger In > Source"
- Define the connector, USER or T/M/(C), the selected signal is provided at, i.e. configure the Local and Global Connector Settings.

Trigger Mode

Selects trigger mode, i.e. determines the effect of a trigger event on the signal generation.

Note: To enable simultaneous signal generation in all basebands, the trigger settings in the available basebands are coupled in any instrument's configuration involving signal routing with signal addition (e.g. MIMO configuration, routing and summing of basebands and/or streams).

For more information, refer to chapter "Basics" in the R&S SMW user manual.

- "Auto"
  The signal is generated continuously.
- "Retrigger"
  The signal is generated continuously. A trigger event (internal or external) causes a restart.
- "Armed_Auto"
  The signal is generated only when a trigger event occurs. Then the signal is generated continuously.
  An "Arm" stops the signal generation. A subsequent trigger event (internal with or external) causes a restart.
- "Armed_Retrigger"
  The signal is generated only when a trigger event occurs. Then the signal is generated continuously. Every subsequent trigger event causes a restart.
  An "Arm" stops signal generation. A subsequent trigger event (internal with or external) causes a restart.
- "Single"
  The signal is generated only when a trigger event occurs. Then the signal is generated once to the length specified at "Signal Duration".
  Every subsequent trigger event (internal or external) causes a restart.

Remote command:

`[:SOURce<hw>]:BB:EVDO[:TRIGger]:SEQuence` on page 69

Signal Duration Unit

Defines the unit for describing the length of the signal sequence to be output in the "Single" trigger mode.

Remote command:

`[:SOURce<hw>]:BB:EVDO:TRIGger:SLUNit` on page 72

Trigger Signal Duration
Enters the length of the signal sequence to be output in the "Single" trigger mode. The input is expressed in the signal units.

Use this parameter to deliberately output part of the signal, an exact sequence of the signal, or a defined number of repetitions of the signal.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TRIGger:SLENgth` on page 71

Running/Stopped
For enabled modulation, displays the status of signal generation for all trigger modes.

- "Running"
  The signal is generated; a trigger was (internally or externally) initiated in triggered mode.
- "Stopped"
  The signal is not generated and the instrument waits for a trigger event.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TRIGger:RMODe?` on page 71

Arm
Stops the signal generation until subsequent trigger event occurs.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TRIGger:ARM:EXECute` on page 70

Execute Trigger
For internal trigger source, executes trigger manually.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TRIGger:EXECute` on page 70

Trigger Source
Note: To enable simultaneous signal generation in all basebands, the trigger settings in the available basebands are coupled in any instrument's configuration involving signal routing with signal addition (e.g. MIMO configuration, routing and summing of basebands and/or streams).

For more information, refer to chapter "Basics" in the R&S SMW user manual.

The following sources of the trigger signal are available:

- "Internal"
  The trigger event is executed manually by the "Execute Trigger".
- "Internal (Baseband A/B)"
  The trigger event is provided by the trigger signal from the other basebands.
- "External Global Trigger 1 / 2"
  The trigger event is the active edge of an external trigger signal provided and configured at the global USER connectors.
- "External Global Clock 1 / 2"
  The trigger event is the active edge of an external global clock signal provided and configured at the global USER connectors.
- "External Local Trigger"

The trigger event is the active edge of an external trigger signal provided and configured at the local T/M/(C) connector.
With coupled trigger settings, the signal has to be provided at the T/M/C 1/2/3 connectors.

- "External Local Clock"
  The trigger event is the active edge of an external local clock signal provided and configured at the local T/M/C connector.
  With coupled trigger settings, the signal has to be provided at the T/M/C 1 connector.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TRIGger:SOURce` on page 72

Sync. Output to External Trigger
For an external trigger signal, enables/disables the output of a signal synchronous to the external trigger event.

"On" Corresponds to the default state of this parameter.
The signal calculation starts simultaneously with the external trigger event but because of the instrument's processing time the first samples are cut off and no signal is output. After elapsing of the internal processing time, the output signal is synchronous to the trigger event.

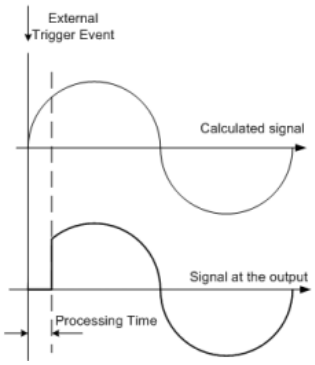

"Off" The signal output begins after elapsing of the processing time and starts with sample 0, i.e. the complete signal is output.
This mode is recommended for triggering of short signal sequences with signal duration comparable with the processing time of the instrument.

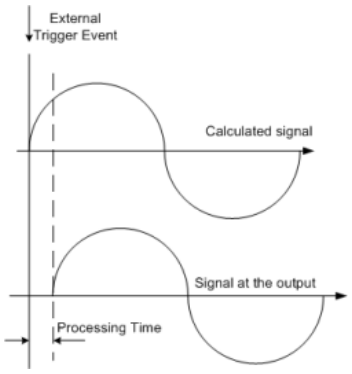

Remote command:
[:SOURce<hw>]:BB:EVDO:TRIGger:EXTernal:SYNChronize:OUTPut
on page 70

External Trigger Delay
For external trigger signal or trigger signal from the other path, sets the trigger signal delay.

One possible application field of this feature is the synchronization of the instrument with the device under test (DUT) or other external devices.

For more information, see chapter "Basics" in the R&S SMW User Manual.

Remote command:
[:SOURce<hw>]:BB:EVDO:TRIGger[:EXTernal]:DELay on page 73
[:SOURce<hw>]:BB:EVDO:TRIGger:OBASeband:DELay on page 70

External Trigger Inhibit
For external trigger signal or trigger signal from the other path, sets the duration a new trigger event subsequent to triggering is suppressed. In "Retrigger" mode for example, a new trigger event will not cause a restart of the signal generation until the specified inhibit duration does not expire.

For more information, see chapter "Basics" in the R&S SMW User Manual.

Remote command:
[:SOURce<hw>]:BB:EVDO:TRIGger[:EXTernal]:INHibit on page 74
[:SOURce<hw>]:BB:EVDO:TRIGger:OBASeband:INHibit on page 71

4.3 Marker Settings

This tab provides an access to the settings necessary to select and configure the marker output signal, like the marker mode or marker delay settings.

This section focuses on the available settings.

For information on how these settings affect the signal, refer to chapter "Basics" in the R&S SMW user manual.

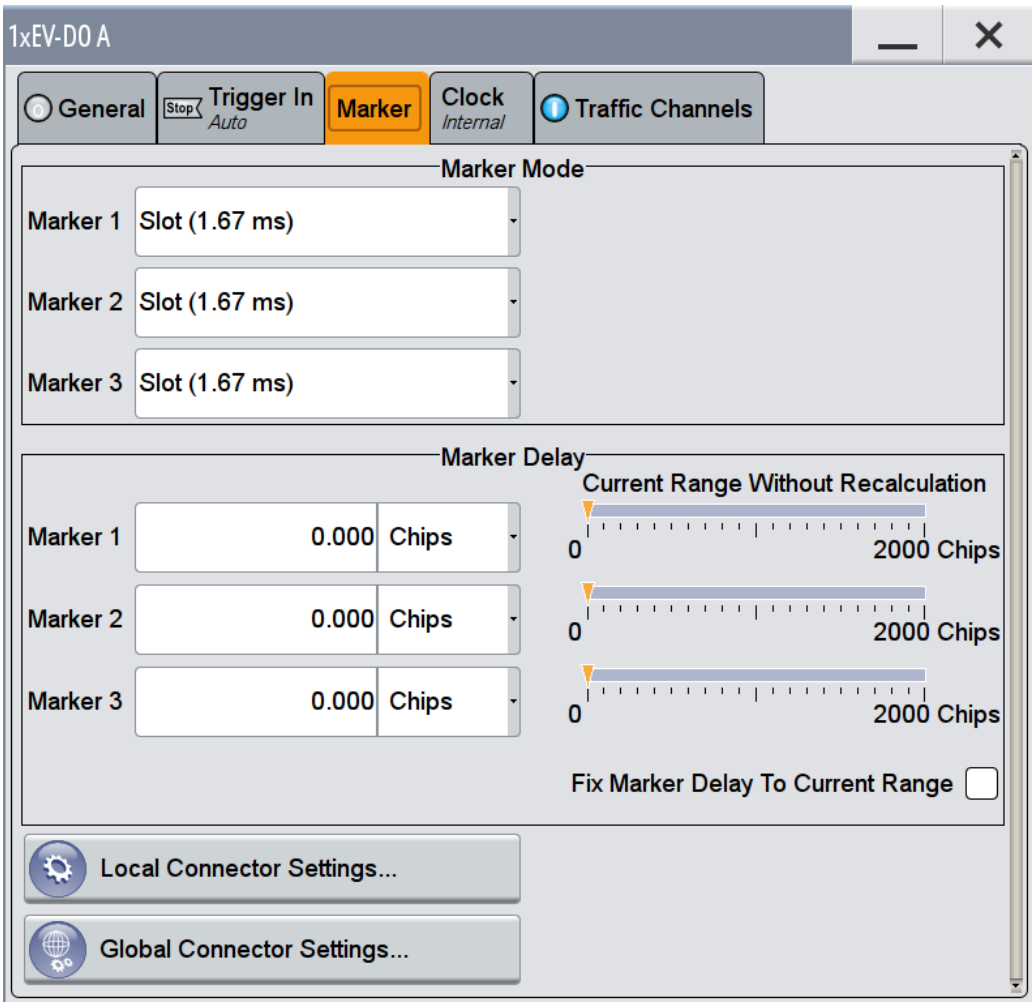

Routing and Enabling a Marker

The provided marker signals are not dedicated to a particular connector but can be mapped to one or more globally shared USER or local T/M/(C) connectors.

To route and enable a marker signal, perform the following *general steps*:

- Define the shape of the generated marker, i.e. select the "Marker > Mode"
- Define the connector, USER or T/M/(C), the selected signal is output at, i.e. configure the Local and Global Connector Settings.

Marker Mode

Marker configuration for up to three marker channels. The settings are used to select the marker mode defining the shape and periodicity of the markers. The contents of the dialog change with the selected marker mode.

"Slot (1.67 ms)" A marker signal is generated at the start of each slot (every 1.67 ms).

"PN Sequence Period (26,67 ms)"
A marker signal is generated every 26.67 ms (PN Sequence Period).

"Even Second Mark (2 s)"
A marker signal is generated every 2 seconds.

"Chip Sequence Period (ARB)"
(For reverse link mode only)
A marker signal is generated at the beginning of every Arbitrary Waveform sequence (depending on the set sequence length). The marker signal is generated regardless of whether or not an ARB component is actually used.

"ON/OFF Period"
A regular marker signal that is defined by an ON/OFF ratio is generated. A period lasts one ON and OFF cycle.
The "ON Time" and "OFF Time" are each expressed as a number of samples and are set in an input field which opens when ON/OFF ratio is selected.

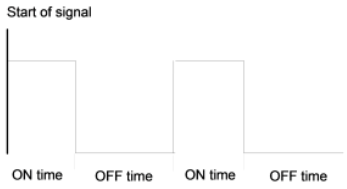

Remote command:
`[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:ONTime` on page 76
`[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:OFFTime` on page 76

"User Period" A marker signal is generated at the beginning of every user-defined period. The period is defined in "Period."

Remote command:
`[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:PERiod` on page 76

Remote command:
`[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:MODE` on page 75

Marker x Delay
Defines the delay between the marker signal at the marker outputs relative to the signal generation start.

"Marker x" For the corresponding marker, sets the delay as a number of symbols.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:DELay` on page 74

"Current Range without Recalculation"

Displays the dynamic range within which the delay of the marker signals can be set without restarting the marker and the signal.
Move the setting mark to define the delay.

Remote command:

`[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:DELay:MINimum?`
on page 75

`[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:DELay:MAXimum?`
on page 75

"Fix marker delay to current range"

Restricts the marker delay setting range to the dynamic range.

Remote command:

`[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut:DELay:FIXed` on page 74

4.4 Clock Settings

This tab provides an access to the settings necessary to select and configure the clock signal, like the clock source and clock mode.

This section focuses on the available settings.

For information on how these settings affect the signal, refer to chapter "Basics" in the R&S SMW user manual.

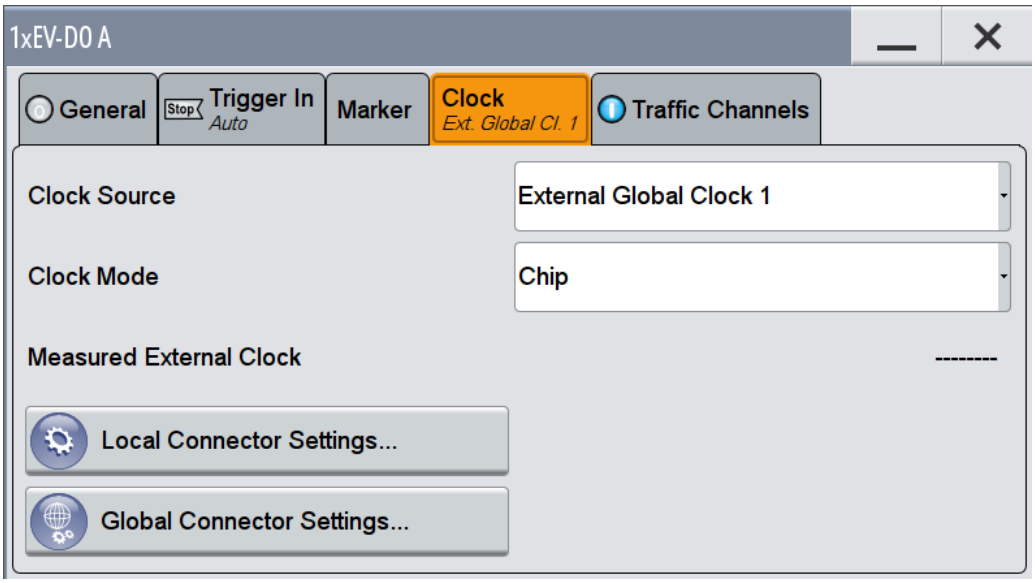

Defining the Clock

The provided clock signals are not dedicated to a particular connector but can be mapped to one or more globally shared USER and the two local T/M/C connectors.

Use the Local and Global Connector Settings to configure the signal mapping as well as the polarity, the trigger threshold and the input impedance of the input connectors.

To route and enable a trigger signal, perform the following *general steps*:

- Define the signal source, i.e. select the "Clock > Source"
- Define the connector, USER or T/M/C, the selected signal is provided at, i.e. configure the Local and Global Connector Settings.

Clock Source

Selects the clock source.

- "Internal"
  The instrument uses its internal clock reference.
- "External Global Clock 1/2"
  The instrument expects an external clock reference at the global USER connector, as configured in the "Global Connector Settings" dialog.
- "External Local Clock"
  The instrument expects an external clock reference at the local T/M/C connector.

Remote command:

`[:SOURce<hw>]:BB:EVDO:CLOCk:SOURce` on page 77

Clock Mode

Enters the type of externally supplied clock.

Remote command:

`[:SOURce<hw>]:BB:EVDO:CLOCk:MODE` on page 76

Chip Clock Multiplier

Enters the multiplication factor for clock type "Multiple".

Remote command:

`[:SOURce<hw>]:BB:EVDO:CLOCk:MULTiplier` on page 77

Measured External Clock

Provided for permanent monitoring of the enabled and externally supplied clock signal.

Remote command:

`CLOCk:INPut:FREQuency?`

4.5 Local and Global Connector Settings

Each of the "Trigger In", "Marker" and "Clock" dialogs as well as the "Trigger Marker Clock" dialog provides a quick access to the related local and global connector settings.

For more information, refer to the description R&S SMW User Manual, section "Local and Global Connectors".

4.6 Traffic Channel Settings

1. To access this dialog, select "Baseband > 1xEV-DO > Link Direction > Downlink"
2. Select "Traffic Channels".

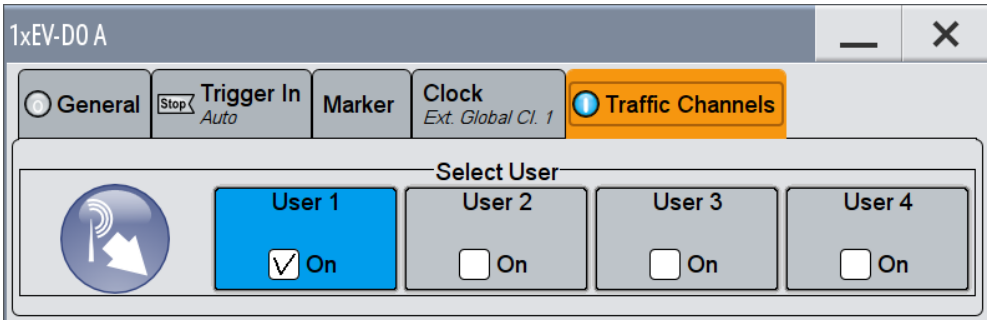

Four users are available.

3. To activate an user, set its state to "On", e.g. "User 1 > On".
4. To access the settings of an user, select the corresponding field, e.g. "User 1".

   The corresponding "Configure Traffic User 1 .. 4" dialog opens. The user number is indicated in the panel headline.

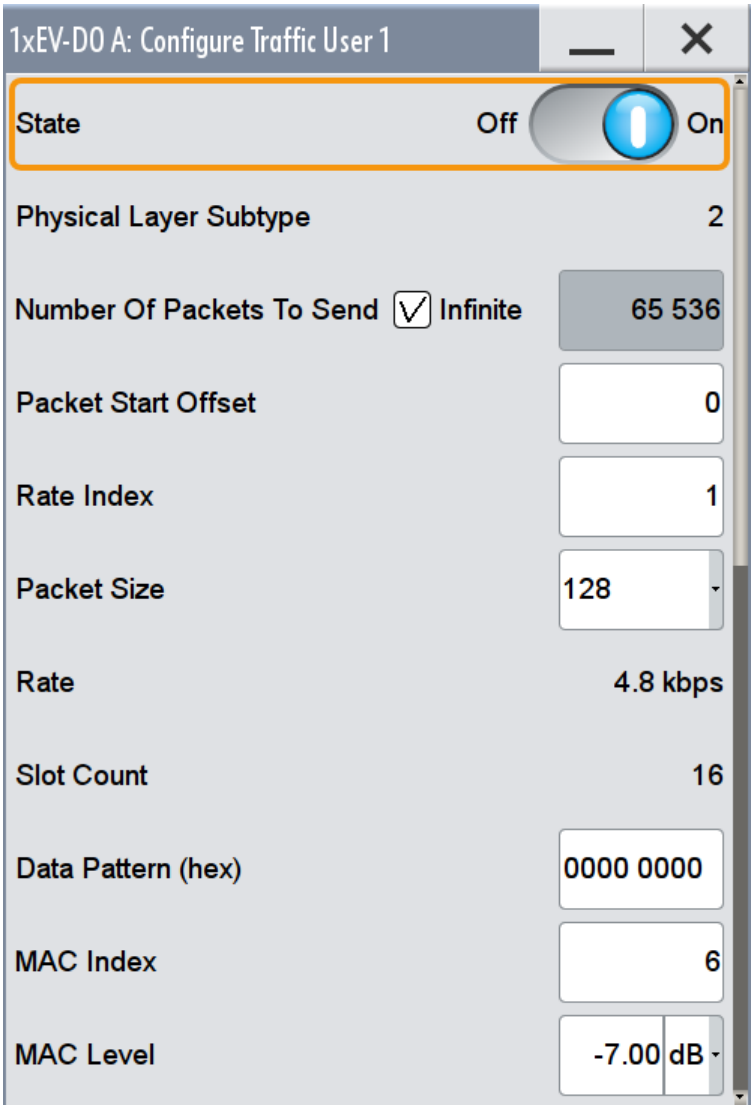
1xEV-DO A: Configure Traffic User 1
State
Off
On
Physical Layer Subtype
2
Number Of Packets To Send
Infinite
65 536
Packet Start Offset
0
Rate Index
1
Packet Size
128
Rate
4.8 kbps
Slot Count
16
Data Pattern (hex)
0000 0000
MAC Index
6
MAC Level
-7.00
dB

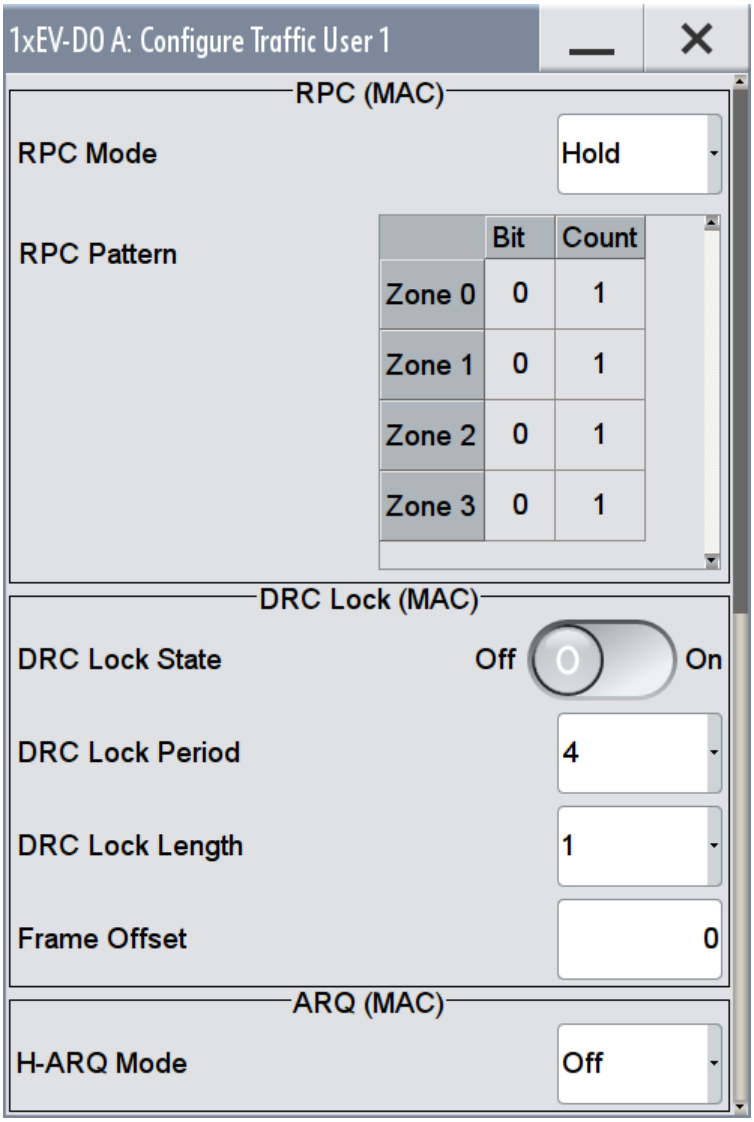

The dialog comprises the settings of the traffic channel and of the forward MAC channel settings, such as Reverse Power Control (RPC) and DRCLock.

State (User)
Enables or disables the selected user.

If the user is enabled, the proper MAC Index will be placed within the MAC channel and packets may be sent to the user. If disabled, the MAC Index will not be present within the MAC channel and packets may not be sent to the user.

Note: Disabling the state of a user during a transfer aborts all transfers to the user.

Remote command:
`[:SOURce<hw>]:BB:EVDO:USER<st>:STATe` on page 93

Physical Layer Subtype (User)
Displays the physical layer subtype selected in the menu "Access Network Settings".

Remote command:
`[:SOURce<hw>]:BB:EVDO:ANETwork:SUBType` on page 81

Number of Packets to Send
Sets the number of packets to send to the selected user.

The number of packets to be sent depends on whether the parameter "Infinite" is enabled or disabled. If "Infinite" is enabled, there is no limit to the number of packets sent to the user.

If "Infinite" is disabled and a value is specified while packets are being sent, the new count value will be used at the end of transmission of the current packet. If a value of zero is specified, the transmission to the user will be stopped at the end of the current packet.

Remote command:
`[:SOURce<hw>]:BB:EVDO:USER<st>:PACKet:INFinite` on page 88
`[:SOURce<hw>]:BB:EVDO:USER<st>:PACKet:COUNt` on page 88

Infinite
Enables or disables sending an unlimited number of packets to the selected user.

If "Infinite" is enabled, there is no limit to the number of packets sent to the user.

If "Infinite" is disabled, the number of packets to be sent to the selected user can be specified.

Remote command:
`[:SOURce<hw>]:BB:EVDO:USER<st>:PACKet:INFinite` on page 88

Packet Start Offset
Sets the minimum number of slots between the end of one packet and the beginning of the next.

For single slot packets, a value of zero will cause the next packet to be sent in the immediate next slot (subject to scheduling).

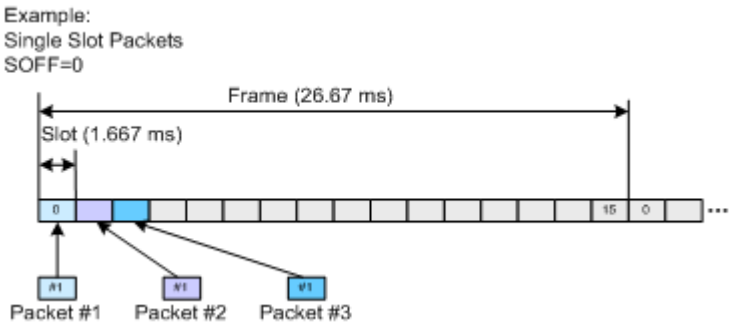

For multiple slot packets, a value of zero will cause the next packet transmission to start three slots after the end of the previous packet. The three slot delay is identical to the interleaving delay between slots for multiple slot packets. The offset value is attached to the end of the preceding packet.

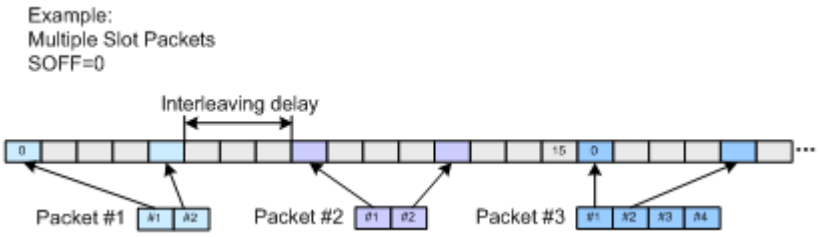

Note: An offset value of zero with a rate change from a single slot packet to multiple slot packets will cause the first slot of the multiple slot packets to be transmitted in the slot immediately following the single slot packet.

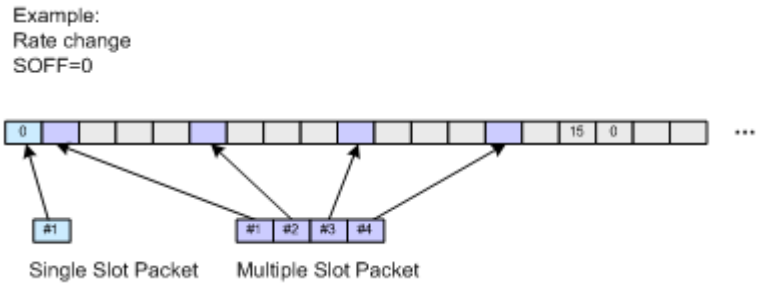

See chapter 3.1, "Traffic Scheduling Process", on page 11 for an explanation on how the control and traffic channels are transmitted over time.

Remote command:

`[:SOURce<hw>]:BB:EVDO:USER<st>:PACKet:SOFFset` on page 88

Rate Index

Sets an index into the table of rates and slot counts.

Note: Selected rate becomes effective at the beginning of the next packet transmitted to the selected user.

For physical layer 0&1, the parameter "Rate Index" alone automatically set the packet size, data rate and the slot count for the packets sent to the selected user. Parameters "Packet Size", "Data Rate" and "Slot Count" are read-only.

Table 4-1: Rate Index for Physical Layer Subtype 0&1

Rate Index	Packet Size Index	Packet Size, bits	Data Rate, kbps	Slot count
1	0	1024	38.4	16
2	0	1024	76.8	8
3	0	1024	153.6	4
4	0	1024	307.2	2
5	0	2048	307.2	4
6	0	1024	614.4	1
7	0	2048	614.4	2
8	0	3072	921.6	2
9	0	2048	1228.8	1

Rate Index	Packet Size Index	Packet Size, bits	Data Rate, kbps	Slot count
10	0	4096	1228.8	2
11	0	3072	1843.2	1
12	0	4096	2457.6	1

For physical layer subtype 2 however, a combination of the parameters Rate Index and the parameter Packet Size sets the data rate and the slot count for the packets sent to the selected user.

Table 4-2: Rate Index for Physical Layer Subtype 2

Rate Index	Packet Size Index	Packet Size, bits	Data Rate, kbps	Slot count
1	3	128	4.8	16
1	2	256	9.6	16
1	1	512	19.2	16
1	0	1024	38.4	16
2	3	128	9.6	8
2	2	256	19.2	8
2	1	512	38.4	8
2	0	1024	76.8	8
3	3	128	19.2	4
3	2	256	38.4	4
3	1	512	76.8	4
3	0	1024	153.6	4
4	3	128	38.4	2
4	2	256	76.8	2
4	1	512	153.6	2
4	0	1024	307.2	2
5	2	512	76.8	4
5	1	1024	153.6	4
5	0	2048	307.2	4
6	3	128	76.8	1
6	2	256	153.6	1
6	1	512	307.2	1
6	0	1024	614.4	1
7	2	512	153.6	2
7	1	1024	307.2	2
7	0	2048	614.4	2

Rate Index	Packet Size Index	Packet Size, bits	Data Rate, kbps	Slot count
8	1	1024	307.2	2
8	0	3072	921.6	2
9	2	512	307.2	1
9	1	1024	614.4	1
9	0	2048	1228.8	1
10	0	4096	1228.8	2
11	1	1024	614.4	1
11	0	3072	1843.2	1
12	0	4096	2457.6	1
13	0	5120	1536	2
14	0	5120	3072	1

Table 4-3: Rate Index for Physical Layer Subtype 3 (requires options R&S SMW-K87)

Rate Index	Packet Size Index	Packet Size, bits	Data Rate, kbps	Slot count
1	3	128	4.8	16
1	2	256	9.6	16
1	1	512	19.2	16
1	0	1024	38.4	16
2	3	128	9.6	8
2	2	256	19.2	8
2	1	512	38.4	8
2	0	1024	76.8	8
3	3	128	19.2	4
3	2	256	38.4	4
3	1	512	76.8	4
3	0	1024	153.6	4
4	3	128	38.4	2
4	2	256	76.8	2
4	1	512	153.6	2
4	0	1024	307.2	2
5	2	512	76.8	4
5	1	1024	153.6	4
5	0	2048	307.2	4
6	3	128	76.8	1

Rate Index	Packet Size Index	Packet Size, bits	Data Rate, kbps	Slot count
6	2	256	153.6	1
6	1	512	307.2	1
6	0	1024	614.4	1
7	2	512	153.6	2
7	1	1024	307.2	2
7	0	2048	614.4	2
8	1	1024	307.2	2
8	0	3072	921.6	2
9	2	512	307.2	1
9	1	1024	614.4	1
9	0	2048	1228.8	1
10	0	4096	1228.8	2
11	1	1024	614.4	1
11	0	3072	1843.2	1
12	0	4096	2457.6	1
13	0	5120	1536	2
14	0	5120	3072	1
15	0	1024	153.6	4
16	0	2048	307.2	4
17	0	3072	460.8	4
18	0	4096	614.4	4
19	0	5120	768	4
20	0	6144	921.6	4
21	0	6144	1843.2	2
22	0	6144	3686.4	1
23	0	7168	1075.2	4
24	0	7168	2150.4	2
25	0	7168	4300.8	1
26	0	8192	1228.8	4
27	0	8192	2457.6	2
28	0	8192	4915.2	1

Remote command:
`[:SOURce<hw>]:BB:EVDO:USER<st>:RATE:INDex` on page 90

Packet Size
Sets the packet size for the packets sent to the selected user.

For physical layer 0&1, the parameter "Packet Size" is read-only. The value is automatically set depending on the selection for the parameter "Rate Index". (see table 4-1)

For physical layer subtype 2 and 3, a combination of the parameter "Packet Size" and the parameter "Rate Index" sets the data rate and the slot count for the packets sent to the selected user. (see table 4-2)

Note: Selected rate becomes effective at the beginning of the next packet transmitted to the selected user.

Remote command:
`[:SOURce<hw>]:BB:EVDO:USER<st>:PSIZe` on page 89

Data Rate
Displays the data rate of the packets sent to the selected user. This parameter is read-only. The value is set automatically, depending on the selected "Rate Index "and "Packet Size" (see table 4-1 and table 4-2).

Note: Selected rate becomes effective at the beginning of the next packet transmitted to the selected user.

Remote command:
`[:SOURce<hw>]:BB:EVDO:USER<st>:RATE?` on page 89

Slot Count
Displays the slot count of the packets sent to the selected user.

This parameter is read-only. The value is set automatically, depending on the selected Rate Index and Packet Size. (see table 4-1 and table 4-2)

Note: Selected rate becomes effective at the beginning of the next packet transmitted to the selected user.

Remote command:
`[:SOURce<hw>]:BB:EVDO:USER<st>:SCOunt?` on page 92

Data Pattern
Sets the data pattern for the data portion of the packets sent to the user.

The most significant bit (MSB) of this value is the MSB of the packet and the word is repeated to fill all space within the packet. This parameter is in a hexadecimal format.

Remote command:
`[:SOURce<hw>]:BB:EVDO:USER<st>:DATA:PATTern` on page 84

MAC Index
Sets the MAC Index used for the selected user.

MAC Index should be different for the different users. However, in case that two users are using the same value for MAC Index, the lower priority user will be disabled, or be unable to enable.

The values for the MAC Indexes for the 'OtherUsers' (see parameter Other Users Count) will be assigned from a pool of valid MAC Indexes, that exclude the MAC Indexes specified for each of the four configurable users.

Remote command:
`[:SOURce<hw>]:BB:EVDO:USER<st>:MAC:INDex` on page 87

MAC Level
Sets the power within the MAC channel that is dedicated to the selected user.

Remote command:
`[:SOURce<hw>]:BB:EVDO:USER<st>:MAC:LEVel` on page 87

Interleave Factor
Controls the number of interleave slots used for the selected user on the forward link.

Four interleave slots are defined in the 1xEV-DO system.By default, only 1 Interleave slot (Interleave Factor = 1) for an access terminal is configured and transmission to that access terminal every 4th slot is selected. For an interleave factor > 1, packets on multiple interleave slots will be sent, increasing the data throughput to the access terminal.

Remote command:
`[:SOURce<hw>]:BB:EVDO:USER<st>:IFACtor` on page 86

RPC Mode
Sets the operation mode for the Reverse Power Control (RPC) Channel within the MAC channel for the selected user.

"Hold"	An alternating series of Up and Down power control bits are transmitted. The intent is to hold the access terminal at a constant power level. This mode always starts with an Up bit, and ends with the following Down bit. This mode is two bits long.
"All up"	A continuous stream of Up (0) power control bits are transmitted. The intent is to force the access terminal to the highest transmit power level. This mode is a single bit long.
"All down"	A continuous stream of Down (1) power control bits are transmitted. The intent is to force the access terminal to the lowest transmit power level. This mode is a single bit long.
"Range"	A sequence of Up power control bits are sent followed by an equal number of Down power control bits. The intent is to force the access terminal to ramp its power from one extreme to another. The number of power control bits in each direction is specified by the "RPC Range Count" parameter. (see RPC Range Count). Each time that the Range mode is specified, the sequence will be restarted. The Range mode starts with the first Up bit and ends with the last Down bit. The length of the mode is two times the RPC Range Count.

"Pattern" A user-defined sequence of RPC bits is sent. The mode starts with the bit defined in the first (0) zone, and ends with the last bit of the last (3) zone. The length of the pattern is the sum of the Count values for each RPC Zone.

Remote command:
`[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:MODE` on page 91

RPC Range Count
Sets the number of Reverse Power Control (RPC) bits sent in each direction when the "RPC Mode" is set to Range. The specified value is used immediately.

Note: This parameter is displayed in RPC Mode "Range" only.

Remote command:
`[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:RANGe` on page 91

RPC Pattern
Defines the Reverse Power Control (RPC) pattern in form of table with four zones (zone 0 .. 3).

For each zone, a bit and a count can be defined.

"Bit" Defines the RPC bits sent within the specific zone of the RPC Pattern.

"Count" Defines the number of RPC bits sent within the specific zone of the RPC Pattern.

Remote command:
`[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:ZONE<ch0>:BIT` on page 92
`[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:ZONE<ch0>:COUNt` on page 92

DRC Lock State
Sets the state of the DRC (Data Rate Control) Lock bit for the selected user.

Note: Changes in the DRC Lock state are only considered at the interval defined by the parameter DRC Lock Length.

Remote command:
`[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:STATe` on page 85

DRC Lock Period
Sets the period (measured in slots) of time between successive transmissions of the DRC (Data Rate Control) Lock bit for the selected user.

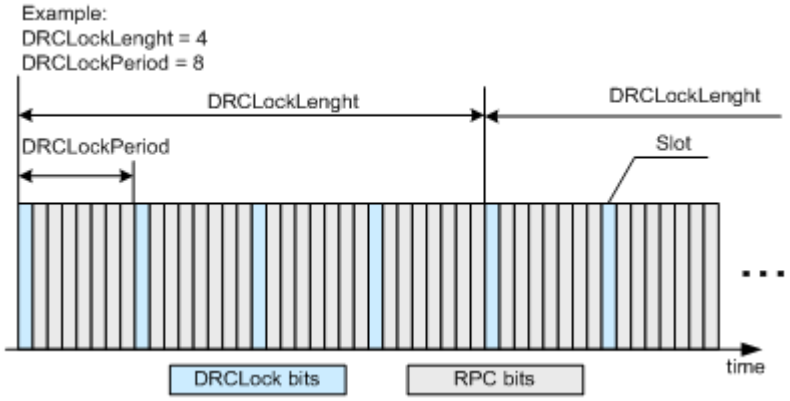

Note: A value of zero will disable the DRC Lock subchannel and the MAC RPC channel of the selected user will not be punctured with the DRC Lock subchannel.

Remote command:
`[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:PERiod` on page 85

DRC Lock Length
Sets the number of DRC (Data Rate Control) Lock Periods that the state of the DRC Lock for the selected user will be held constant.

Note: Changes in the DRC Lock state are only considered at the interval defined by the parameter DRC Lock Length.

A value of one allows updating of the DRC Lock bit at anytime.

Remote command:
`[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:LENGth` on page 85

Frame Offset
Sets the reverse link frame offset for the reverse link.

The frame offset is used to properly position the DRC Lock bit within the MAC channel.

Remote command:
`[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:OFFSet` on page 85

H-ARQ Mode
Enables or disables the H-ARQ Channel.

The H-ARQ channel is used by the access network to transmit positive acknowledgement (ACK) or a negative acknowledgement (NAK) in response to a physical layer packet.

Note: This parameter is enabled for Physical Layer Subtype 2 only.

"Off" Disables transmission of the H-ARQ channel.

"ACK" The channel will be transmitted with all bits set to ACK.

"NAK" The channel will be transmitted with all bits set to NAK.

Remote command:
`[:SOURce<hw>]:BB:EVDO:USER<st>:HARQ:MODE` on page 86

4.7 Multi Carrier Configuration Settings

Multi Carrier Configuration requires options R&S SMW-K87

In multi carrier mode, up to 16 modulated carriers can be generated with one baseband. Each carrier's center frequency is input via it's "CDMA Channel Number" or by directly entering the RF "Center Frequency / MHZ". The carriers can be activated or deactivated separately.

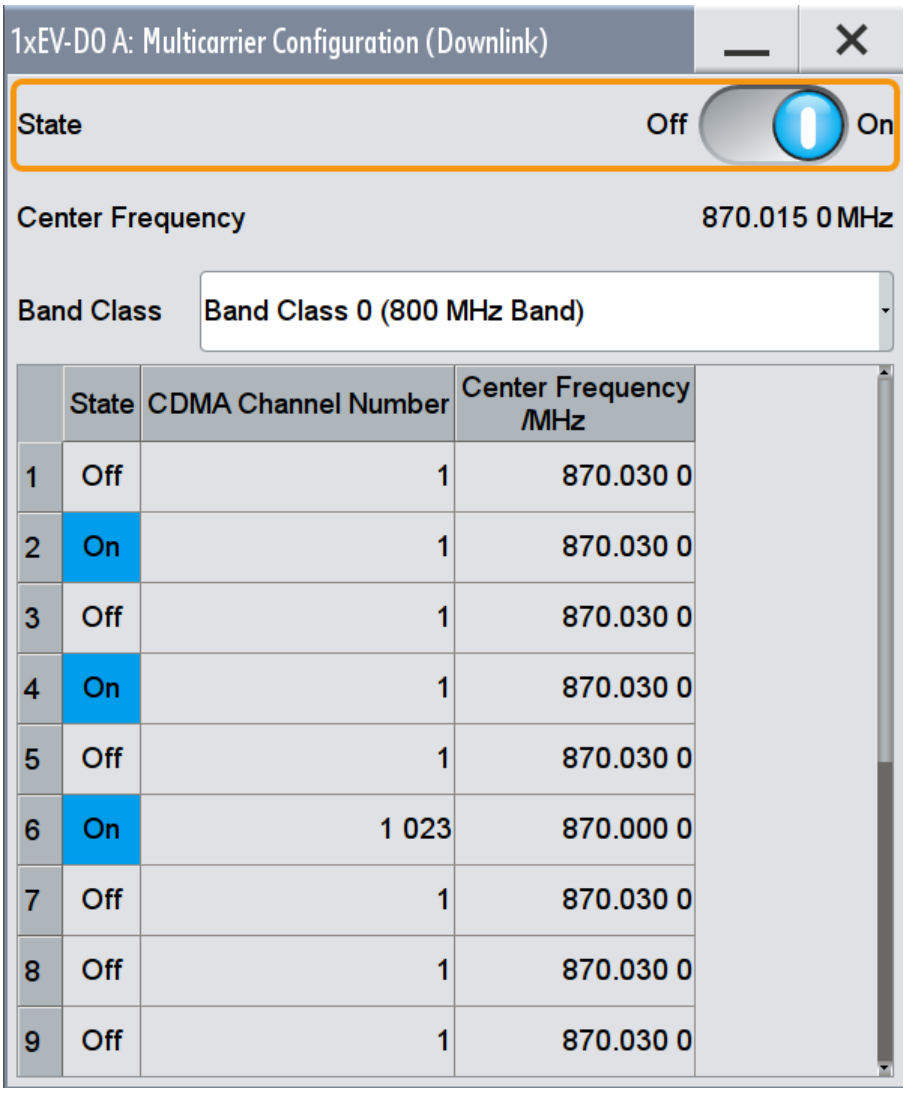

	State	CDMA Channel Number	Center Frequency /MHz
1	Off	1	870.030 0
2	On	1	870.030 0
3	Off	1	870.030 0
4	On	1	870.030 0
5	Off	1	870.030 0
6	On	1 023	870.000 0
7	Off	1	870.030 0
8	Off	1	870.030 0
9	Off	1	870.030 0

State
Enables or disables multi carrier operation.

Remote command:
[:SOURce<hw>]:BB:EVDO:UP:MC:CARRier<ch>:STATe on page 83
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRier<ch>:STATe on page 83

Center Frequency (band)
Shows the center frequency of the band resulting from the set active carriers.

Remote command:
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CFRequency? on page 83
[:SOURce<hw>]:BB:EVDO:UP:MC:CFRequency? on page 83

Band Class
Selects the band class for operation, as defined in 3GPP2 C.S0057-E.

Remote command:
[:SOURce<hw>]:BB:EVDO:UP:MC:BCLass on page 82
[:SOURce<hw>]:BB:EVDO:DOWN:MC:BCLass on page 82

State
Switches the selected carrier on or off.

Remote command:
[:SOURce<hw>]:BB:EVDO:UP:MC:CARRier<ch>:STATe on page 83
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRier<ch>:STATe on page 83

CDMA Channel Number
Selects the carrier's channel number. The entered channel numbers are directly translated into center frequencies, according to the used band class. In some cases not all channel numbers in the range indicated by the tool tip can be used. In case a non-existing channel is input, the next available channel will be used.

Remote command:
[:SOURce<hw>]:BB:EVDO:UP:MC:CARRier<ch>:CHANnel on page 82
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRier<ch>:CHANnel on page 82

Center Frequency
Sets the the center frequency of the carrier. In some cases not all center frequencies in the range indicated by the tool tip are defined by the selected band class. In case a non-existing frequency is input, the next available frequency will be used.

Remote command:
[:SOURce<hw>]:BB:EVDO:UP:MC:CARRier<ch>:FREQuency on page 83
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRier<ch>:FREQuency on page 83

4.8 Access Network Settings

The "Access Network Settings" dialog is available at Downlink only and allows configuration of physical layer subtype, the pilot and control channels and reverse activity bit.

"Access Network Settings" consists of three main sections, "Pilot Channel", "Control Channel" and "Reverse Activity Bit (MAC)".

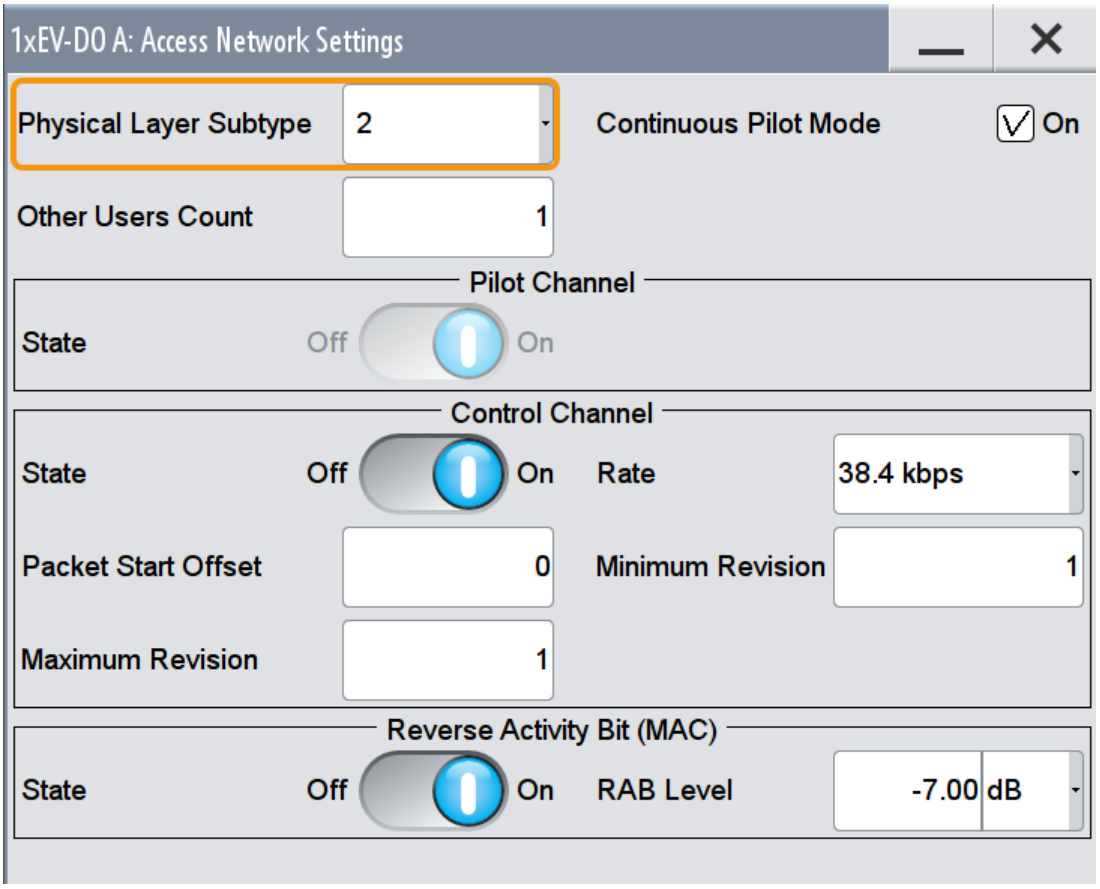

Physical Layer Subtype (Access Network Settings)
Defines the physical layer subtype for the forward link direction.

Physical layer subtype 0 is the original (release "0").

Physical layer subtype 1 and 2 are the revision "A" physical layers.

Physical layer subtype 3 is the revision "B" physical layer.

Remote command:
`[:SOURce<hw>]:BB:EVDO:ANETwork:SUBType` on page 81

Continuous Pilot Mode
Enables or disables a special mode within the 1xEV-DO generator. When the state is off, normal operation is selected. When the state is on, a special mode is selected.

In this special mode, the 1xEV-DO generator generates a pilot signal only.

Note: During the special mode, all other parameters do not affect the signal output.

Remote command:
`[:SOURce<hw>]:BB:EVDO:ANETwork:CPMode` on page 79

State (Pilot Channel)
Displays the state of the pilot channel. Pilot channel is transmitted by sector on each active forward channel. It is present always and transmitted at the full sector power.

Remote command:
`[:SOURce<hw>]:BB:EVDO:ANETwork:PCHannel:STATe?` on page 80

State (Control Channel)
Enables or disables the control channel messages.

The only control channel message that is ever sent is the Sync Message.When this is enabled, the control channel messages will have the highest priority for placement within the slots. The Sync Message will be updated constantly, even when the control channel is not enabled.

Remote command:
`[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:STATe` on page 79

Rate (Control Channel)
Sets the rate that the control channel messages are transmitted at.

Remote command:
`[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:RATE` on page 78

Packet Start Offset
Sets the offset (in slots) from the start of control channel cycle to the start of the synchronous message capsule that contains the Sync Message.

Seechapter 3.1, "Traffic Scheduling Process", on page 11 for an explanation on how the control and traffic channels are transmitted over time.

Remote command:
`[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:PSOFfset` on page 78

Minimum Revision
Sets the value of the minimum revision field within the control channel message.

Remote command:
`[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:REVision:MINimum`
on page 79

Maximum Revision
Sets the value of the maximum revision field within the control channel message.

Remote command:
`[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:REVision:MAXimum`
on page 78

State (Reverse Activity Bit)
Activates or deactivates the reverse activity bit (RAB).

Remote command:
`[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:STATe` on page 81

RAB Level
Sets the power within the MAC block for the Reverse Activity Channel.

Remote command:
`[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:LEVel` on page 80

RAB Length
for physical layer subtype 0&1 only

Sets the duration (in slots) of a Reverse Activity bit.

Remote command:
`[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:LENGth` on page 80

RAB Offset
for physical layer subtype 0&1 only

Sets the starting time offset of the Reverse Activity (RA) bit in slots. The command is specified in Reverse Activity Length/8 units.

The RA bit starts when the following equation is satisfied:

- System Time mod RABlenght = RABOffset,
  where System Time is expressed in slots.

Remote command:
`[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:OFFSet` on page 81

RAB MAC Index
For physical layer subtype 3 only sets the RAB MAC Index.

Remote command:
`[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:MAC:INDex` on page 81

Other Users Count
Sets the number of additional users (beyond the four defined users) that appear in the MAC Channel.

These additional users will never have a packet addressed to them, but are used to fill in the MAC channel code domain.

These Other Users are used to evenly distribute the excess power (beyond what is required by the "User 1..4" and RAB channels).

Remote command:
`[:SOURce<hw>]:BB:EVDO:ANETwork:OUCount` on page 79

4.9 Access Terminal Settings

1. To access this dialog, select "Baseband > 1xEV-DO > Link Direction > Uplink"
2. Select "Access Terminals".

   Four terminals are available.

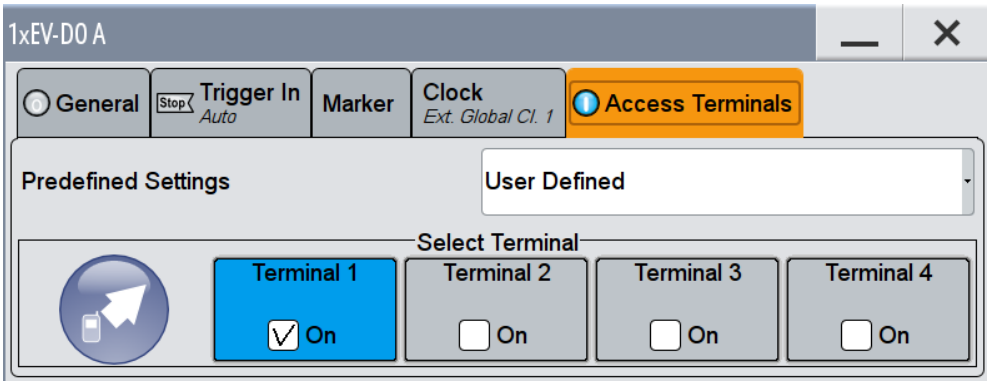

3. To enable a subset of predefined settings for faster configuration, select "Predefined Settings".
4. To activate a terminal, set its state to "On", e.g. "Terminal 1 > On".
5. To access the settings of a terminal, select the corresponding field, e.g. "Terminal 1".

   The corresponding "Configure Access Terminal 1 .. 4" dialog opens. The access terminaö number is indicated in the panel headline.

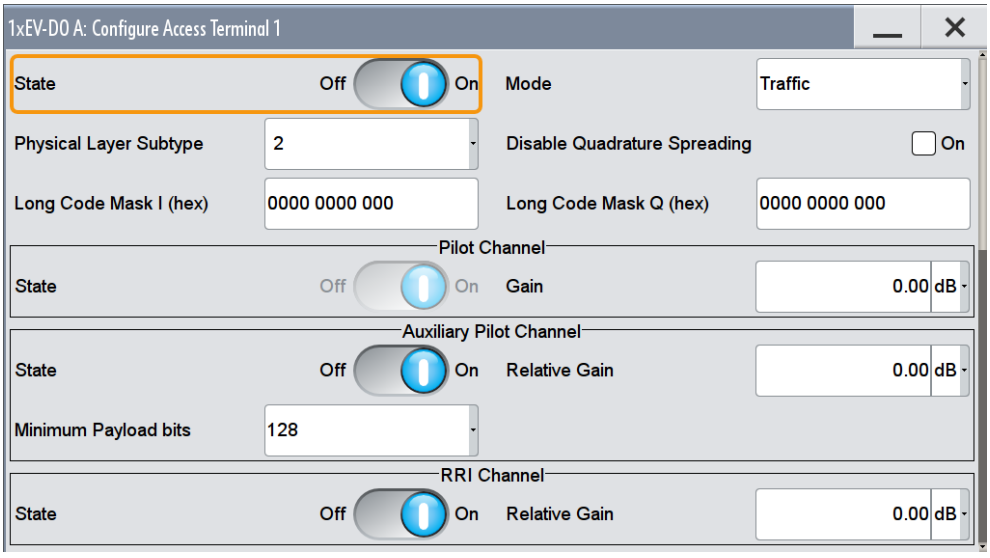

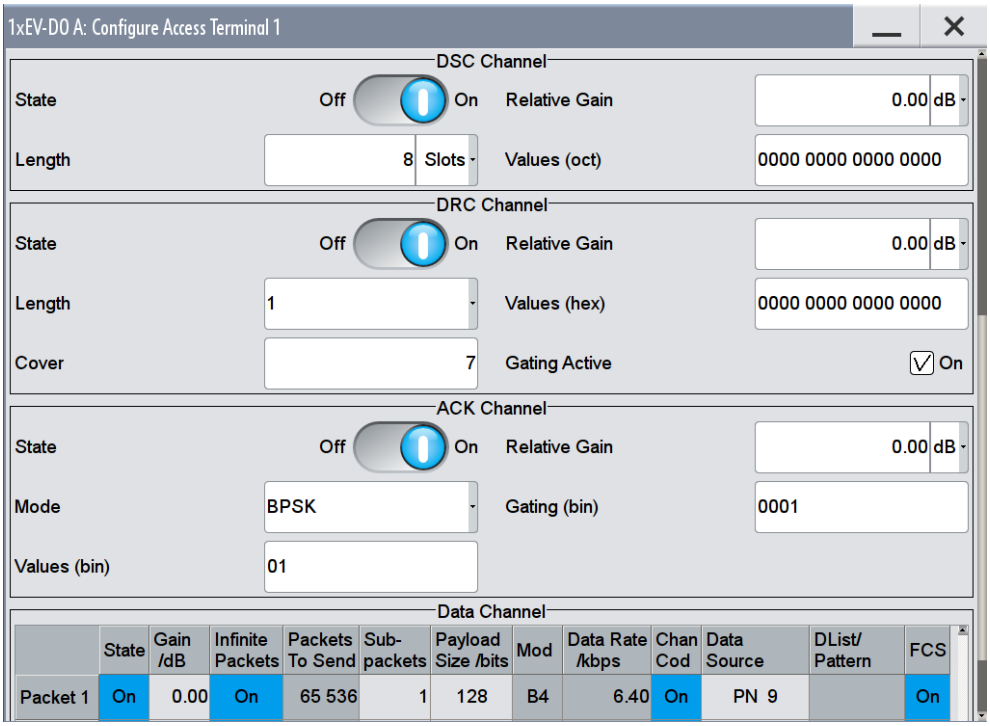

The dialog comprises the settings of the access terminal mode, of the data channel and configuration of the different channels, such as Pilot Channel, Auxiliary Pilot Channel, Reverse Rate Indicator (RRI) Channel, Data Source Control (DSC) Channel, Data Rate Control (DRC) Channel and ACK channel.

The available channels depend on the selected "Physical Layer Subtype" and the selected "Access Terminal Mode", see table 4-4.

Table 4-4: Overview on available channels, depending on physical layer subtype and access terminal mode

Physical Layer Subtype	Access Terminal Mode	Pilot Channel	Auxiliary Pilot Channel	RRI Channel	DSC Channel	DRC Channel	ACK Channel	Data Channel
0&1	Traffic	X	-	X	-	X	X	Packet 1
	Access	X	-	-	-	-	-	Packet 1
2	Traffic	X	X	X	X	X	X	Packet 1..3
	Access	X	-	-	-	-	-	Packet 1

Predefined Settings
Uplink only

Enables selection of UL predefined settings for Terminal 1 for faster configuration.

The predefined settings are made according to 3GPP2 C.S0032-A to allow easy receiver testing.

Remote command:
`[:SOURce<hw>]:BB:EVDO:PREDefined` on page 94

State (Access Terminal)
Enables or disables the selected access terminal.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:STATe` on page 113

Mode (Access Terminal)
Sets the mode (Traffic or Access) of the selected access terminal.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:MODE` on page 111

Physical Layer Subtype (Access Terminal)
Selects the physical layer subtype for the selected access terminal.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:SUBType` on page 114

Disable Quad. Spreading
Disables the quadrature spreading (complex multiply) with PN sequences and long code.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DQSPreading` on page 108

Long Code Mask I (hex)
Sets the long code mask of the I channel.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:IMASk` on page 111

Long Code Mask Q (hex)
Sets the long code mask of the Q channel.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:QMASk` on page 113

Preamble Length
(enabled for access terminal working in access mode only)

Specifies the length of the preamble in frames (16 slots each) of the access probe (see figure below).

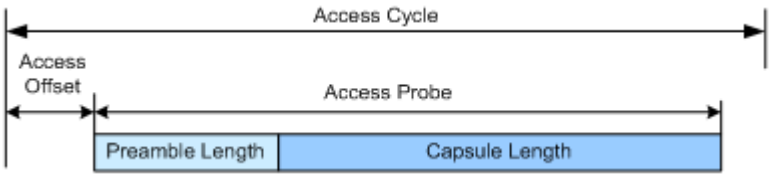

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:PLENgth` on page 112

Access Cycle Duration
(enabled for access terminal working in access mode only)

Sets the access cycle duration in slots. Access probes are repeated with a period of access cycle duration slots.

Remote command:
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACYCle:DURation on page 97

Access Cycle Offset
(enabled for access terminal working in access mode only)

The access channel transmission starts with this number of slots relative to the beginning of each access cycle duration.

Remote command:
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACYCle:OFFSet on page 98

State (Pilot Channel)
Displays the state of the pilot channel.

Note: The pilot channel is always switched on.

Remote command:
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:PCHannel:STATe? on page 112

Gain (Pilot Channel)
Sets the gain of the pilot channel.

Gains of other channels are relative to the pilot channel power. This setting is used to distinguish the power between access terminals, when more than one access terminal is active.

Remote command:
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:PCHannel:GAIN on page 112

State (Auxiliary Pilot Channel)
(enabled for Physical Layer subtype 2 and an access terminal working in traffic mode only)

Enables or disables the state of the auxiliary pilot channel.

Remote command:
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:APCHannel:STATe on page 99

Relative Gain (Auxiliary Pilot Channel)
Sets the gain of the auxiliary pilot channel relative to the data channel power.

Note: All other channel gains are specified relative to the pilot channel power, but the auxiliary pilot gain is specified relative to the data channel power. This parameter is only enabled for Physical Layer subtype 2 and for an access terminal working in traffic mode.

Remote command:
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:APCHannel:GAIN on page 98

Minimum Payload (Auxiliary Pilot Channel)
(enabled for Physical Layer subtype 2 and an access terminal working in traffic mode only)

Sets the minimum payload size in bits of the data channel that activates the transmission of the auxiliary pilot channel.

Remote command:
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:APCHannel:PAYLoad:MINimum on page 98

State (RRI Channel)
(enabled for access terminal working in traffic mode only)

Enables or disables the state of the reverse rate indicator (RRI) channel.

Remote command:
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:RRIChannel:STATe on page 113

Relative Gain (RRI Channel)
(enabled for access terminal working in traffic mode only)

Sets the gain of the reverse rate indicator (RRI) channel relative to the pilot channel power.

Remote command:
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:RRIChannel:GAIN on page 113

State (DSC Channel)
(enabled for Physical Layer subtype 2 and an access terminal working in traffic mode only)

Enables or disables the state of the data source control (DSC) channel.

Remote command:
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:STATe on page 110

Relative Gain (DSC Channel)
(enabled for Physical Layer subtype 2 and an access terminal working in traffic mode only)

Sets the gain of the data source control (DSC) channel relative to the pilot channel power.

Remote command:
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:GAIN on page 110

Length (DSC Channel)
(enabled for Physical Layer subtype 2 and an access terminal working in traffic mode only)

Specifies the transmission duration of the data source control (DSC) channel in slots.

Remote command:
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:LENGth on page 110

Values (DSC Channel)
(enabled for Physical Layer subtype 2 and an access terminal working in traffic mode only)

Specifies the pattern transmitted on the data source control (DSC) Channel.

The sequence starts at frame 0 and slot 0 and is repeated with the length of the pattern. Each specified value is transmitted for DSC length slots.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:VALues` on page 111

State (DRC Channel)
(enabled for access terminal working in traffic mode only)

Enables or disables the state of the data rate control (DRC) channel.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:STATe` on page 109

Relative Gain (DRC Channel)
(enabled for access terminal working in traffic mode only)

Sets the gain of the data rate control (DRC) channel relative to the pilot channel power.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:GAIN` on page 108

Length (DRC Channel)
(enabled for access terminal working in traffic mode only)

Specifies the transmission duration of the data rate control (DRC) channel in slots.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:LENGth` on page 109

Values (DRC Channel)
(enabled for access terminal working in traffic mode only)

Specifies the pattern transmitted on the data rate control (DRC) channel.

The sequence starts at frame 0 and slot 0 and is repeated with the length of the pattern. Each specified value is used for DRC length slots.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:VALues` on page 109

Cover (DRC Channel)
(enabled for access terminal working in traffic mode only)

Selects the data rate control (DRC) channel Walsh cover.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:COVer` on page 108

Gating Active (DRC Channel)
(enabled for access terminal working in traffic mode only)

Activates or deactivates the data rate control (DRC) Channel gating.

With deactivated gating, each DRC value is repeated for DRC length slots.

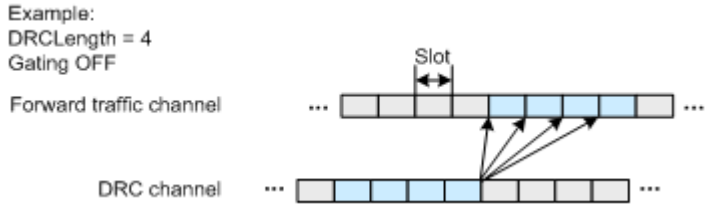

If gating is active, each value of the DRC channel is transmitted for one slot followed by DRCLenght-1 empty slots.

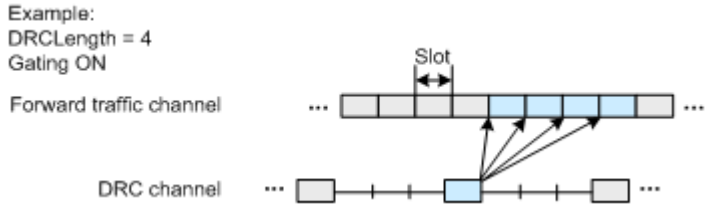

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:GATing[:STATe]` on page 109

State (ACK Channel)
(enabled for access terminal working in traffic mode only)

Enables or disables the ACK channel.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:STATe` on page 97

Relative Gain (ACK Channel)
(enabled for access terminal working in traffic mode only)

Sets the gain of the ACK channel relative to the pilot channel power.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:GAIN` on page 95

Mode (ACK Channel)
(enabled for access terminal working in traffic mode only)

Specifies the modulation mode of the ACK channel.

"BPSK" Sets the modulation to BPSK (Binary Phase Shift Keying).
With BPSK modulation, a 0 (ACK) is mapped to +1 and a 1 (NAK) to -1 respectively.

"OOK" Sets the modulation to OOK (On-Off Keying).With OOK modulation, a 0 (ACK) is mapped to ON and a 1 (NAK) to OFF.

Note: OKK modulation is only enabled for physical layer subtype 2.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:MODE` on page 96

Gating (ACK Channel)
(enabled for access terminal working in traffic mode only)

Sets the active and inactive slots of the ACK channel.

The sequence starts at frame 0 and slot 0 and is repeated with the length of the pattern.

A 0 gates the ACK channel off for the corresponding slot, a 1 activates the channel.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:GATing` on page 96

Values (ACK Channel)
(enabled for access terminal working in traffic mode only)

Specifies the data pattern transmitted on the ACK Channel.

The sequence starts at frame 0 and slot 0 and is repeated with the length of the pattern. A 0 specifies an ACK, a 1 specifies a NAK. This pattern is only read for slots that are gated on.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:VALues` on page 97

State (Packet)
(enabled for access terminal working in traffic mode only)

Enables or disables the state of the packet(s).

There are three configurable packets (Packet 1… 3) for physical layer subtype 2. When more then one packet is active, packet 1 is sent on the first subframe (first 4 slots), packets 2 and 3 are sent respectively on the second and the third subframe (see figure below).

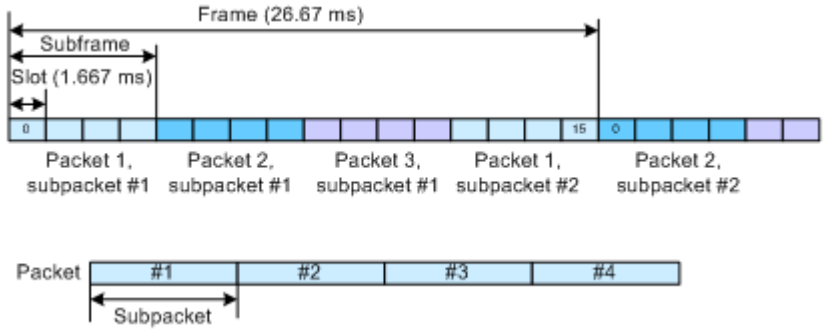

When only one packet is active and Number of Sub-packets is set to 1, no interleaving will be performed between the packets. In this case, the data channel is active continuously (see figure below).

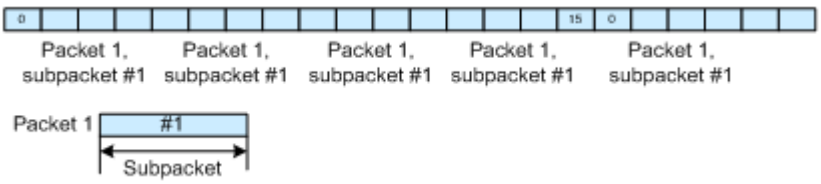

When only one packet is active but the number of subpackets is larger than one, subframe interleaving has to be performed. In this case 2 subframes will be left empty inbetween every two subpackets (see figure below).

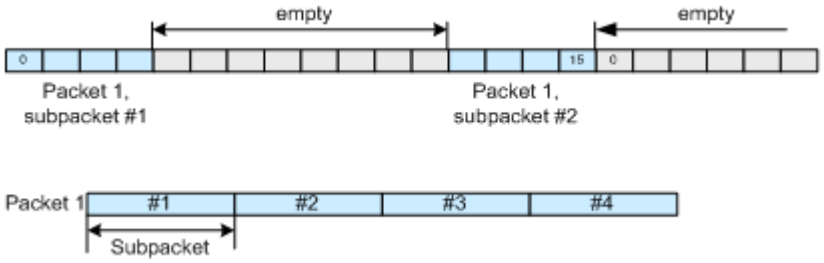

Only one configurable packet is available for physical layer subtype 0&1, the data channel is continuously active for the number of packets to send.

Remote command:

`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:STATe`
on page 107

Relative Gain (Packet)
(enabled for access terminal working in traffic mode only)

Sets the gain in dB of the selected packet relative to the pilot channel power.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Remote command:

`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:GAIN`
on page 105

Infinite Packets (Packet)
(enabled for access terminal working in traffic mode only)

Enables or disables sending an unlimited number of packets.

If "Infinite Packets" is disabled, the number of packets to send can be specified with the parameter "Number of Packets to Send".

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Remote command:

`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:INFinite`
on page 105

Number of Packets to Send (Packet)
(enabled for access terminal working in traffic mode only)

Sets the number of packets to be sent.

The number of packets to send depends on whether the parameter "Infinite Packets "is enabled or disabled. If "Infinite Packets" is enabled, there is no limit to the number of packets sent.

If "Infinite Packets" is disabled, the number of packets can be specified. The data channel will be switched off after the specified "Number of Packets" have been sent.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:COUNt`
on page 102

Number of Sub-packets (Packet)
(enabled for physical layer subtype 2 and an access terminal working in traffic mode only)

Sets the number of sub-packets to be sent.

Example:

If number of sub-packets is 4, then subpacket 0, 1, 2 and 3 of a packet will be sent in a subframe each (with 2 subframes interleaving between) before the next packet is started. This is to simulate a situation where 3 times NAK has been received from the base station with an ACK after the 4th subpacket.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:SUBPackets[:COUNt]`
on page 107

Payload Size (Packet)
(enabled for access terminal working in traffic mode only)

Sets the payload size in bits for the selected packet.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:PSIZe`
on page 106

Modulation (Packet)
(enabled for physical layer subtype 2 and an access terminal working in traffic mode only)

Displays the modulation type per packet.

The modulation type is set automatically according to the selected payload size. The value is read-only.

Remote-control command: SOUR:BB:EVDO:TERM2:DCH:PACK3:MOD?

"B4"	The modulation type is set to BPSK modulation with 4-ary Walsh cover.
"Q4"	The modulation type is set to QPSK modulation with 4-ary Walsh cover.
"Q2"	The modulation type is set to QPSK modulation with 2-ary Walsh cover.
"Q4Q2"	Sum of Q4 and Q2 modulated symbols.
"E4E2"	Sum of E4 (8-PSK modulated with 4-ary Walsh cover) and E2 (8-PSK modulated with 2-ary Walsh cover) modulated symbols.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:MODulation?`
on page 106

Data Rate (Packet)
(enabled for access terminal working in traffic mode only)

Displays the resulting data rate for the selected Packet.

This is the effective data rate achieved for the specific packet. Sum up the data rates of all 3 packets to obtain the total effective data rate for the uplink data channel.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DRATe?`
on page 104

Channel Coding (Packet)
(enabled for access terminal working in traffic mode only)

Activates or deactivates channel coding, including scrambling, turbo encoding and channel interleaving.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:CCODing`
on page 101

Data Source (Packet)
(enabled for access terminal working in traffic mode only)

Selects the data source.

The number of bits read from the data source for each packet depends on the payload size, channel coding state and FCS state. The following table gives an overview on the number of bits read.

	FCS ON	**FCS OFF**
Channel Coding ON	PayloadSize - FCSSize - 6	PayloadSize - 6
Channel Coding OFF	(PayloadSize/CodeRate) - FCSSize	(PayloadSize/CodeRate)

FCSSize and code rate depend on the physical layer subtype (see table bellow).

	Physical layer subtype 0&1	**Physical layer subtype 2**
FCSSize	16	24
Code rate	1/4 or 1/2	1/5 or 1/3

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

"ZERO, ONE" 0 data or 1 data is internally generated.

"PNxx" PRBS data in accordance with the IUT-T with period lengths between 29-1 and 223-1 are internally generated.

"PATTern" A user-definable bit pattern with a maximum length of 64 bits is internally generated.
The bit pattern is defined in the Pattern input box.

"DLISt " Data lists will be used. Data lists can be generated internally in the data editor or externally.
Data lists are selected in the "Select Data List" field.

Remote command:
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA on page 102

DList/ Pattern (Packet)
(enabled for access terminal working in traffic mode only)

Displays selected data list or pattern.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Remote command:
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA:DSELection on page 103
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA:PATTern on page 103

FCS (Packet)
(enabled for access terminal working in traffic mode only)

Enables or disables appending a standard Frame Check Sequence (FCS) to the MAC layer packet.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Remote command:
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:FCS[:STATe] on page 104

State (Data Channel)
(enabled for access terminal working in access mode only)

Enables or disables the state of the Data Channel.

Remote command:
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:STATe on page 107

Relative Gain (Data Channel)
(enabled for access terminal working in access mode only)

Sets the gain in dB of the data channel relative to the pilot channel power.

Remote command:
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:GAIN on page 101

Capsule Length (Data Channel)
(enabled for access terminal working in access mode only)

Sets the number of frames (16 slots each) to be transmitted after the preamble. Each frame contains one data packet.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:CLENgth` on page 99

Data Rate (Data Channel)
(enabled for access terminal working in access mode only)

Selects the data rate for the data channel.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DRATe` on page 100

Data Source (Data Channel)
(enabled for access terminal working in access mode only)

Selects the data source.

"ZERO, ONE"	0 data or 1 data is internally generated.
"PNxx"	PRBS data in accordance with the IUT-T with period lengths between 29-1 and 223-1 are internally generated.
"PATTern"	A user-definable bit pattern with a maximum length of 64 bits is internally generated. The bit pattern is defined in the Pattern input box.
"DLISt"	Data lists will be used. Data lists can be generated internally in the data editor or externally. Data lists are selected in the "Select Data List" field.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA` on page 99
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA:PATTern` on page 100

Append FCS (Data Channel)
(enabled for access terminal working in access mode only)

Enables or disables appending a standard Frame Check Sequence (FCS) to the MAC layer packet.

Remote command:
`[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:FCS[:STATe]` on page 101

4.10 Filter / Clipping / ARB Settings

► To access this dialog, select "General > Filter/Clipping/ARB Settings".

The dialog comprises the settings, necessary to configure the baseband filter, sample rate variation and clipping.

Generation of baseband signals according to 1xEV-DO standard by inverting the Q-part of the signal is enabled in the I/Q Settings section.

4.10.1 Filter Settings

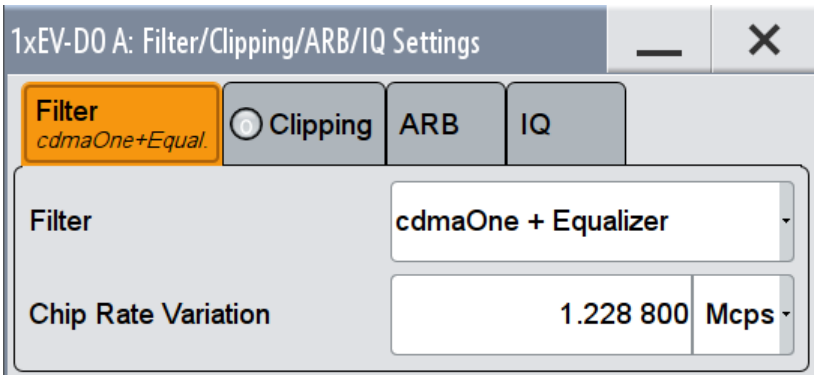

Provides are the follwoing settings for configuring the baseband filter:

Filter
Selects the baseband filter.

Remote command:
[:SOURce<hw>]:BB:EVDO:FILTer:TYPE on page 68

Roll Off Factor or BxT
Sets the filter parameter.

The filter parameter offered ("Roll Off Factor" or "BxT") depends on the currently selected filter type. This parameter is preset to the default for each of the predefined filters.

Remote command:
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:APCO25 on page 66
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:COSine on page 66
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:GAUSs on page 67
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:PGAuss on page 68
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:RCOSine on page 68
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:SPHase on page 68

Cut Off Frequency Factor
Sets the value for the cut off frequency factor. The cut off frequency of the filter can be adjusted to reach spectrum mask requirements.

Remote command:
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:LPASs on page 67
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:LPASSEVM on page 67

Chip Rate Variation
Enters the chip rate.

The chip rate entry changes the output clock and the modulation bandwidth.

Remote command:
[:SOURce<hw>]:BB:EVDO:CRATe:VARiation on page 66

4.10.2 Clipping Settings

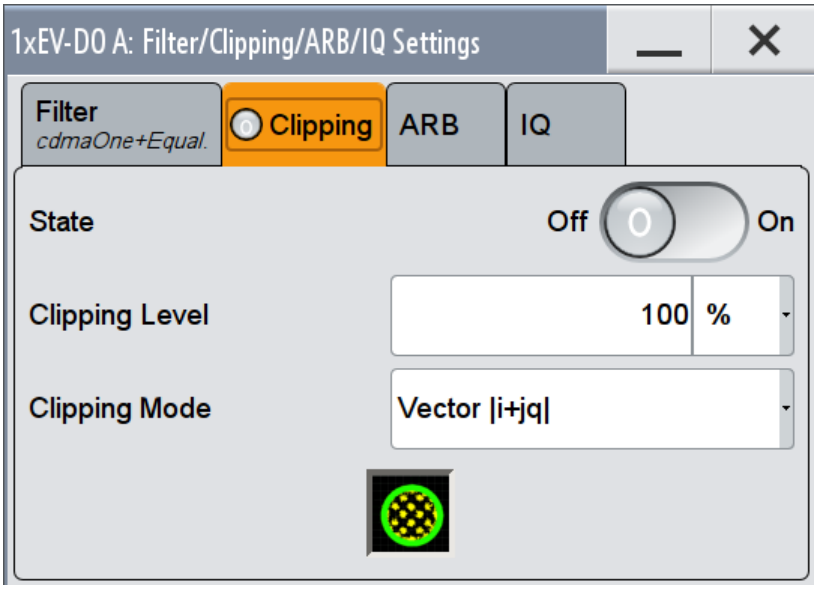

Provides are the follwoing settings:

Clipping State
(For reverse link mode only)

Switches baseband clipping on and off.

Baseband clipping is a very simple and effective way of reducing the crest factor of the signal. Since clipping is done prior to filtering, the procedure does not influence the spectrum. The EVM however increases.

1xEV-DO signals may have very high crest factors particularly with many channels and long sequences.

Remote command:
[:SOURce<hw>]:BB:EVDO:CLIPping:STATe on page 65

Clipping Level
(For reverse link mode only)

Sets the limit for clipping.

This value indicates at what point the signal is clipped. It is specified as a percentage, relative to the highest level. 100% indicates that clipping does not take place.

Remote command:
[:SOURce<hw>]:BB:EVDO:CLIPping:LEVel on page 65

Clipping Mode
(For reverse link mode only)

Selects the clipping method. A graphic illustration of the way in which these two methods work is given in the dialog.

- "Vector | i + q |"
  The limit is related to the amplitude | i + q |. The I and Q components are mapped together, the angle is retained.
- "Scalar | i | + | q |"
  The limit is related to the absolute maximum of all the I and Q values | i | + | q | . The I and Q components are mapped separately, the angle changes.

Remote command:
`[:SOURce<hw>]:BB:EVDO:CLIPping:MODE` on page 65

4.10.3 ARB Settings

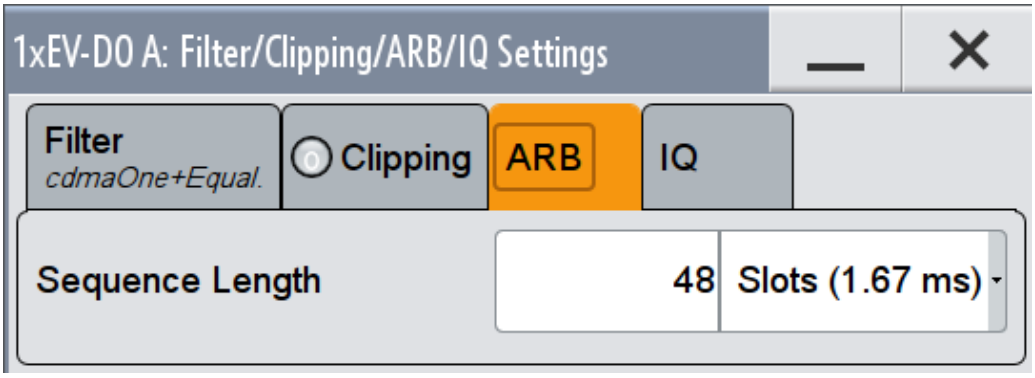

Provides are the follwoing settings:

Sequence Length ARB
(For reverse link mode only)

Changes the sequence length of the arbitrary waveform component of the 1xEV-DO signal. This component is calculated in advance and output in the arbitrary waveform generator. It is added to the realtime signal components.

The number of chips is determined from this sequence length. One slot of 1.67ms duration equals 2048 chips.

Remote command:
`[:SOURce<hw>]:BB:EVDO:SLENgth` on page 63

4.10.4 I/Q Setting

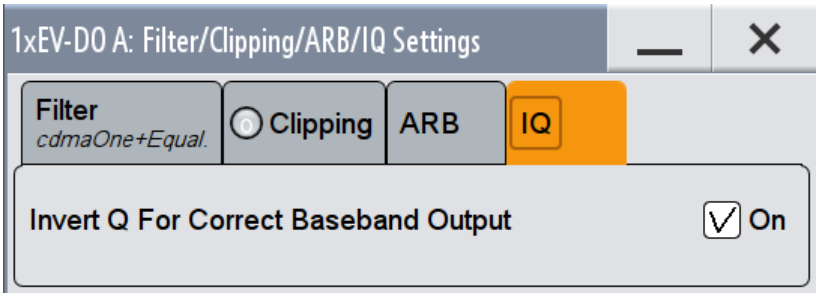

Provides are the follwoing settings:

Invert Q for Correct Baseband Output
Inverts Q-part of the baseband signal.

"ON" The signal on the baseband outputs meets the 1xEV-DO standard. In order to generate an RF signal that conforms to the standard, the I/Q Swap function in the I/Q Modulator menu must be enabled (On).

"OFF" The signal on the baseband outputs does not meet the 1xEV-DO standard. It can however be mixed with other signals from the second baseband without any problem. In order to generate a standards compliant RF signal, the I/Q Swap function in the I/Q Modulator menu must be disabled (Off).

Remote command:
`[:SOURce<hw>]:BB:EVDO:IQSWap:STATe` on page 69

5 Remote-Control Commands

The following commands are required to perform signal generation with the 1xEV-DO options in a remote environment. We assume that the R&S SMW has already been set up for remote operation in a network as described in the R&S SMW documentation. A knowlage about the remote control operation and the SCPI command syntax are assumed.

Common Suffixes

The following common suffixes are used in remote commands:

Suffix	Value range	Description
SOURce<ch>	[1] .. 4	available baseband signals
OUTPut<ch>	[1] .. 3	available markers
CARRIER<Ch>	0 .. 21	band class
USER<ST>	1 .. 4	user
TERMinal<ST>	1 .. 4	terminal

Basic tasks that are also performed in the base unit in the same way are not described here.

For a description of such tasks, see the R&S SMW User Manual.

In particular, this includes:

- Managing settings and data lists, i.e. storing and loading settings, creating and accessing data lists, etc.
- Information on regular trigger, marker and clock signals as well as filter settings, if appropriate.
- General instrument configuration, e.g. checking the system configuration, configuring networks and remote operation
- Using the common status registers

The following commands specific to the 1xEV-DO are described here:

- Programming Examples....59
- General Commands....60
- Filter/Clipping/ARB Settings....64
- Trigger Settings....69
- Marker Settings....74
- Clock Settings....76
- Access Network Settings....77
- Multi Carrier Configuration....82
- Configure Traffic User....84
- Configure Access Terminal....93

5.1 Programming Examples

Example: Performing general tasks

This example shows how to enable the option with predefined settings as basis for further customization (e.g. defining the transmission direction, etc.); results and configuration are stored with the save/recall function.

```
// ********************************************************************
// Reset instrument first
// ********************************************************************
*RST; *CLS

SOURce1:BB:EVDO:PRESet
SOURce1:BB:EVDO:STATe ON
SOURce1:BB:EVDO:SETTing:STORe "/var/user/temp/1xEVDO_def"

// ********************************************************************
// Recall settings
// ********************************************************************
MMEM:CDIR "/var/user/temp"
SOURce1:BB:EVDO:SETTing:CATalog?
// 1xEVDO_def,1xEVDO_dl,1xEVDO_test
SOURce1:BB:EVDO:SETTing:DELete "1xEVDO_test"
SOURce1:BB:EVDO:SETTing:LOAD "1xEVDO_dl"

// ********************************************************************
// Reset instrument first
// ********************************************************************
*RST; *CLS

SOURce1:BB:EVDO:PRESet
SOURce1:BB:EVDO:STATe ON
// ********************************************************************
// Save and Recall settings
// ********************************************************************

SOURce1:BB:EVDO:SETTing:STORe "/var/user/temp/1xEVDO_def"
MMEM:CDIR "/var/user/temp/"

SOURce1:BB:EVDO:SETTing:CATalog?
// 1xEVDO_def,1xEVDO_dl,1xEVDO_test
SOURce1:BB:EVDO:SETTing:DELete "1xEVDO_test"
SOURce1:BB:EVDO:SETTing:LOAD "1xEVDO_dl"

// ********************************************************************
// Change the data transmission direction
// queries PN offset, sets the system time
// queries version and ARB sequence length
// generates and stores an waveform file in the current directory
// ********************************************************************
```

```
SOURce1:BB:EVDO:LINK?
// DOWN
SOURce1:BB:EVDO:LINK UP
SOURce1:BB:EVDO:PNOFfset?
// 0
SOURce1:BB:EVDO:STIMe 32
SOURce1:BB:EVDO:SLENgth?
// 48
SOURce1:BB:EVDO:VERSion?
// Release B
SOURce1:BB:EVDO:WAVeform:CREate "wv1xEVDO_ul"
```

Example: Adjusting clock, marker and trigger settings

The following example lists the provided commands

```
// *****************************************************************
// Clock settings
// *****************************************************************
SOURce1:BB:EVDO:CLOCk:SOURce INTernal

// *****************************************************************
// Configure and enable standard marker signal
// *****************************************************************
SOURce1:BB:EVDO:TRIGger:OUTPut1:MODE RATio
SOURce1:BB:EVDO:TRIGger:OUTPut1:ONTime 40
SOURce1:BB:EVDO:TRIGger:OUTPut1:OFFTime 20

// *****************************************************************
// Configure and enable signal generation
// *****************************************************************
SOURce1:BB:EVDO:TRIGger:SOURce INTernal
SOURce1:BB:EVDO:TRIGger:SEQuence ARETrigger
SOURce1:BB:EVDO:STAT ON
SOURce1:BB:EVDO:TRIGger:EXECute
SOURce1:BB:EVDO:TRIGger:ARM:EXECute
SOURce1:BB:EVDO:TRIGger:RMODe?
// Stopped
SOURce1:BB:EVDO:TRIGger:EXECute
SOURce1:BB:EVDO:TRIGger:RMODe?
// Run
```

5.2 General Commands

This section contains commands for the primary and general settings of the 1XEV-DO standard. These settings concern activation and deactivation of the standard, setting the transmission direction, defining the chip rate and the sequence length, as well as the preset and power adjust setting.

[:SOURce<hw>]:BB:EVDO:LINK....61
[:SOURce<hw>]:BB:EVDO:PNOFfset....61
[:SOURce<hw>]:BB:EVDO:PRESet....61
[:SOURce<hw>]:BB:EVDO:SETTing:CATalog?....62
[:SOURce<hw>]:BB:EVDO:SETTing:DELete....62
[:SOURce<hw>]:BB:EVDO:SETTing:LOAD....62
[:SOURce<hw>]:BB:EVDO:SETTing:STORe....62
[:SOURce<hw>]:BB:EVDO:SETTing:STORe:FAST....63
[:SOURce<hw>]:BB:EVDO:SLENgth....63
[:SOURce<hw>]:BB:EVDO:STATe....63
[:SOURce<hw>]:BB:EVDO:STIMe....63
[:SOURce<hw>]:BB:EVDO:VERSion?....64
[:SOURce<hw>]:BB:EVDO:WAVeform:CREate....64

[:SOURce<hw>]:BB:EVDO:LINK <Link>

Defines the transmission direction.

Parameters:

<Link> FORWard/DOWN | REVerse/UP
*RST: DOWN

Example: see example "Performing general tasks" on page 59

Manual operation: See "Link Direction" on page 14

[:SOURce<hw>]:BB:EVDO:PNOFfset <PnOffset>

Sets the PN Offset of the 1xEV-DO signal.

Parameters:

<PnOffset> integer
Range: 0 to 511
*RST: 0

Example: see example "Performing general tasks" on page 59

Manual operation: See "PN Offset" on page 14

[:SOURce<hw>]:BB:EVDO:PRESet

Call the default settings for the 1xEV-DO standard. The settings correspond to the `*RST` values specified for the commands.

Example: see example "Performing general tasks" on page 59

Usage: Event

Manual operation: See "Set to Default" on page 12

[:SOURce<hw>]:BB:EVDO:SETTing:CATalog?

Queries the files with 1xEV-DO settings (file extension `*.1xevdo`) in the default or the specified directory.

Return values:

<Catalog> "<filename1>,<filename2>,..."
Returns a string of file names separated by commas.

Example: see example "Performing general tasks" on page 59

Usage: Query only

Manual operation: See "Save/Recall" on page 13

[:SOURce<hw>]:BB:EVDO:SETTing:DELete <Filename>

Deletes the selected file from the default or specified directory. Deleted are files with the file extension `*.1xevdo`.

Setting parameters:

<Filename> string

Example: see example "Performing general tasks" on page 59

Usage: Setting only

Manual operation: See "Save/Recall" on page 13

[:SOURce<hw>]:BB:EVDO:SETTing:LOAD <Filename>

Loads the selected file from the default or the sepcified directory. Load are files with extension `*.1xevdo`.

Setting parameters:

<Filename> string

Example: see example "Performing general tasks" on page 59

Usage: Setting only

Manual operation: See "Save/Recall" on page 13

[:SOURce<hw>]:BB:EVDO:SETTing:STORe <Filename>

Stores the current settings into the selected file; the file extension `*.1xevdo` is assined automatically.

Setting parameters:

<Filename> string

Example: see example "Performing general tasks" on page 59

Usage: Setting only

Manual operation: See "Save/Recall" on page 13

[:SOURce<hw>]:BB:EVDO:SETTing:STORe:FAST <Fast>

Determines whether the instrument performs an absolute or a differential storing of the settings.

Enable this function to accelerate the saving process by saving only the settings with values different to the default ones.

Note: This function is not affected by the "Preset" function.

Parameters:

<Fast> 0 | 1 | OFF | ON
*RST: 1

[:SOURce<hw>]:BB:EVDO:SLENgth <SLength>

(For reverse link mode only)

Sets the sequence length of the arbitrary waveform component of the 1XEV-DO signal in number of frames. This component is calculated in advance and output in the arbitrary waveform generator. It is added to the real-time signal components.The number of chips is determined from this sequence length. One slot of 1.67ms duration equals 2048 chips.

Parameters:

<SLength> integer
Range: 1 to 65536 slots
*RST: 1

Example: see example "Performing general tasks" on page 59

Manual operation: See "Sequence Length ARB" on page 56

[:SOURce<hw>]:BB:EVDO:STATe <State>

Activates modulation in accordance with the 1XEV-DO standard.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: 0

Example: see example "Performing general tasks" on page 59

Manual operation: See "State" on page 12

[:SOURce<hw>]:BB:EVDO:STIMe <STime>

Sets the System Time value of the 1xEV-DO signal and the base station. The System Time value is expressed in units of 1.67 ms intervals (80 ms/ 48).

Note: In uplink, the value selected for system time must be multiple of 16.

Parameters:

<STime> float

Range: 0 to 2^41-1
*RST: 0

Example: see example "Performing general tasks" on page 59

Manual operation: See "System Time" on page 14

[:SOURce<hw>]:BB:EVDO:VERSion?

Queries the version of the 1xEV-DO standard underlying the definitions

Return values:

<Version> string

Example: see example "Performing general tasks" on page 59

Usage: Query only

Manual operation: See "1xEV-DO Version" on page 13

[:SOURce<hw>]:BB:EVDO:WAVeform:CREate <Filename>

Creates a waveform using the current settings. The file is stored with the predefined file extension `*.wv`. The file name and the directory it is stored in are user-definable.

Setting parameters:

<Filename> string

Example: see example "Performing general tasks" on page 59

Usage: Setting only

Manual operation: See "Generate Waveform File" on page 13

5.3 Filter/Clipping/ARB Settings

[:SOURce<hw>]:BB:EVDO:CLIPping:LEVel....65
[:SOURce<hw>]:BB:EVDO:CLIPping:MODE....65
[:SOURce<hw>]:BB:EVDO:CLIPping:STATe....65
[:SOURce<hw>]:BB:EVDO:CRATe:VARiation....66
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:APCO25....66
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:COSine....66
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:GAUSs....67
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:LPASs....67
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:LPASSEVM....67
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:PGAuss....68
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:RCOSine....68
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:SPHase....68
[:SOURce<hw>]:BB:EVDO:FILTer:TYPE....68
[:SOURce<hw>]:BB:EVDO:IQSWap:STATe....69

[:SOURce<hw>]:BB:EVDO:CLIPping:LEVel <Level>

(For reverse link mode only)

The command sets the limit for level clipping (Clipping). This value indicates at what point the signal is clipped. It is specified as a percentage, relative to the highest level. 100% indicates that clipping does not take place.

Level clipping is activated with the command `SOUR:BB:EVDO:CLIP:STAT ON`

Parameters:

<Level> integer

Range: 0 PCT to 100 PCT
Increment: 1 PCT
*RST: 100 PCT

Example: `BB:EVDO:CLIP:LEV 80PCT`
sets the limit for level clipping to 80% of the maximum level.
`BB:EVDO:CLIP:STAT ON`
activates level clipping.

Manual operation: See "Clipping Level" on page 55

[:SOURce<hw>]:BB:EVDO:CLIPping:MODE <Mode>

(For reverse link mode only)

The command sets the method for level clipping (Clipping).

Parameters:

<Mode> VECTor | SCALar

VECTor
The reference level is the amplitude | i+jq |

SCALar
The reference level is the absolute maximum of the I and Q values.

*RST: VECTor

Example: `BB:EVDO:CLIP:MODE SCAL`
selects the absolute maximum of all the I and Q values as the reference level.
`BB:EVDO:CLIP:LEV 80PCT`
sets the limit for level clipping to 80% of this maximum level.
`BB:EVDO:CLIP:STAT ON`
activates level clipping.

Manual operation: See "Clipping Mode" on page 56

[:SOURce<hw>]:BB:EVDO:CLIPping:STATe <State>

(For reverse link mode only)

The command activates level clipping (Clipping). The value is defined with the command`BB:EVDO:CLIPping:LEVel`, the mode of calculation with the command `BB:EVDO:CLIPping:MODE`.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: OFF

Example: `BB:EVDO:CLIP:STAT ON`
activates level clipping.

Manual operation: See "Clipping State" on page 55

[:SOURce<hw>]:BB:EVDO:CRATe:VARiation <Variation>

Enters the output chip rate.

The output chip rate changes the output clock and the modulation bandwidth, as well as the synchronization signals that are output. It does not affect the calculated chip sequence.

Parameters:

<Variation> float
Range: 1Mcps to 5Mcps
Increment: 1e-6Mcps (1cps)
*RST: 1.2288Mcps

Example: `BB:EVDO:CRAT:VAR 4086001`
sets the chip rate to 4.08 Mcps.

Manual operation: See "Chip Rate Variation" on page 54

[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:APCO25 <Apco25>

The command sets the roll-off factor for filter type APCO25.

Parameters:

<Apco25> float
Range: 0.05 to 0.99
Increment: 0.01
*RST: 0.2

Example: `BB:EVDO:FILT:PAR:APCO25 0.2`
sets the roll-off factor to 0.2 for filter type APCO25.

Manual operation: See "Roll Off Factor or BxT" on page 54

[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:COSine <Cosine>

The command sets the roll-off factor for the Cosine filter type.

Parameters:

<Cosine> float

Range: 0.05 to 1.0
Increment: 0.01
*RST: 0.1

Example: `BB:EVDO:FILT:PAR:COS 0.35`
sets the roll-off factor to 0.35 for filter type Cosine.

Manual operation: See "Roll Off Factor or BxT" on page 54

[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:GAUSs <Gauss>

The command sets the roll-off factor for the Gauss filter type.

Parameters:

<Gauss> float

Range: 0.15 to 2.5
Increment: 0.01
*RST: 0.5

Example: `BB:EVDO:FILT:PAR:GAUS 0.5`
sets B x T to 0.5 for the Gauss filter type.

Manual operation: See "Roll Off Factor or BxT" on page 54

[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:LPASs <LPass>

The command sets the cut off frequency factor for the Lowpass filter (ACP Opt.) type.

Parameters:

<LPass> float

Range: 0.05 to 2
*RST: 0.5

Example: `BB:EVDO:FILT:PAR:LPAS 0.5`
the cut of frequency factor is set to 0.5.

Manual operation: See "Cut Off Frequency Factor" on page 54

[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:LPASSEVM <LPassEvm>

The command sets the cut off frequency factor for the Lowpass filter (EVM Opt.) type.

Parameters:

<LPassEvm> float

Range: 0.05 to 2
*RST: 0.5

Example: `BB:EVDO:FILT:PAR:LPASSEVM 0.5`
the cut of frequency factor is set to 0.5.

Manual operation: See "Cut Off Frequency Factor" on page 54

[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:PGAuss <PGauss>

The command sets the roll-off factor for the Pure Gauss filter type.

Parameters:

<PGauss> float

Range: 0.15 to 2.5
Increment: 0.01
*RST: 0.5

Example: `BB:EVDO:FILT:PAR:GAUS 0.5`
sets B x T to 0.5 for the Pure Gauss filter type.

Manual operation: See "Roll Off Factor or BxT" on page 54

[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:RCOSine <RCosine>

The command sets the roll-off factor for the Root Cosine filter type.

Parameters:

<RCosine> float

Range: 0.05 to 1.0
Increment: 0.01
*RST: 0.15

Example: `BB:EVDO:FILT:PAR:RCOS 0.22`
sets the roll-off factor to 0. 22 for filter type Root Cosine.

Manual operation: See "Roll Off Factor or BxT" on page 54

[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:SPHase <SPhase>

The command sets B x T for the Split Phase filter type.

Parameters:

<SPhase> float

Range: 0.15 to 2.5
Increment: 0.01
*RST: 2

Example: `BB:EVDO:FILT:PAR:SPH 0.5`
sets B x T to 0.5 for the Split Phase filter type.

Manual operation: See "Roll Off Factor or BxT" on page 54

[:SOURce<hw>]:BB:EVDO:FILTer:TYPE <Type>

The command selects the filter type.

Parameters:

<Type> RCOSine | COSine | GAUSs | LGAuss | CONE | COF705 | COEQualizer | COFequalizer | C2K3x | APCO25 | SPHase | RECTangle | PGAuss | LPASs | DIRac | ENPShape | EWPShape | LPASSEVM

*RST: Downlink:COEQ; Uplink: CONE

Example: `BB:EVDO:FILT:TYPE CONE`
sets the filter type CdmaOne. This filter type is defined by the standard for the uplink.

Manual operation: See "Filter" on page 54

[:SOURce<hw>]:BB:EVDO:IQSWap:STATe <State>

This command inverts the Q-part of the baseband signal if set to ON. The signal on the baseband outputs meets the 1xEV-DO standard. In order to generate an RF signal that conforms to the standard, the "I/Q Swap" function in the "I/Q Modulator" menu must be enabled ("On") (`SOURce:IQ:SWAP ON`).

Parameters:

<State> 0 | 1 | OFF | ON

*RST: OFF

Example: `BB:EVDO:IQSW:STAT ON`
inverts the Q-part of the baseband signal.

Manual operation: See "Invert Q for Correct Baseband Output" on page 57

5.4 Trigger Settings

The following commands are described here:

[:SOURce<hw>]:BB:EVDO[:TRIGger]:SEQuence....69
[:SOURce<hw>]:BB:EVDO:TRIGger:ARM:EXECute....70
[:SOURce<hw>]:BB:EVDO:TRIGger:EXECute....70
[:SOURce<hw>]:BB:EVDO:TRIGger:EXTernal:SYNChronize:OUTPut....70
[:SOURce<hw>]:BB:EVDO:TRIGger:OBASeband:DELay....70
[:SOURce<hw>]:BB:EVDO:TRIGger:OBASeband:INHibit....71
[:SOURce<hw>]:BB:EVDO:TRIGger:RMODe?....71
[:SOURce<hw>]:BB:EVDO:TRIGger:SLENgth....71
[:SOURce<hw>]:BB:EVDO:TRIGger:SLUNit....72
[:SOURce<hw>]:BB:EVDO:TRIGger:SOURce....72
[:SOURce<hw>]:BB:EVDO:TRIGger[:EXTernal]:DELay....73
[:SOURce<hw>]:BB:EVDO:TRIGger[:EXTernal]:INHibit....74

[:SOURce<hw>]:BB:EVDO[:TRIGger]:SEQuence <Sequence>

Selects a requlr trigger mode.

Parameters:

<Sequence> AUTO | RETRigger | AAUTo | ARETrigger | SINGle

*RST: AUTO

Example: see example "Adjusting clock, marker and trigger settings" on page 60

Manual operation: See "Trigger Mode" on page 16

[:SOURce<hw>]:BB:EVDO:TRIGger:ARM:EXECute

Stops signal generation; a subsequent internal or external trigger event restart signal generation.

Example: see example "Adjusting clock, marker and trigger settings" on page 60

Usage: Event

Manual operation: See "Arm" on page 17

[:SOURce<hw>]:BB:EVDO:TRIGger:EXECute

Executes a trigger.

Example: see example "Adjusting clock, marker and trigger settings" on page 60

Usage: Event

Manual operation: See "Execute Trigger" on page 17

[:SOURce<hw>]:BB:EVDO:TRIGger:EXTernal:SYNChronize:OUTPut <Output>

For an external trigger signal, enables/disables the output of a signal synchronous to the external trigger event.

Parameters:

<Output> 0 | 1 | OFF | ON

*RST: 1

Example: `BB:EVDO:TRIG:SOUR EXT`
sets external triggering.
`BB:EVDO:TRIG:EXT:SYNC:OUTP ON`
enables synchrounous output to external trigger

Manual operation: See "Sync. Output to External Trigger" on page 18

[:SOURce<hw>]:BB:EVDO:TRIGger:OBASeband:DELay <Delay>

Specifies the trigger delay (expressed as a number of chips) for triggering from the other path.

Parameters:

<Delay> float

Range: 0 to 65535
Increment: 0.01
*RST: 0

Example: see `[:SOURce<hw>]:BB:EVDO:TRIGger:OBASeband:INHibit` on page 71

Manual operation: See "External Trigger Delay" on page 19

[:SOURce<hw>]:BB:EVDO:TRIGger:OBASeband:INHibit <Inhibit>

Specifies the number of chips by which a restart is to be inhibited following a trigger event. This command applies only for triggering by the second path.

Parameters:

<Inhibit> integer

Range: 0 to 67108863
*RST: 0

Example: `BB:EVDO:TRIG:SOUR OBAS`
sets triggering by the other path
`BB:EVDO:TRIG:INH 200`
sets a restart inhibit for 200 chips following a trigger event.
`BB:EVDO:TRIG:OBAS:DEL 50`
sets a delay of 50 symbols for the trigger.

Manual operation: See "External Trigger Inhibit" on page 19

[:SOURce<hw>]:BB:EVDO:TRIGger:RMODe?

Queries the status of signal generation.

Return values:

<RMode> STOP | RUN

Example: see example "Adjusting clock, marker and trigger settings" on page 60

Usage: Query only

Manual operation: See "Running/Stopped" on page 17

[:SOURce<hw>]:BB:EVDO:TRIGger:SLENgth <SLength>

Defines the length of the signal sequence to be output in the `SINGle` trigger mode.

Parameters:

<SLength> integer

Range: 1 to 4294967295
*RST: 1

Example: `SOURce:BB:EVDO:TRIGger:SEQuence SINGle`
`SOURce:BB:EVDO:TRIGger:SLUNit CHIP`
sets unit chips for the entry of sequence length.
`SOURce:BB:EVDO:TRIGger:SLENgth 200`
sets a sequence length of 200 chips. The first 200 chips of the current frame will be output after the next trigger event.

Manual operation: See "Trigger Signal Duration" on page 17

[:SOURce<hw>]:BB:EVDO:TRIGger:SLUNit <SLunit>

Defines the unit for the entry of the length of the signal sequence.

Parameters:

<SLunit> SLOT | CHIP | SEQuence
*RST: SEQuence

Example: see `[:SOURce<hw>]:BB:EVDO:TRIGger:SLENgth` on page 71

Manual operation: See "Signal Duration Unit" on page 16

[:SOURce<hw>]:BB:EVDO:TRIGger:SOURce <Source>

Selects the trigger signal source and determines the way the triggering is executed. Provided are internal triggering by means of a command, external trigger singnal via one of the provided local or global connectors and and triggering by a signal from the other paths.

Parameters:

<Source> INTB | INTernal | OBASeband | EGT1 | EGT2 | EGC1 | EGC2 | ELTRigger | INTA | ELCLock | BEXTernal | EXTernal

INTernal
Internal

INTA | INTB
Internal trigger from the other baseband

EGT1 | EGT2
External global trigger

EGC1 | EGC2
External global clock

ELTRigger
External local trigger

ELCLock
External local clock

OBASeband|BEXTernal|EXTernal
Provided only for backward compatibility with other R&S signal generators.
The R&S SMW accepts these values und maps them automatically as follow:
EXTernal = EGT1, BEXTernal = EGT2, OBASeband = INTA or INTB (depending on the current baseband)

*RST: INTernal

Example: `BB:EVDO:TRIG:SOUR INT`
selects an internal trigger.

Manual operation: See "Trigger Source" on page 17

[:SOURce<hw>]:BB:EVDO:TRIGger[:EXTernal]:DELay <Delay>

Specifies the trigger delay (expressed as a number of samples) for external triggering. The value affects all external trigger signals.

Parameters:

<Delay> float

Range: 0 to 65535
Increment: 0.01
*RST: 0

Example: `BB:EVDO:TRIG:SOUR EXT`
sets an external trigger.
`BB:EVDO:TRIG:EXT:DEL 50`
sets a delay of 50 symbols for the trigger.

Manual operation: See "External Trigger Delay" on page 19

[:SOURce<hw>]:BB:EVDO:TRIGger[:EXTernal]:INHibit <Inhibit>

Parameters:

<Inhibit> integer

Range: 0 to 67108863
*RST: 0

Example: `BB:EVDO:TRIG:SOUR EXT`
selects an external trigger.
`BB:EVDO:TRIG:EXT:INH 200`
sets a restart inhibit for 200 samples following a trigger event.

Manual operation: See "External Trigger Inhibit" on page 19

5.5 Marker Settings

The following commands are described here:

[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut:DELay:FIXed....74
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:DELay....74
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:DELay:MINimum?....75
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:DELay:MAXimum?....75
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:MODE....75
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:ONTime....76
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:OFFTime....76
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:PERiod....76

[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut:DELay:FIXed <Fixed>

Restricts the marker delay setting range to current range.

Parameters:

<Fixed> 0 | 1 | OFF | ON

*RST: 0

Example: `SOURce2:BB:EVDO:TRIGger:OUTPut:DELay:FIXed ON`

Manual operation: See "Marker x Delay" on page 21

[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:DELay <Delay>

Defines the delay between the signal on the marker outputs and the start of the signal, expressed in terms of the signal units.

Parameters:

<Delay> float

Range: 0 to 2^32-1 chips
*RST: 0

Example: `SOURce2:BB:EVDO:TRIGger:OUTPut2:DELay 16000`

Manual operation: See "Marker x Delay" on page 21

[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:DELay:MINimum?
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:DELay:MAXimum?

Queries the minimum/maximum marker delay for fixed marker delay setting.

Return values:

<Maximum> float

Range: 0 to max

Example: `SOURce:BB:EVDO:TRIGger:OUTPut1:DELay:FIXed ON`
restricts the marker signal delay setting range to the dynamic range.
`SOURce:BB:EVDO:TRIGger:OUTPut1:DELay:MINimum?`
`SOURce:BB:EVDO:TRIGger:OUTPut1:DELay:MAXimum?`
queries the maximum of the dynamic range.

Usage: Query only

Manual operation: See "Marker x Delay" on page 21

[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:MODE <Mode>

Defines the signal for the selected marker output.

Parameters:

<Mode> SLOT | PNSPeriod | ESM | CSPeriod | USER | RATio

SLOT
Each slot (every 1.67 ms)

PNSPeriod
Every 26.67 ms (PN Sequence Period)

ESM
Every 2 s (even second mark).

CSPeriod
Each arbitrary waveform sequence

RATio
Regular marker signal

USER
Every user-defined period.

*RST: SLOT

Example: `SOURce:BB:EVDO:TRIGger:OUTPut2:MODE ESM`
selects the even second mark clock (every 2 seconds) on the output for marker signal 2

Manual operation: See "Marker Mode" on page 20

[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:ONTime <OnTime>
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:OFFTime <OffTime>

Sets the number of symbols in a period (ON time + OFF time) for marker `RATio`

Parameters:

<OffTime> integer

Range: 1 to 16777215
*RST: 1

Example: `SOURce:BB:EVDO:TRIGger:OUTPut2:MODE RATio`
`SOURce:BB:EVDO:TRIGger:OUTPut2:OFFTime 2000`
sets an OFF time of 2000 chips for marker signal 2.
`SOURce:BB:EVDO:TRIGger:OUTPut2:ONTime 200`
sets an ON time of 200 chips for marker signal 2.

Manual operation: See "Marker Mode" on page 20

[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:PERiod <Period>

Sets the repetition rate for the signal at the marker outputs, expressed in terms of chips.

Parameters:

<Period> integer

Range: 2 to 16777215
*RST: 2

Example: `SOURce:BB:EVDO:TRIGger:OUTPut2:MODE USER`
selects the user marker
`SOURce:BB:EVDO:TRIGger:OUTPut2:PERiod 1600`
sets a period of 1600 chips, i.e. the marker signal is repeated every 1600th chip.

Manual operation: See "Marker Mode" on page 20

5.6 Clock Settings

The following commands are described here:

[:SOURce<hw>]:BB:EVDO:CLOCk:MODE....76
[:SOURce<hw>]:BB:EVDO:CLOCk:MULTiplier....77
[:SOURce<hw>]:BB:EVDO:CLOCk:SOURce....77

[:SOURce<hw>]:BB:EVDO:CLOCk:MODE <Mode>

Sets the type of externally supplied clock.

Parameters:

<Mode> CHIP | MCHip

*RST: CHIP

Example: see `[:SOURce<hw>]:BB:EVDO:CLOCk:SOURce` on page 77

Manual operation: See "Clock Mode" on page 23

[:SOURce<hw>]:BB:EVDO:CLOCk:MULTiplier <Multiplier>

Specifies the clock multiplier.

Parameters:

<Multiplier> integer

Range: 1 to 64
*RST: 4

Example: see `[:SOURce<hw>]:BB:EVDO:CLOCk:SOURce` on page 77

Manual operation: See "Chip Clock Multiplier" on page 23

[:SOURce<hw>]:BB:EVDO:CLOCk:SOURce <Source>

Selects the clock source.

Parameters:

<Source> INTernal | EGC1 | EGC2 | ELCLock | EXTernal

INTernal
The instrument uses its internal clock reference

EGC1|EGC2
External global clock

ELCLock
External local clock

*RST: INTernal

Example: `BB:EVDO:CLOC:SOUR: INT`
selects an internal clock reference.

Manual operation: See "Clock Source" on page 23

5.7 Access Network Settings

[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:PSOFfset....78
[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:RATE....78
[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:REVision:MAXimum....78
[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:REVision:MINimum....79
[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:STATe....79
[:SOURce<hw>]:BB:EVDO:ANETwork:CPMode....79
[:SOURce<hw>]:BB:EVDO:ANETwork:OUCount....79
[:SOURce<hw>]:BB:EVDO:ANETwork:PCHannel:STATe?....80
[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:LENGth....80
[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:LEVel....80
[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:MAC:INDex....81

[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:OFFSet....81
[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:STATe....81
[:SOURce<hw>]:BB:EVDO:ANETwork:SUBType....81

[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:PSOFfset <PSoffset>

Sets the offset (in slots) from the start of control channel cycle to the start of the synchronous message capsule that contains the Sync Message.

Parameters:

<PSoffset> float

Range: 0 to 3
*RST: 0

Example: `BB:EVDO:ANET:CCH:PSOF 2`
sets the packet start offset for the control channel to 2.

Manual operation: See "Packet Start Offset" on page 39

[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:RATE <Rate>

Sets the rate that the control channel messages are transmitted at.

Parameters:

<Rate> DR4K8 | DR9K6 | DR19K2 | DR38K4 | DR76K8 | DR153K6 | DR307K2 | DR614K4 | DR921K6 | DR1228K8 | DR1536K | DR1843K2 | DR2457K6 | DR3072K | DR460K8 | DR768K | DR1075K2 | DR2150K4 | DR3686K4 | DR4300K8 | DR4915K2

*RST: 38.4 kbps

Example: `BB:EVDO:ANET:CCH:RATE DR76K8`
sets the control channel rate to 76.8 kbps.

Manual operation: See "Rate (Control Channel)" on page 39

[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:REVision:MAXimum <Maximum>

Sets the value of the maximum revision field within the control channel message.

Parameters:

<Maximum> float

Range: 0 to 255
*RST: 1

Example: `BB:EVDO:ANET:CCH:REV:MAX 10`
sets the value of the maximum revision field to 10.

Manual operation: See "Maximum Revision" on page 39

[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:REVision:MINimum <Minimum>

Sets the value of the minimum revision field within the control channel message.

Parameters:

<Minimum> float

Range: 0 to 255
*RST: 1

Example: `BB:EVDO:ANET:CCH:REV:MIN 1`
sets the value of the minimum revision field to 1.

Manual operation: See "Minimum Revision" on page 39

[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:STATe <State>

Enables or disables the control channel messages.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: 0

Example: `BB:EVDO:ANET:CCH:STAT ON`
enables the control channel message.

Manual operation: See "State (Control Channel)" on page 39

[:SOURce<hw>]:BB:EVDO:ANETwork:CPMode <CpMode>

Enables or disables a special mode within the 1xEV-DO generator.

Note: During the special mode, all other parameters do not affect the signal output.

Parameters:

<CpMode> 0 | 1 | OFF | ON

*RST: 0

Example: `BB:EVDO:ANET:CPM ON`
enables the special mode.

Manual operation: See "Continuous Pilot Mode" on page 38

[:SOURce<hw>]:BB:EVDO:ANETwork:OUCount <OuCount>

Sets the number of additional users (beyond the four defined users) that appear in the MAC Channel.

Parameters:

<OuCount> float

Range: 0 to 55 for physical layer subtype 0&1) , 0 to 110 for physical layer subtype 2, 0 to 360 for physical layer subtype 3
*RST: 0

Example: `BB:EVDO:ANET:OUC 5`
sets the number of additional users to 5.

Manual operation: See "Other Users Count" on page 40

[:SOURce<hw>]:BB:EVDO:ANETwork:PCHannel:STATe?

Displays the state of the pilot channel. Pilot channel is transmitted by sector on each active forward channel. It is present always and transmitted at the full sector power.

Return values:
<State> 0 | 1 | OFF | ON
*RST: ON

Example: `BB:EVDO:ANET:PCH:STAT?`
displays the state of the pilot channel.

Usage: Query only

Manual operation: See "State (Pilot Channel)" on page 39

[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:LENGth <Length>

Sets the duration (in slots) of a Reverse Activity bit.

Note: This parameter is available for physical layer subtype 0&1 only.

Parameters:
<Length> RL8 | RL16 | RL32 | RL64
*RST: 8

Example: `BB:EVDO:ANET:RAB:LENG RL16`
sets the duration of the Reverse Activity Bit (RAB) to 16 slots.

Manual operation: See "RAB Length" on page 40

[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:LEVel <Level>

Sets the power within the MAC block for the Reverse Activity channel.

Parameters:
<Level> float
Range: -25 to -7
*RST: -7.0

Example: `BB:EVDO:ANET:RAB:LEV -7.0`
sets the power of the MAC block for the Reverse Activity Channel to -7.0 dB.

Manual operation: See "RAB Level" on page 40

[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:MAC:INDex <Index>

For physical layer subtype 3 only sets the RAB MAC Index.

Parameters:

<Index> integer

Range: 4 to 127
Increment: 1
*RST: 4

Manual operation: See "RAB MAC Index" on page 40

[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:OFFSet <Offset>

Sets the starting time offset of the Reverse Activity bit in slots. The command is specified in Reverse Activity Length/8 units. The RA bit starts when the following equation is satisfied:

System Time mod RABlenght = RABOffset, where System Time is expressed in slots.

Note: This parameter is available for physical layer subtype 0&1 only.

Parameters:

<Offset> integer

Range: 0 to 7
*RST: 0

Example: `BB:EVDO:ANET:RAB:OFFS 1`
sets the starting time offset of the Reverse Activity bit to 1.

Manual operation: See "RAB Offset" on page 40

[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:STATe <State>

Activates or deactivates the reverse activity bit (RAB).

Parameters:

<State> 0 | 1 | OFF | ON

*RST: OFF

Example: `BB:EVDO:ANET:RAB:STAT ON`
activates the Reverse Activity Bit.

Manual operation: See "State (Reverse Activity Bit)" on page 39

[:SOURce<hw>]:BB:EVDO:ANETwork:SUBType <Subtype>

Selects the physical layer subtype.

Note: The physical layer subtype settings can be queried per user.

Parameters:

<Subtype> S1 | S2 | S3

*RST: 2

Example: `BB:EVDO:ANET:SUBT S2`
sets the physical layer subtype to 2.

Options: S3 requires option R&S SMW-K87

Manual operation: See "Physical Layer Subtype (User)" on page 27

5.8 Multi Carrier Configuration

Multi Carrier Configuration requires option R&S SMW-K87

[:SOURce<hw>]:BB:EVDO:UP:MC:BCLass....82
[:SOURce<hw>]:BB:EVDO:DOWN:MC:BCLass....82
[:SOURce<hw>]:BB:EVDO:UP:MC:CARRier<ch>:CHANnel....82
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRier<ch>:CHANnel....82
[:SOURce<hw>]:BB:EVDO:UP:MC:CARRier<ch>:FREQuency....83
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRier<ch>:FREQuency....83
[:SOURce<hw>]:BB:EVDO:UP:MC:CFRequency?....83
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CFRequency?....83
[:SOURce<hw>]:BB:EVDO:UP:MC:CARRier<ch>:STATe....83
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRier<ch>:STATe....83
[:SOURce<hw>]:BB:EVDO:UP:MC:STATe....84
[:SOURce<hw>]:BB:EVDO:DOWN:MC:STATe....84

[:SOURce<hw>]:BB:EVDO:UP:MC:BCLass <BandClass>
[:SOURce<hw>]:BB:EVDO:DOWN:MC:BCLass <BandClass>

Selects the band class for operation, as defined in 3GPP2 C.S0057-E. "BC 17" is allowed in downlink only.

Parameters:

<BandClass> BC0 | BC1 | BC2 | BC3 | BC4 | BC5 | BC6 | BC7 | BC8 | BC9 | BC10 | BC11 | BC12 | BC13 | BC14 | BC15 | BC16 | BC17 | BC18 | BC19 | BC20 | BC21

*RST: BC0

Options: R&S SMW-K87

Manual operation: See "Band Class" on page 37

[:SOURce<hw>]:BB:EVDO:UP:MC:CARRier<ch>:CHANnel <Channel>
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRier<ch>:CHANnel <Channel>

Sets carrier's CDMA channel number. The selectable `Channel` values depend on the chosen `Band Class`In some cases not all channel numbers can be used. In case a non-existing channel is input, the next available channel will be used.

Parameters:

<Channel> integer

Range: 0 to 3000
Increment: 1
*RST: 1

Options: R&S SMW-K87

Manual operation: See "CDMA Channel Number" on page 37

[:SOURce<hw>]:BB:EVDO:UP:MC:CARRier<ch>:FREQuency <Frequency>
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRier<ch>:FREQuency <Frequency>

Sets the center frequency of the carrier in MHz. In some cases not all center frequencies are defined by the selected band class. In case a non-existing frequency is input, the next available frequency will be used.

Parameters:

<Frequency> float

Range: 100 to 3000
Increment: 1E-4
*RST: 870.03

Options: R&S SMW-K87

Manual operation: See "Center Frequency" on page 37

[:SOURce<hw>]:BB:EVDO:UP:MC:CFRequency?
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CFRequency?

Queries the center frequency of the band resulting from the set active carriers.

Return values:

<CenterFrequency> float

Example: `BB:EVDO:DOWN:MC:CFR?`
Queries the center frequency of the band.

Usage: Query only

Manual operation: See "Center Frequency (band)" on page 37

[:SOURce<hw>]:BB:EVDO:UP:MC:CARRier<ch>:STATe <State>
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRier<ch>:STATe <State>

Switches the selected carrier on or off.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: 0

Options: R&S SMW-K87

Manual operation: See "State" on page 37

[:SOURce<hw>]:BB:EVDO:UP:MC:STATe <State>
[:SOURce<hw>]:BB:EVDO:DOWN:MC:STATe <State>

Enables or disables multi carrier operation.

Parameters:
<State> 0 | 1 | OFF | ON
*RST: 0

Options: R&S SMW-K87

5.9 Configure Traffic User

[:SOURce<hw>]:BB:EVDO:USER<st>:DATA:PATTern....84
[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:LENGth....85
[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:OFFSet....85
[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:PERiod....85
[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:STATe....85
[:SOURce<hw>]:BB:EVDO:USER<st>:HARQ:MODE....86
[:SOURce<hw>]:BB:EVDO:USER<st>:IFACtor....86
[:SOURce<hw>]:BB:EVDO:USER<st>:MAC:INDex....87
[:SOURce<hw>]:BB:EVDO:USER<st>:MAC:LEVel....87
[:SOURce<hw>]:BB:EVDO:USER<st>:PACKet:COUNt....88
[:SOURce<hw>]:BB:EVDO:USER<st>:PACKet:INFinite....88
[:SOURce<hw>]:BB:EVDO:USER<st>:PACKet:SOFFset....88
[:SOURce<hw>]:BB:EVDO:USER<st>:PSIZe....89
[:SOURce<hw>]:BB:EVDO:USER<st>:RATE?....89
[:SOURce<hw>]:BB:EVDO:USER<st>:RATE:INDex....90
[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:INJect....90
[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:MODE....91
[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:RANGe....91
[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:ZONE<ch0>:BIT....92
[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:ZONE<ch0>:COUNt....92
[:SOURce<hw>]:BB:EVDO:USER<st>:SCOunt?....92
[:SOURce<hw>]:BB:EVDO:USER<st>:STATe....93

[:SOURce<hw>]:BB:EVDO:USER<st>:DATA:PATTern <Pattern>

Sets the data pattern for the data portion of the packets sent to the user. The most significant bit (MSB) of this value is the MSB of the packet and the word is repeated to fill all space within the packet.This parameter is 32 bits and in a hexadecimal format.

Parameters:
<Pattern> integer
*RST: 0

Example: `BB:EVDO:USER2:DTA:PATT # H55aa55aa`
sets the data pattern for user 2.

Manual operation: See "Data Pattern" on page 32

[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:LENGth <Length>

Sets the number of DRC (Data Rate Control) Lock periods that the state of the DRC Lock for the selected user will be held constant.

Note: Changes in the DRC Lock state are only considered at the interval defined by the parameter DRC Lock Length.

A value of one allows updating of the DRC Lock bit at anytime.

Parameters:

<Length> DL1 | DL4 | DL8 | DL16 | DL32 | DL64

*RST: 1

Example: `BB:EVDO:USER2:DRCL:LENG DL8`
sets 8 DRCLock periods for holding the state of user 2 constant.

Manual operation: See "DRC Lock Length" on page 35

[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:OFFSet <Offset>

Sets the reverse link frame offset for the reverse link. The frame offset is used to properly position the DRC Lock bit within the MAC channel.

Parameters:

<Offset> integer

Range: 0 to 15
*RST: 0

Example: `BB:EVDO:USER2:DRCL:OFFS 5`
sets the reverse link frame offset to 5.

Manual operation: See "Frame Offset" on page 35

[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:PERiod <Period>

Sets the period (measured in slots) of time between successive transmissions of the DRC (Data Rate Control) Lock bit for the selected user.

Note: A value of zero will disable the DRC Lock subchannel and the MAC RPC channel of the selected user will not be punctured with the DRC Lock subchannel.

Parameters:

<Period> DP0 | DP4 | DP8 | DP16

*RST: 4

Example: `BB:EVDO:USER2:DRCL:PER DP8`
sets the DRC Lock period for user 2 to 8 slots.

Manual operation: See "DRC Lock Period" on page 34

[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:STATe <State>

Sets the state of the DRC (Data Rate Control) Lock bit for the selected user.

Note: Changes in the DRC Lock state are only considered at the interval defined by the parameter DRC Lock Length.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: OFF

Example: `BB:EVDO:USER2:DRCL:STAT ON`
activates the DRC Lock bit for user 2.

Manual operation: See "DRC Lock State" on page 34

[:SOURce<hw>]:BB:EVDO:USER<st>:HARQ:MODE <Mode>

Enables or disables the H-ARQ Channel. The H-ARQ channel is used by the access network to transmit positive acknowledgement (ACK) or a negative acknowledgement (NAK) in response to a physical layer packet.

Note: This parameter is enabled for Physical Layer Subtype 2 only.

Parameters:

<Mode> OFF | ACK | NAK

OFF
Disables transmission of the H-ARQ channel.

ACK
Enables transmission of H-ARQ. The channel will be transmitted with all bits set to ACK.

NAK
Enables transmission of H-ARQ. The channel will be transmitted with all bits set to NAK

*RST: OFF

Example: `BB:EVDO:USER2:SUBT S2`
sets the physical layer subtype for user 2 to 2.
`BB:EVDO:USER2:HARQ:MODE ACK`
enables ARQ channel. The channel will be transmit with all bits set to ACK.

Manual operation: See "H-ARQ Mode" on page 35

[:SOURce<hw>]:BB:EVDO:USER<st>:IFACtor <IFactor>

Controls the number of interleave slots used for the selected user on the forward link.

Four interleave slots are defined in the 1xEV-DO system.

By default, only 1 Interleave slot (Interleave Factor = 1) for an access terminal is configured and transmission to that access terminal every 4th slot is selected.

For an interleave factor > 1, packets on multiple interleave slots will be sent, increasing the data throughput to the access terminal.

Parameters:

<IFactor> integer

Range: 1 to 4
*RST: 1

Example: `BB:EVDO:USER2:IFAC 2`
sets 2 interleaved slots for user 2 on the forward link.

Manual operation: See "Interleave Factor" on page 33

[:SOURce<hw>]:BB:EVDO:USER<st>:MAC:INDex <Index>

Sets the MAC Index used for the selected user.

MAC Index should be different for the different users. However, in case that two users are using the same value for MAC Index, the lower priority user will be disabled, or be unable to enable.

The values for the MAC Indexes for the 'OtherUsers' (see `[:SOURce<hw>]:BB:EVDO:ANETwork:OUCount`) will be assigned from a pool of valid MAC Indexes, that exclude the MAC Indexes specified for each of the four configurable users.

Parameters:

<Index> integer

Range: 5 to 63 for physical layer subtype 0&1, 6 to 127 for physical layer subtype 2, 4 to 383 for physical layer subtype 3
Increment: 1
*RST: Physical layer subtype 0&1: 5 for user 1; 6 for user 2; 7 for user 3; 8 for user 4; / Physical layer subtype 2: 6 for user 1; 7 for user 2; 8 for user 3; 9 for user 4

Example: `BB:EVDO:USER2:MAC:IND 6`
sets the MAC index for user 2 to 16.

Manual operation: See "MAC Index" on page 32

[:SOURce<hw>]:BB:EVDO:USER<st>:MAC:LEVel <Level>

Sets the power within the MAC channel that is dedicated to the selected user.

Parameters:

<Level> float

Range: -25 to -7
Increment: -
*RST: -7

Example: `BB:EVDO:USER2:MAC:LEV -7.0`
sets the power within the MAC channel to -7.0 dB.

Manual operation: See "MAC Level" on page 33

[:SOURce<hw>]:BB:EVDO:USER<st>:PACKet:COUNt <Count>

Sets the number of packets to send to the selected user.

The number of packets to be send depends on whether the parameter "Infinite" is enabled or disabled.

If "Infinite" is enabled, there is no limit to the number of packets sent to the user.

If "Infinite" is disabled and a value is specified while packets are being sent, the new count value will be used at the end of transmission of the current packet. If a value of zero is specified, the transmission to the user will be stopped at the end of the current packet.

Parameters:

<Count> integer

Range: 0 to 65536
*RST: 65536

Example: `BB:EVDO:USER2:PACK:INF OFF`
disables sending of unlimited number of packets.
`BB:EVDO:USER2:PACK:COUNT 10`
sets the number of packets to be send to 10.

Manual operation: See "Number of Packets to Send" on page 27

[:SOURce<hw>]:BB:EVDO:USER<st>:PACKet:INFinite <Infinite>

Enables or disables sending an unlimited number of packets to the selected user.

Parameters:

<Infinite> 0 | 1 | OFF | ON

ON
Enables sending of an unlimited number of packets to the user.

OFF
Disables sending of an unlimited number of packets to the user. The number of packets to be sent can be specified.

*RST: 65536

Example: `BB:EVDO:USER2:PACK:INF OFF`
disables sending of unlimited number of packets for user 2.
`BB:EVDO:USER2:PACK:COUNT 10`
sets the number of packets to be send to user 2 to10.

Manual operation: See "Number of Packets to Send" on page 27

[:SOURce<hw>]:BB:EVDO:USER<st>:PACKet:SOFFset <SOffset>

Sets the minimum number of slots between the end of one packet and the beginning of the next.

For single slot packets, a value of zero will cause the next packet to be sent in the immediate next slot (subject to scheduling).

For multiple slot packets, a value of zero will cause the next packet transmission to start three slots after the end of the previous packet. The three slot delay is identical to the interleaving delay between slots for multiple slot packets. The offset value is attached to the end of the preceding packet.

Note: An offset value of zero with a rate change from a single slot packets to a multiple slot packets will cause the first slot of the multiple slot packet to be transmitted in the slot immediately following the single slot packet.

Parameters:

<SOffset> integer

Range: 0 to 255
*RST: 0

Example: `BB:EVDO:USER2:PACK:SOFF 10`
sets the packet start offset for user 2 to10.

Manual operation: See "Packet Start Offset" on page 27

[:SOURce<hw>]:BB:EVDO:USER<st>:PSIZe <PSize>

Sets the packet size for the packets sent to the selected user.

Note: Selected rate becomes effective at the beginning of the next packet transmitted to the selected user.

Parameters:

<PSize> PS128 | PS256 | PS512 | PS768 | PS1024 | PS1536 | PS2048 | PS3072 | PS4096 | PS5120 | PS6144 | PS8192 | PS12288 | PS7168

*RST: PS128

Example: `BB:EVDO:ANET:SUBT S2`
sets the physical layer subtype to 2.
`BB:EVDO:USER2:RATE:IND 4`
sets the rate index of user 2 to 4.
`BB:EVDO:USER2:PSIZ PS256`
sets the packet size for user 2 to 256.
`SOUR:BB:EVDO:USER2:RATE?`
queries the data rare for user 2.
`Response: 76.8 kbps`

Manual operation: See "Packet Size" on page 32

[:SOURce<hw>]:BB:EVDO:USER<st>:RATE?

Queries the data rate of the packets sent to the selected user.

Note: Selected rate becomes effective at the beginning of the next packet transmitted to the selected user.

Return values:

<Rate> DR4K8 | DR9K6 | DR19K2 | DR38K4 | DR76K8 | DR153K6 | DR307K2 | DR614K4 | DR921K6 | DR1228K8 | DR1536K | DR1843K2 | DR2457K6 | DR3072K | DR460K8 | DR768K | DR1075K2 | DR2150K4 | DR3686K4 | DR4300K8 | DR4915K2

*RST: DR4K8

Example: `BB:EVDO:ANET:SUBT S2`
sets the physical layer subtype.
`BB:EVDO:USER2:RATE:IND 4`
sets the rate index of user 2.
`BB:EVDO:USER2:PSIZ PS256`
sets the packet size for user 2.
`SOUR:BB:EVDO:USER2:RATE?`
queries the data rate for user 2.
`Response: 76.8 kbps`

Usage: Query only

Manual operation: See "Data Rate" on page 32

[:SOURce<hw>]:BB:EVDO:USER<st>:RATE:INDex <Index>

Determines the rate index.

Note: Selected rate becomes effective at the beginning of the next packet transmitted to the selected user.

Parameters:

<Index> integer

Range: 1 to 12 (physical layer subtype 0&1), 1 to 14 (physical layer subtype 2), 1 to 28 (physical layer subtype 3)

*RST: 1

Example: `BB:EVDO:ANET:SUBT S2`
sets the physical layer subtype.
`BB:EVDO:USER2:RATE:IND 4`
sets the rate index of user 2.
`BB:EVDO:USER2:PSIZ PS256`
sets the packet size for user 2.
`SOUR:BB:EVDO:USER2:RATE?`
queries the data rate for user 2.
`Response: 76.8 kbps`

Manual operation: See "Rate Index" on page 28

[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:INJect

Enables sending of user defined Reverse Power Control (RPC) pattern at the end of the current RPC mode.

The former RPC mode will be restart at the end of the pattern transmission.

Example: `BB:EVDO:USER2:RPC:MODE PATT`
sets the mode of the Reverse Power Control (RPC) Channel within the MAC channel for user 2 to pattern, i.e. a user-defined sequence will be transmitted.
`BB:EVDO:USER2:RPC:ZONE0:BIT 1`
sets the bit for zone 0 to 1
`BB:EVDO:USER2:RPC:ZONE0:COUNT 10`
sets the number of RPC bits for zone 0 to 10.
`BB:EVDO:USER2:RPC:ZONE1:BIT 0`
`BB:EVDO:USER2:RPC:ZONE1:COUNT 100`
`BB:EVDO:USER2:RPC:ZONE2:BIT 1`
`BB:EVDO:USER2:RPC:ZONE2:COUNT 50`
`BB:EVDO:USER2:RPC:ZONE3:BIT 0`
`BB:EVDO:USER2:RPC:ZONE3:COUNT 10`
`BB:EVDO:USER2:RPC:INJ`
the user defined RPC pattern will be inserted at the end of the current RPC mode.

Usage: Event

[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:MODE <Mode>

Sets the operation mode for the Reverse Power Control (RPC) Channel within the MAC channel for the selected user.

Parameters:
<Mode> HOLD | UP | DOWN | RANGe | PATTern
*RST: HOLD

Example: `BB:EVDO:USER2:RPC:MODE UP`
a continuous stream of Up (0) are transmitted on the Reverse Power Control (RPC) Channel within the MAC channel for user 2.

Manual operation: See "RPC Mode" on page 33

[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:RANGe <Range>

Sets the number of Reverse Power Control (RPC) bits sent in each direction when the "RPC Mode" is set to Range. The specified value is used immediately.

Note: This parameter is displayed in RPC Mode "Range" only.

Parameters:
<Range> integer
Range: 1 to 256
*RST: 1

Example: `BB:EVDO:USER2:RPC:MODE RANG`
sets the mode of the Reverse Power Control (RPC) Channel within the MAC channel for user 2 to range.
`BB:EVDO:USER2:RPC:RANG:COUN 200`
sets the number of RPC bits to 200.

Manual operation: See "RPC Range Count" on page 34

[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:ZONE<ch0>:BIT <Bit>

The Reverse Power Control (RPC) pattern is defined in form of table with four zones (zone 0 .. 3). For each zone, a bit and a cont can be defined.

This parameter defines the RPC bits sent within the specific zone of the RPC Pattern.

Parameters:

<Bit> 0 | 1

Range: 0 to 1
*RST: 0

Example: `BB:EVDO:USER2:RPC:MODE PATT`
sets the mode of the Reverse Power Control (RPC) Channel within the MAC channel for user 2 to pattern, i.e. a user-defined sequence will be transmitted.
`BB:EVDO:USER2:RPC:ZONE1:BIT 1`
sets the bit for zone 1 to 1.

Manual operation: See "RPC Pattern" on page 34

[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:ZONE<ch0>:COUNt <Count>

The Reverse Power Control (RPC) pattern is defined in form of table with four zones (zone 0 .. 3). For each zone, a bit and a count can be defined.

This parameter defines the number of RPC bits sent within the specific zone of the RPC Pattern.

Parameters:

<Count> integer

Range: 1 to 128
*RST: 0

Example: `BB:EVDO:USER2:RPC:MODE PATT`
sets the mode of the Reverse Power Control (RPC) Channel within the MAC channel for user 2 to pattern, i.e. a user-defined sequence will be transmitted.
`BB:EVDO:USER2:RPC:ZONE1:COUNT 10`
sets the number of RPC bits for zone 1 to 10.

Manual operation: See "RPC Pattern" on page 34

[:SOURce<hw>]:BB:EVDO:USER<st>:SCOunt?

Queries the slot count of the packets sent to the selected user.

Return values:

<SCount> integer

Example: `BB:EVDO:ANET:SUBT S2`
sets the physical layer subtype to 2.
`BB:EVDO:USER2:RATE:IND 4`
sets the rate index of user 2 to 4.
`BB:EVDO:USER2:PSIZ PS256`
sets the packet size for user 2 to 256.
`SOUR:BB:EVDO:USER2:SCO?`
queries the number of slots for user 2.
`Response: 2`

Usage: Query only

Manual operation: See "Slot Count" on page 32

[:SOURce<hw>]:BB:EVDO:USER<st>:STATe <State>

Enables or disables the selected user. If the user is enabled, the proper MAC Index will be placed within the MAC channel and packets may be sent to the user. If disabled, the MAC Index will not be present within the MAC channel and packets may not be sent to the user.

Note: Disabling the state of a user during a transfer aborts all transfers to the user.

Parameters:
<State> 0 | 1 | OFF | ON
*RST: ON (user 1); OFF (user 2 .. 4)

Example: `BB:EVDO:USER2:STAT ON`
activates user 2.

Manual operation: See "State (User)" on page 26

5.10 Configure Access Terminal

[:SOURce<hw>]:BB:EVDO:PREDefined....94
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:GAIN....95
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:GATing....96
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:MODE....96
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:STATe....97
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:VALues....97
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACYCle:DURation....97
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACYCle:OFFSet....98
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:APCHannel:GAIN....98
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:APCHannel:PAYLoad:MINimum....98
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:APCHannel:STATe....99
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:CLENgth....99
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA....99
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA:DSELection....100
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA:PATTern....100
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DRATe....100

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:FCS[:STATe] 101
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:GAIN 101
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:CCODing 101
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:COUNt 102
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA 102
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA:DSELection 103
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA:PATTern 103
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DRATe? 104
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:FCS[:STATe] 104
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:GAIN 105
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:INFinite 105
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:MODulation? 106
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:PSIZe 106
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:STATe 107
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:SUBPackets[:COUNt] 107
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:STATe 107
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DQSPreading 108
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:COVer 108
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:GAIN 108
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:GATing[:STATe] 109
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:LENGth 109
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:STATe 109
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:VALues 109
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:GAIN 110
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:LENGth 110
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:STATe 110
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:VALues 111
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:IMASk 111
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:MODE 111
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:PCHannel:GAIN 112
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:PCHannel:STATe? 112
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:PLENgth 112
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:QMASk 113
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:RRIChannel:GAIN 113
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:RRIChannel:STATe 113
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:STATe 113
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:SUBType 114

[:SOURce<hw>]:BB:EVDO:PREDefined <Predefined>

Sets the UL setting of Terminal 1 to one of the predefined configurations.

The predefined settings are made according to 3GPP2 C.S0032-A to allow easy receiver testing.

Parameter	Description
USER	there are no predefined settings
ULS1DR9K6	UL, Subtype 1, 9.6 kbps.

Parameter	Description
ULS1DR19K2	UL, Subtype 1, 19.2 kbps.
ULS1DR38K4	UL, Subtype 1, 38.4 kbps.
ULS1DR76K8	UL, Subtype 1, 76.8 kbps.
ULS1DR153K6	UL, Subtype 1, 153.6 kbps.
ULS2PS128LL	UL, Subtype 2, 128 bits payload, Low Latency.
ULS2PS256HC	UL, Subtype 2, 256 bits payload, Hight Capacity.
ULS2PS256LL	UL, Subtype 2, 256 bits payload, Low Latency.
ULS2PS512LL	UL, Subtype 2, 512 bits payload, Low Latency.
ULS2PS768LL	UL, Subtype 2, 768 bits payload, Low Latency.
ULS2PS1024LL	UL, Subtype 2, 1024 bits payload, Low Latency.
ULS2PS1536LL	UL, Subtype 2, 1536 bits payload, Low Latency.
ULS2PS2048LL	UL, Subtype 2, 2048 bits payload, Low Latency.
ULS2PS3072LL	UL, Subtype 2, 3072 bits payload, Low Latency.
ULS2PS4096LL	UL, Subtype 2, 4096 bits payload, Low Latency.
ULS2PS6144LL	UL, Subtype 2, 6144 bits payload, Low Latency.
ULS2PS8192LL	UL, Subtype 2, 8192 bits payload, Low Latency.
ULS2PS12288LL	UL, Subtype 2, 12288 bits payload, Low Latency.

Parameters:

<Predefined> USER | ULS1DR9K6 | ULS1DR19K2 | ULS1DR38K4 | ULS1DR76K8 | ULS1DR153K6 | ULS2PS128LL | ULS2PS256HC | ULS2PS256LL | ULS2PS512LL | ULS2PS768LL | ULS2PS1024LL | ULS2PS1536LL | ULS2PS2048LL | ULS2PS3072LL | ULS2PS4096LL | ULS2PS6144LL | ULS2PS8192LL | ULS2PS12288LL

*RST: USER

Example: `BB:EVDO:PRED ULS2PS256HC`
sets the UL settings of Terminal 1 to UL of Subtype 2 with 256 bits payload and Hight Capacity.
`BB:EVDO:TERM1:SUBT?`
Response: S2.
`BB:EVDO:TERM1:DCH:PACK1:PSIZ?`
Response: 256

Manual operation: See "Predefined Settings" on page 42

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:GAIN <Gain>

(enabled for access terminal working in traffic mode)

Sets the gain of the ACK channel relative to the pilot channel power.

Parameters:

<Gain> float

Range: -80 dB to 10 dB
*RST: 0 dB

Example: `BB:EVDO:TERM2:ACKC:GAIN -10`
sets the relative gain of ACK channel to -10 dB

Manual operation: See "Relative Gain (ACK Channel)" on page 47

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:GATing <Gating>

(enabled for access terminal working in traffic mode)

Sets the active and inactive slots of the ACK channel. This parameter is in binary format and has a maximal length of 16 bits.

The sequence starts at frame 0 and slot 0 and is repeated with the length of the pattern.A 0 gates the ACK channel off for the corresponding slot, a 1 activates the channel.

Parameters:

<Gating> integer

*RST: 0001

Example: `BB:EVDO:TERM2:ACKC:GAT #B11001100,8`
sets slots 3, 4, 7 and 8 of ACK channel as inactive.

Manual operation: See "Gating (ACK Channel)" on page 47

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:MODE <Mode>

(enabled for access terminal working in traffic mode)

Specifies the modulation mode of the ACK channel.

With BPSK modulation, a 0 (ACK) is mapped to +1 and a 1 (NAK) to -1.With OOK modulation, a 0 (ACK) is mapped to ON and a 1 (NAK) to OFF.

Parameters:

<Mode> BPSK | OOK

BPSK
Sets the modulation to BPSK (Binary Phase Shift Keying).

OOK
Sets the modulation to OOK (On-Off Keying).
Note: This value is only enabled for physical layer subtype 2.

*RST: BPSK

Example: `BB:EVDO:TERM2:MODE TRAF`
sets the mode of terminal 2 to traffic.
`BB:EVDO:TERM2:SUBT S2`
sets the physical layer subtype of terminal 2 to 2.
`BB:EVDO:TERM2:ACKC:MODE OOK`
selects OOK modulation for ACK channel of terminal 2.

Manual operation: See "Mode (ACK Channel)" on page 47

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:STATe <State>

(enabled for access terminal working in traffic mode)

Enables or disables the ACK channel.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: ON

Example: `BB:EVDO:TERM2:ACKC:STAT OFF`
deactivates the ACK channel for terminal 2.

Manual operation: See "State (ACK Channel)" on page 47

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:VALues <Values>

(enabled for access terminal working in traffic mode)

Specifies the data pattern transmitted on the ACK Channel.

The sequence starts at frame 0 and slot 0 and is repeated with the length of the pattern.A 0 specifies an ACK, a 1 specifies a NAK. The pattern is only read for slots that are gated on.This parameter is in binary format and has a maximal length of 16 bits.

Parameters:

<Values> integer
*RST: 01

Example: `BB:EVDO:TERM2:ACKC:VAL #B011,3`
sets the data pattern transmitted on the ACK channel for terminal 2.

Manual operation: See "Values (ACK Channel)" on page 48

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACYCle:DURation <Duration>

(enabled for access terminal working in access mode)

Sets the access cycle duration in slots. Access probes are repeated with a period of access cycle duration slots.

Parameters:

<Duration> float
Range: 1 to 255
*RST: 16

Example: `BB:EVDO:TERM2:MODE ACC`
enables terminal 2 to work in access mode.
`BB:EVDO:TERM2:ACYC:DUR 20`
sets the duration of the access cycle for terminal 2 to 20 slots.

Manual operation: See "Access Cycle Duration" on page 43

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACYCle:OFFSet <Offset>

(enabled for access terminal working in access mode)

The Access Channel transmission starts with this number of slots relative to the beginning of each access cycle duration.

Parameters:

<Offset> integer

Range: 0 to 12
Increment: -
*RST: 0

Example: `BB:EVDO:TERM2:MODE ACC`
enables terminal 2 to work in access mode.
`BB:EVDO:TERM2:ACYC:OFFS 10`
sets the offset of the Access Channel to 10.

Manual operation: See "Access Cycle Offset" on page 44

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:APCHannel:GAIN <Gain>

(enabled for Physical Layer subtype 2 and for an access terminal working in traffic mode)

Sets the gain of the auxiliary pilot channel relative to the data channel power.

Note: All other channel gains are specified relative to the pilot power, but the auxiliary pilot gain is specified relative to the data channel power.

Parameters:

<Gain> float

Range: -80.0 dB to 10.0 dB
*RST: 0 dB

Example: `BB:EVDO:TERM2:APCH:GAIN -10`
sets the relative gain of auxiliary pilot channel to -10 dB

Manual operation: See "Relative Gain (Auxiliary Pilot Channel)" on page 44

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:APCHannel:PAYLoad:MINimum <Minimum>

(enabled for Physical Layer subtype 2 and for an access terminal working in traffic mode)

Sets the minimum payload size in bits of the Data Channel that activates the transmission of the Auxiliary Pilot Channel.

Parameters:

<Minimum> PS128 | PS256 | PS512 | PS768 | PS1024 | PS1536 | PS2048 | PS3072 | PS4096 | PS6144 | PS8192 | PS12288

*RST: PS128

Example: `BB:EVDO:TERM2:APCH:PAYL:MIN PS256`
sets the minimum payload of the auxiliary pilot channel to 256 bits.

Manual operation: See "Minimum Payload (Auxiliary Pilot Channel)" on page 44

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:APCHannel:STATe <State>

(enabled for Physical Layer subtype 2 and for an access terminal working in traffic mode)

Enables or disables the auxiliary pilot channel.

Parameters:

<State> 0 | 1 | OFF | ON
*RST: ON

Example: `BB:EVDO:TERM2:APCH:STAT OFF`
deactivates the auxiliary pilot channel for terminal 2.

Manual operation: See "State (Auxiliary Pilot Channel)" on page 44

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:CLENgth <CLength>

(enabled for access terminal working in access mode)

Sets the number of frames (16 slots each) to be transmitted after the preamble. Each frame contains one data packet.

Parameters:

<CLength> integer
Range: 1 to 15 frames
*RST: 1 frame

Example: `BB:EVDO:TERM2:MODE ACC`
enables terminal 2 to work in access mode.
`BB:EVDO:TERM2:DCH:CLEN 10`
for terminal 2, 10 frames will be transmitted after the preamble.

Manual operation: See "Capsule Length (Data Channel)" on page 52

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA <Data>

Selects the data source.

Parameters:

<Data> ZERO | ONE | PATTern | PN9 | PN11 | PN15 | PN16 | PN20 | PN21 | PN23 | DLISt
*RST: PN9

Example: `SOURce:BB:EVDO:TERMinal2:DCHannel:DATA PATTern`
sets the data source of terminal 2 to pattern.
`SOURce:BB:EVDO:TERMinal2:DCHannel:DATA:PATTern #H3F,8`
sets the pattern for the data source of terminal 2.

Example: `SOURce:BB:EVDO:TERMinal2:DCHannel:DATA DLISt`
sets the data source of terminal 2 to data list.
`MMEM:CDIR "/var/user/temp/datalists"`
selects the directory for the data lists.
`SOURce:BB:EVDO:TERMinal2:DCHannel:DATA:DSELection "datalist.dm_iqd"`
selects `datalist.dm_iqd` file as data source. This file must be in the directory `/var/user/temp/datalists` and have a file extension `*.dm_iqd`.

Manual operation: See "Data Source (Data Channel)" on page 53

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA:DSELection <Filename>

Selects the data list for the data source.

Parameters:
<Filename> string

Example: see `[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA` on page 99

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA:PATTern <Pattern>

Selects the bit pattern for the data source.

Parameters:
<Pattern> integer

Example: see `[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA` on page 99

Manual operation: See "Data Source (Data Channel)" on page 53

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DRATe <DRate>

(enabled for an access terminal working in access mode)

Selects the data rate for the Data Channel.

Parameters:
<DRate> DR4K8 | DR9K6 | DR19K2 | DR38K4 | DR76K8 | DR153K6 | DR307K2 | DR614K4 | DR921K6 | DR1228K8 | DR1536K | DR1843K2 | DR2457K6 | DR3072K | DR460K8 | DR768K | DR1075K2 | DR2150K4 | DR3686K4 | DR4300K8 | DR4915K2

*RST: 9.6 kbps

Example: `BB:EVDO:TERM2:MODE ACC`
enables terminal 2 to work in access mode.
`BB:EVDO:TERM2:DCH:DRAT DR19K2`
sets the data rate of the data channel for terminal 2 to 19.2 kbps.

Manual operation: See "Data Rate (Data Channel)" on page 53

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:FCS[:STATe] <State>

(enabled for an access terminal working in access mode)

Enables or disables appending a standard Frame Check Sequence (FCS) to the MAC layer packet.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: ON

Example: `BB:EVDO:TERM2:MODE ACC`
enables terminal 2 to work in access mode.
`BB:EVDO:TERM2:DCH:FCS:STAT OFF`
disables appending of FCS to the MAC layer for terminal 2.

Manual operation: See "Append FCS (Data Channel)" on page 53

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:GAIN <Gain>

(enabled for an access terminal working in access mode)

Sets the gain in dB of the Data Channel relative to the pilot channel power.

Parameters:

<Gain> float

Range: -80 to 10 dB
Increment: 0.01
*RST: 0 dB

Example: `BB:EVDO:TERM2:MODE ACC`
enables terminal 2 to work in access mode.
`BB:EVDO:TERM2:DCH:GAIN -10`
sets the relative gain of data channel to -10 dB

Manual operation: See "Relative Gain (Data Channel)" on page 52

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:CCODing <CCoding>

(enabled for an access terminal working in traffic mode)

Activates or deactivates channel coding, including scrambling, turbo encoding and channel interleaving.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Parameters:

<CCoding> 0 | 1 | OFF | ON

*RST: ON

Example: `BB:EVDO:TERM2:MODE TRAF`
enables terminal 2 to work in traffic mode.
`BB:EVDO:TERM2:SUBT S2`
sets physical layer subtype 2 for terminal 2.
`BB:EVDO:TERM2:DCH:PACK3:CCOD OFF`
disables channel coding for packet 3.

Manual operation: See "Channel Coding (Packet)" on page 51

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:COUNt <Count>

(enabled for an access terminal working in traffic mode)

Sets the number of packets to be sent.

The number of packets to be send depends on whether the parameter "Infinite Packets" is enabled or disabled. If "Infinite Packets "is enabled, there is no limit to the number of packets sent.

If "Infinite Packets" is disabled, the number of packets can be specified. In this case the data channel will be switched off after the specified number of packets have been sent.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Parameters:

<Count> integer

Range: 0 to 65536
*RST: 65536

Example: `BB:EVDO:TERM2:MODE TRAF`
enables terminal 2 to work in traffic mode.
`BB:EVDO:TERM2:SUBT S2`
sets physical layer subtype 2 for terminal 2.
`BB:EVDO:TERM2:DCH:PACK3:INF OFF`
disables sending of unlimited umber of packets.
`BB:EVDO:TERM2:DCH:PACK3:COUN 2000`
sets number of packets to be send to 2000.

Manual operation: See "Number of Packets to Send (Packet)" on page 49

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA <Data>

Selects the data source of an access terminal working in traffic mode

Parameters:

<Data> ZERO | ONE | PATTern | PN9 | PN11 | PN15 | PN16 | PN20 | PN21 | PN23 | DLISt

*RST: PN9

Example: `SOURce:BB:EVDO:TERMinal2:MODE TRAFfic`
enables terminal 2 to work in traffic mode.
`SOURce:BB:EVDO:TERMinal2:SUBType S2`
sets physical layer subtype 2 for terminal 2.
`SOURce:BB:EVDO:TERMinal2:DCHannel:PACKet3:DATA PATTern`
sets the data source of terminal 2 to pattern.
`SOURce:BB:EVDO:TERMinal2:DCHannel:PACKet3: PATTern #H3F,8`
sets the pattern for the data source of terminal 2.

Example: `SOURce:BB:EVDO:TERMinal2:DCHannel:PACKet1:DATA DLISt`
sets the data source of terminal 2, packet 1 to data list.
`MMEM:CDIR "/var/user/temp/datalists"`
selects the directory for the data lists.
`SOURce:BB:EVDO:TERMinal2:DCHannel:PACKet1:DATA: DSELection "datalist.dm_iqd"`
selects `datalist.dm_iqd` file as data source. This file must be in the directory `/var/user/temp/datalists` and have a file extension `*.dm_iqd`.

Manual operation: See "Data Source (Packet)" on page 51

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA: DSELection <Filename>

(enabled for an access terminal working in traffic mode)

Selects the data list for the data source.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Parameters:
<Filename> string

Example: see `[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel: PACKet<ch>:DATA` on page 102

Manual operation: See "DList/ Pattern (Packet)" on page 52

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA: PATTern <Pattern>

(enabled for an access terminal working in traffic mode)

Selects the bit pattern for the data source.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Parameters:
<Pattern> integer

Example: see `[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA` on page 102

Manual operation: See "DList/ Pattern (Packet)" on page 52

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DRATe?

(enabled for an access terminal working in traffic mode)

Displays the data rate in kbps of the selected packet.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Return values:

<DRate> float

Range: 0 to ...

Example: `BB:EVDO:TERM2:MODE TRAF`
enables terminal 2 to work in traffic mode.
`BB:EVDO:TERM2:DCH:PACK2:DRAT?`
queries the data rate of the packet number 2 for terminal 2.
`Response: '6.4'`
the data rate of packet 2 is 6.4 kbps.

Usage: Query only

Manual operation: See "Data Rate (Packet)" on page 51

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:FCS[:STATe]
<State>

(enabled for an access terminal working in traffic mode)

Enables or disables appending a standard Frame Check Sequence (FCS) and tail to the MAC layer packet.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: ON

Example: `BB:EVDO:TERM2:MODE ACC`
enables terminal 2 to work in access mode.
`BB:EVDO:TERM2:DCH:PACK:FCS:STAT OFF`
disables appending of FCS to the MAC layer for terminal 2, packet 1.

Manual operation: See "FCS (Packet)" on page 52

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:GAIN <Gain>

(enabled for an access terminal working in traffic mode)

Sets the gain in dB of the Data Channel relative to the pilot channel power.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Parameters:

<Gain> float

Range: -80 dB to 10 dB
Increment: -
*RST: 0 dB

Example: `BB:EVDO:TERM2:MODE TRAF`
enables terminal 2 to work in traffic mode.
`BB:EVDO:TERM2:SUBT S2`
sets the physical layer subtype of terminal 2 to 2.
`BB:EVDO:TERM2:DCH:PACK3:GAIN -10`
sets the relative gain of packet 3 to -10 dB

Manual operation: See "Relative Gain (Packet)" on page 49

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:INFinite <Infinite>

(enabled for an access terminal working in traffic mode)

Enables or disables sending an unlimited number of packets.

The parameter "Number of Packets to be Send" depends on whether the parameter "Infinite Packets" is enabled or disabled. If "Infinite Packets" is enabled, there is no limit to the number of packets sent.

If "Infinite Packets" is disabled, the number of packets can be specified.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Parameters:

<Infinite> 0 | 1 | OFF | ON

*RST: ON

Example: `BB:EVDO:TERM2:MODE TRAF`
enables terminal 2 to work in traffic mode.
`BB:EVDO:TERM2:SUBT S2`
sets physical layer subtype 2 for terminal 2.
`BB:EVDO:TERM2:DCH:PACK3:INF OFF`
disables sending of unlimited umber of packets.
`BB:EVDO:TERM2:DCH:PACK3:COUN 2000`
sets number of packets to be send to 2000.

Manual operation: See "Infinite Packets (Packet)" on page 49

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:MODulation?

(enabled for physical layer subtype 2 and for an access terminal working in traffic mode)

Displays the modulation type per packet.

Return values:

<Modulation> B4 | Q4 | Q2 | Q4Q2 | E4E2

B4
The modulation type is set to BPSK modulation with 4-ary Walsh cover.

Q4
The modulation type is set to QPSK modulation with 4-ary Walsh cover.

Q2
The modulation type is set to QPSK modulation with 2-ary Walsh cover.

Q4Q2
Sum of Q4 and Q2 modulated symbols.

E4E2
Sum of E4 (8-PSK modulated with 4-ary Walsh cover) and E2 (8-PSK modulated with 2-ary Walsh cover) modulated symbols.

*RST: B4

Example: `BB:EVDO:TERM2:DCH:PACK3:MOD?`
queries the modulation for packet 3 of terminal 2.

Usage: Query only

Manual operation: See "Modulation (Packet)" on page 50

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:PSIZe <PSize>

(enabled for an access terminal working in traffic mode)

Sets the Payload Size in bits for the selected packet.

Note: Configuration of Packet 2 and Packet 3 transmitted on the second and the third subframe, is only enabled for physical layer subtype 2.

Parameters:

<PSize> PS128 | PS256 | PS512 | PS768 | PS1024 | PS1536 | PS2048 | PS3072 | PS4096 | PS6144 | PS8192 | PS12288

Example: `BB:EVDO:TERM2:MODE TRAF`
enables terminal 2 to work in traffic mode.
`BB:EVDO:TERM2:SUBT S2`
sets the physical layer subtype of terminal 2 to 2.
`BB:EVDO:TERM2:DCH:PACK3:PSIZ PS512`
sets the payload size fro packet 3 to 512.

Manual operation: See "Payload Size (Packet)" on page 50

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:STATe <State>

For an access terminal working in traffic mode, enables or disables the state of the packet(s).

Parameters:

<State> 0 | 1 | OFF | ON

*RST: 1

Example: `BB:EVDO:TERM2:MODE TRAF`
enables terminal 2 to work in traffic mode.
`BB:EVDO:TERM2:SUBT S2`
sets the physical layer subtype of terminal 2 to 2.
`BB:EVDO:TERM2:DCH:PACK2:STAT OFF`
deactivates packet 2 of terminal 2.

Manual operation: See "State (Packet)" on page 48

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:SUBPackets[:COUNt] <Count>

(enabled for physical layer subtype 2 and for an access terminal working in traffic mode)

Sets the number of sub-packets to be sent.

Parameters:

<Count> integer

Range: 1 to 4
*RST: 1

Example: `BB:EVDO:TERM2:MODE TRAF`
enables terminal 2 to work in traffic mode.
`BB:EVDO:TERM2:SUBT S2`
sets physical layer subtype 2 for terminal 2.
`BB:EVDO:TERM2:DCH:PACK3:SUBP:COUN 4`
sets the number of sub-packets to 4, i.e. subpacket 0, 1, 2 and 3 of a packet will be sent in a subframe each (with 2 subframes interleaving between) before the next packet is started.
This is to simulate a situation where 3 times NAK has been received freom the basestation with an ACK after the 4th sub-packet

Manual operation: See "Number of Sub-packets (Packet)" on page 50

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:STATe <State>

(enabled for an access terminal working in access mode)

Enables or disables the state of the Data Channel.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: ON

Example: `BB:EVDO:TERM2:MODE ACC`
enables terminal 2 to work in access mode.
`BB:EVDO:TERM2:DCH:STAT OFF`
disables data channel for terminal 2.

Manual operation: See "State (Data Channel)" on page 52

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DQSPreading <DqSpreading>

Disables the quadrature spreading (complex multiply) with PN sequences and long code.

Parameters:
<DqSpreading> 0 | 1 | OFF | ON
*RST: OFF

Example: `BB:EVDO:TERM2:DQSP ON`
enables using quadrature spreading with PN sequence and long code.

Manual operation: See "Disable Quad. Spreading" on page 43

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:COVer <Cover>

(enabled for an access terminal working in traffic mode)

Selects the Data Rate Control (DRC) Channel walsh cover.

Parameters:
<Cover> integer
Range: 0 to 7
*RST: 7

Example: `BB:EVDO:TERM2:DRCC:COV 1`
sets the DRC cover to 1.

Manual operation: See "Cover (DRC Channel)" on page 46

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:GAIN <Gain>

(enabled for an access terminal working in traffic mode)

Sets the gain of the Data Rate Control (DRC) channel relative to the pilot channel power.

Parameters:
<Gain> float
Range: -80 dB to 10 dB
Increment: -
*RST: 0 dB

Example: `BB:EVDO:TERM2:DRCC:GAIN 10`
sets the relative gain for DRC to 10 dB.

Manual operation: See "Relative Gain (DRC Channel)" on page 46

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:GATing[:STATe] <State>

(enabled for an access terminal working in traffic mode)

Activates or deactivates the Data Rate Control (DRC) Channel gating.

If gating is active, each value of the DRC channel is transmitted for one slot followed by DRCLenght-1 empty slots.

With deactivated gating, each DRC value is repeated for DRC length slots.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: ON

Example: `BB:EVDO:TERM2:DRCC:GAT:STAT OFF`
deactivates DRC gating.

Manual operation: See "Gating Active (DRC Channel)" on page 46

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:LENGth <Length>

(enabled for an access terminal working in traffic mode)

Specifies the transmission duration of the Data Rate Control (DRC) channel in slots.

Parameters:

<Length> DL1 | DL2 | DL4 | DL8

*RST: DL1

Example: `BB:EVDO:TERM2:DRCC:LENG DL2`
sets the transmission duration of DRC to 2 slots.

Manual operation: See "Length (DRC Channel)" on page 46

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:STATe <State>

(enabled for an access terminal working in traffic mode)

Enables or disables the state of the Data Rate Control (DRC) channel.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: ON

Example: `BB:EVDO:TERM2:DRCC:STAT OFF`
deactivates DRC channel.

Manual operation: See "State (DRC Channel)" on page 46

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:VALues <Values>

(enabled for an access terminal working in traffic mode)

Specifies the pattern transmitted on the Data Rate Control (DRC) Channel. The sequence starts at frame 0 and slot 0 and is repeated with the length of the pattern. Each specified value is used for DRC length slots.

Parameters:

<Values> integer

*RST: 1

Example: `BB:EVDO:TERM2:DRCC:VAL #H7,4`
sets transmitted pattern on DRC to #H7,4.

Manual operation: See "Values (DRC Channel)" on page 46

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:GAIN <Gain>

(enabled for Physical Layer subtype 2 and for an access terminal working in traffic mode)

Sets the gain of the Data Source Control (DSC) channel relative to the pilot channel power.

Parameters:

<Gain> float

Range: -80 dB to 10 dB
Increment: -
*RST: 0 dB

Example: `BB:EVDO:TERM2:DSCC:GAIN 10`
sets the relative gain for DSC to 10 dB.

Manual operation: See "Relative Gain (DSC Channel)" on page 45

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:LENGth <Length>

(enabled for Physical Layer subtype 2 and for an access terminal working in traffic mode)

Specifies the transmission duration of the Data Source Control (DSC) channel in slots.

Parameters:

<Length> integer

Range: 8 to 256
Increment: 8
*RST: 8

Example: `BB:EVDO:TERM2:DSCC:LENG 16`
sets the transmission duration of DSC to 16 slots.

Manual operation: See "Length (DSC Channel)" on page 45

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:STATe <State>

(enabled for Physical Layer subtype 2 and for an access terminal working in traffic mode)

Enables or disables the state of the Data Source Control (DSC) channel.

Parameters:
<State> 0 | 1 | OFF | ON
*RST: ON

Example: `BB:EVDO:TERM2:DSCC:STAT OFF`
deactivates DSC channel.

Manual operation: See "State (DSC Channel)" on page 45

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:VALues <Values>

(enabled for Physical Layer subtype 2 and for an access terminal working in traffic mode)

Specifies the pattern transmitted on the Data Source Control (DSC) Channel.

The sequence starts at frame 0 and slot 0 and is repeated with the length of the pattern. Each specified value is transmitted for DSC length slots.

Parameters:
<Values> integer
*RST: 0

Example: `BB:EVDO:TERM2:DSCC:VAL #H147,12`
sets transmitted pattern on DSC to #H147,12.

Manual operation: See "Values (DSC Channel)" on page 45

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:IMASk <IMask>

Sets the long code mask of the I channel.

Parameters:
<IMask> integer
*RST: 0000 0000 0000

Example: `BB:EVDO:TERM2:IMAS #H2FFFFFFFFFFF,42`
sets the long code mask for I channel to #H2FFFFFFFFFFF,42.

Manual operation: See "Long Code Mask I (hex)" on page 43

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:MODE <Mode>

Sets the mode (Traffic or Access) of the selected access terminal.

Parameters:
<Mode> ACCess | TRAFfic
*RST: TRAFfic

Example: `BB:EVDO:TERM2:MODE ACC`
sets the mode of terminal 2 to access.

Manual operation: See "Mode (Access Terminal)" on page 43

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:PCHannel:GAIN <Gain>

Sets the gain of the pilot channel.

Gains of other channels are relative to the Pilot Channel power.

This setting is used to distinguish the power between access terminals, when more than one access terminal is active.

Parameters:

<Gain> float

Range: -80 to 10 dB
Increment: 0.01
*RST: 0 dB

Example: `BB:EVDO:TERM2:PCH:GAIN 10`
sets the gain of pilot channel to 10 dB.

Manual operation: See "Gain (Pilot Channel)" on page 44

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:PCHannel:STATe?

Displays the state of the pilot channel.

Note: The pilot channel is always switched on.

Return values:

<State> 0 | 1 | OFF | ON

*RST: ON

Example: `BB:EVDO:TERM2:PCH:STAT?`
queries the state of the pilot channel.

Usage: Query only

Manual operation: See "State (Pilot Channel)" on page 44

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:PLENgth <PLength>

(enabled for access terminal working in access mode)

Specifies the length of the preamble in frames (16 slots each) of the acces probe.

Parameters:

<PLength> integer

Range: 1 frame to 7 frames
*RST: 1 frame

Example: `BB:EVDO:TERM2:PLEN 7`
sets the preamble length to 7 frames.

Manual operation: See "Preamble Length" on page 43

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:QMASk <QMask>

Sets the long code mask of the Q channel.

Parameters:

<QMask> integer

*RST: 0000 0000 000

Example: `BB:EVDO:TERM2:IMAS #H3FFFFFFFFFFF,42`
sets the long code mask for I channel to #H3FFFFFFFFFFF,42.

Manual operation: See "Long Code Mask Q (hex)" on page 43

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:RRIChannel:GAIN <Gain>

(enabled for an access terminal working in traffic mode)

Sets the gain of the Reverse Rate Indicator (RRI) channel relative to the pilot channel power.

Parameters:

<Gain> float

Range: -80 to 10 dB
Increment: 0.01
*RST: 0 dB

Example: `BB:EVDO:TERM2:RRIC:GAIN 10`
sets the gain of pilot channel to 10 dB.

Manual operation: See "Relative Gain (RRI Channel)" on page 45

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:RRIChannel:STATe <State>

(enabled for an access terminal working in traffic mode)

Enables or disables the state of the Reverse Rate Indicator (RRI) channel.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: ON

Example: `BB:EVDO:TERM2:RRIC:STAT OFF`
disables the RRI channel..

Manual operation: See "State (RRI Channel)" on page 45

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:STATe <State>

(enabled for an access terminal working in traffic mode)

Enables or disables the state of the Reverse Rate Indicator (RRI) channel.

Parameters:

<State> 0 | 1 | OFF | ON

*RST: ON (access terminal 1)

Example: `BB:EVDO:TERM2:RRIC:STAT OFF`
disables the RRI channel..

Manual operation: See "State (Access Terminal)" on page 43

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:SUBType <Subtype>

Selects the physical layer subtype for the selected access terminal.

Parameters:

<Subtype> S1 | S2

*RST: 2

Example: `BB:EVDO:TERM2:SUBT S2`
sets the physical layer subtype 2.

Manual operation: See "Physical Layer Subtype (Access Terminal)" on page 43

List of Commands

[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:PSOFfset....78
[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:RATE....78
[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:REVision:MAXimum....78
[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:REVision:MINimum....79
[:SOURce<hw>]:BB:EVDO:ANETwork:CCHannel:STATe....79
[:SOURce<hw>]:BB:EVDO:ANETwork:CPMode....79
[:SOURce<hw>]:BB:EVDO:ANETwork:OUCount....79
[:SOURce<hw>]:BB:EVDO:ANETwork:PCHannel:STATe?....80
[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:LENGth....80
[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:LEVel....80
[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:MAC:INDex....81
[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:OFFSet....81
[:SOURce<hw>]:BB:EVDO:ANETwork:RAB:STATe....81
[:SOURce<hw>]:BB:EVDO:ANETwork:SUBType....81
[:SOURce<hw>]:BB:EVDO:CLIPping:LEVel....65
[:SOURce<hw>]:BB:EVDO:CLIPping:MODE....65
[:SOURce<hw>]:BB:EVDO:CLIPping:STATe....65
[:SOURce<hw>]:BB:EVDO:CLOCk:MODE....76
[:SOURce<hw>]:BB:EVDO:CLOCk:MULTiplier....77
[:SOURce<hw>]:BB:EVDO:CLOCk:SOURce....77
[:SOURce<hw>]:BB:EVDO:CRATe:VARiation....66
[:SOURce<hw>]:BB:EVDO:DOWN:MC:BCLass....82
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRier<ch>:CHANnel....82
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRier<ch>:FREQuency....83
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CARRier<ch>:STATe....83
[:SOURce<hw>]:BB:EVDO:DOWN:MC:CFRequency?....83
[:SOURce<hw>]:BB:EVDO:DOWN:MC:STATe....84
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:APCO25....66
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:COSine....66
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:GAUSs....67
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:LPASSEVM....67
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:LPASs....67
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:PGAuss....68
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:RCOSine....68
[:SOURce<hw>]:BB:EVDO:FILTer:PARameter:SPHase....68
[:SOURce<hw>]:BB:EVDO:FILTer:TYPE....68
[:SOURce<hw>]:BB:EVDO:IQSWap:STATe....69
[:SOURce<hw>]:BB:EVDO:LINK....61
[:SOURce<hw>]:BB:EVDO:PNOFfset....61
[:SOURce<hw>]:BB:EVDO:PREDefined....94
[:SOURce<hw>]:BB:EVDO:PRESet....61
[:SOURce<hw>]:BB:EVDO:SETTing:CATalog?....62
[:SOURce<hw>]:BB:EVDO:SETTing:DELete....62
[:SOURce<hw>]:BB:EVDO:SETTing:LOAD....62
[:SOURce<hw>]:BB:EVDO:SETTing:STORe....62

[:SOURce<hw>]:BB:EVDO:SETTing:STORe:FAST....63
[:SOURce<hw>]:BB:EVDO:SLENgth....63
[:SOURce<hw>]:BB:EVDO:STATe....63
[:SOURce<hw>]:BB:EVDO:STIMe....63
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:GAIN....95
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:GATing....96
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:MODE....96
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:STATe....97
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACKChannel:VALues....97
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACYCle:DURation....97
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:ACYCle:OFFSet....98
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:APCHannel:GAIN....98
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:APCHannel:PAYLoad:MINimum....98
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:APCHannel:STATe....99
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:CLENgth....99
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA....99
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA:DSELection....100
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DATA:PATTern....100
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:DRATe....100
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:FCS[:STATe]....101
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:GAIN....101
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:CCODing....101
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:COUNt....102
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA....102
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA:DSELection....103
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DATA:PATTern....103
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:DRATe?....104
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:FCS[:STATe]....104
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:GAIN....105
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:INFinite....105
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:MODulation?....106
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:PSIZe....106
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:STATe....107
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:PACKet<ch>:SUBPackets[:COUNt]....107
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DCHannel:STATe....107
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DQSPreading....108
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:COVer....108
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:GAIN....108
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:GATing[:STATe]....109
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:LENGth....109
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:STATe....109
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DRCChannel:VALues....109
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:GAIN....110
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:LENGth....110
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:STATe....110
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:DSCChannel:VALues....111
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:IMASk....111
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:MODE....111

[:SOURce<hw>]:BB:EVDO:TERMinal<st>:PCHannel:GAIN....112
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:PCHannel:STATe?....112
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:PLENgth....112
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:QMASk....113
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:RRIChannel:GAIN....113
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:RRIChannel:STATe....113
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:STATe....113
[:SOURce<hw>]:BB:EVDO:TERMinal<st>:SUBType....114
[:SOURce<hw>]:BB:EVDO:TRIGger:ARM:EXECute....70
[:SOURce<hw>]:BB:EVDO:TRIGger:EXECute....70
[:SOURce<hw>]:BB:EVDO:TRIGger:EXTernal:SYNChronize:OUTPut....70
[:SOURce<hw>]:BB:EVDO:TRIGger:OBASeband:DELay....70
[:SOURce<hw>]:BB:EVDO:TRIGger:OBASeband:INHibit....71
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut:DELay:FIXed....74
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:DELay....74
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:DELay:MAXimum?....75
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:DELay:MINimum?....75
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:MODE....75
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:OFFTime....76
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:ONTime....76
[:SOURce<hw>]:BB:EVDO:TRIGger:OUTPut<ch>:PERiod....76
[:SOURce<hw>]:BB:EVDO:TRIGger:RMODe?....71
[:SOURce<hw>]:BB:EVDO:TRIGger:SLENgth....71
[:SOURce<hw>]:BB:EVDO:TRIGger:SLUNit....72
[:SOURce<hw>]:BB:EVDO:TRIGger:SOURce....72
[:SOURce<hw>]:BB:EVDO:TRIGger[:EXTernal]:DELay....73
[:SOURce<hw>]:BB:EVDO:TRIGger[:EXTernal]:INHibit....74
[:SOURce<hw>]:BB:EVDO:UP:MC:BCLass....82
[:SOURce<hw>]:BB:EVDO:UP:MC:CARRier<ch>:CHANnel....82
[:SOURce<hw>]:BB:EVDO:UP:MC:CARRier<ch>:FREQuency....83
[:SOURce<hw>]:BB:EVDO:UP:MC:CARRier<ch>:STATe....83
[:SOURce<hw>]:BB:EVDO:UP:MC:CFRequency?....83
[:SOURce<hw>]:BB:EVDO:UP:MC:STATe....84
[:SOURce<hw>]:BB:EVDO:USER<st>:DATA:PATTern....84
[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:LENGth....85
[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:OFFSet....85
[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:PERiod....85
[:SOURce<hw>]:BB:EVDO:USER<st>:DRCLock:STATe....85
[:SOURce<hw>]:BB:EVDO:USER<st>:HARQ:MODE....86
[:SOURce<hw>]:BB:EVDO:USER<st>:IFACtor....86
[:SOURce<hw>]:BB:EVDO:USER<st>:MAC:INDex....87
[:SOURce<hw>]:BB:EVDO:USER<st>:MAC:LEVel....87
[:SOURce<hw>]:BB:EVDO:USER<st>:PACKet:COUNt....88
[:SOURce<hw>]:BB:EVDO:USER<st>:PACKet:INFinite....88
[:SOURce<hw>]:BB:EVDO:USER<st>:PACKet:SOFFset....88
[:SOURce<hw>]:BB:EVDO:USER<st>:PSIZe....89
[:SOURce<hw>]:BB:EVDO:USER<st>:RATE:INDex....90
[:SOURce<hw>]:BB:EVDO:USER<st>:RATE?....89

[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:INJect....90
[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:MODE....91
[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:RANGe....91
[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:ZONE<ch0>:BIT....92
[:SOURce<hw>]:BB:EVDO:USER<st>:RPC:ZONE<ch0>:COUNt....92
[:SOURce<hw>]:BB:EVDO:USER<st>:SCOunt?....92
[:SOURce<hw>]:BB:EVDO:USER<st>:STATe....93
[:SOURce<hw>]:BB:EVDO:VERSion?....64
[:SOURce<hw>]:BB:EVDO:WAVeform:CREate....64
[:SOURce<hw>]:BB:EVDO[:TRIGger]:SEQuence....69

Index

A

Access Cycle Duration 43, 97
Access Cycle Offset 44, 98
Access Network Settings
  Physical Layer Subtype 27, 38, 81
Access Networks Settings 37
Access Terminal
  Mode 43
  Physical Layer Subtype 43
  State 43
Access Terminal:Mode 111
Access Terminal:Physical Layer Subtype 114
ACK Channel
  Gatinng Active 47
  Length 47
  Relative Gain 47
  State 47
  Values 48
ACK Channel:Gatinng Active 96
ACK Channel:Length 96
ACK Channel:Relative Gain 95
ACK Channel:State 97
ACK Channel:Values 97
Armed_Auto 16, 69
Armed_Retrigger 16, 69
Arm Trigger 17, 70
Auto 16, 69
Auxiliary Pilot Channel
  Minimum Payload 44
  Relative Gain 44
  State 44
Auxiliary Pilot Channel:Minimum Payload 98
Auxiliary Pilot Channel:Relative Gain 98
Auxiliary Pilot Channel:State 99

B

Band Class 37
Baseband Clipping 55
Baseband filter 54, 68
B x T 54, 66

C

Capsule Length (Data Channel) 52, 99
CDMA Channel Number (MC) 37
Center frequency
  Band 37
  carrier (MC) 37
  Overall 37
channel Coding (Packet) 101
Channel Coding (Packet) 51
Channel configuration 37
Chip Clock Multiplier 23, 77
Chip Rate Variation 54, 66
Clipping Level 55, 65
Clipping Mode 56, 65
Clipping State 55
Clock Mode 23, 76
Clock Source 23
Configure Access Terminals 40
Configure Traffic Channels 24
Continuous Pilot Mode 38, 79
Control Channel
  Maximum Revision 39
  Minimum Revision 39
  Packet Start Offset 39
  Rate 39
  State 39
Control Channel:Maximum Revision 78
Control Channel:Minimum Revision 79
Control Channel:Packet Start Offset 78
Control Channel:Rate 78
Cover (DRC Channel) 46, 108
Crest factor 55
Crest factor - Clipping 65
Current Dynamic Range 75
Current Range without Recalculation 21
Cut Off Frequency Factor 54

D

Data Channel
  Capsule Length 52, 99
  Data List 100
  Data Rate 53, 100
  Data Source 53, 99
  FCS 53, 101
  Packet State 48
  Pattern 100
  Relative Gain 52, 101
  State 52
Data Channel:State 107
Data List (Data Channel) 100
Data List (Packet) 52, 103
Data pattern 51, 53
Data Pattern 32, 84
Data Rate 32, 89
Data Rate (Data Channel) 53, 100
Data Rate (Packet) 51, 104
Data Source (Data Channel) 53, 99
Data Source (Packet) 51, 102
Default settings 12, 61
Delay
  Marker 21
  trigger 19
Disable Quadrature Spreading 43, 108
Downlink 14, 61
DRC Channel
  Cover 46
  Gatinng Active 46
  Length 46
  Relative Gain 46
  State 46
  Values 46
DRC Channel:Cover 108
DRC Channel:Gatinng Active 109
DRC Channel:Relative Gain 108
DRC Channel:State 109
DRC Channel:Values 109
DRC Lock Length 35, 85
DRC Lock State 34, 85
DSC Channel
  Length 45
  Relative Gain 45

State 45
Values 45
DSC Channel:Length 110
DSC Channel:Relative Gain 110
DSC Channel:State 110
DSC Channel:Values 111

E

Execute Trigger 70
External Trigger Delay 19

F

FCS (Data Channel) 53, 101
FCS (Packet) 52, 104
Filtering, Clipping, ARB Settings 53
Filter Parameter 54, 66
Filter Type 54, 68
Fix marker delay to current range 21
Fix marker to dynamic range 74
Frame Offset 35, 85
Front panel connectors
see Manual "Getting Started" 5

G

Gain (Pilot Channel) 44, 112
Gating Active (ACK Channel) 47, 96
Gating Active (DRC Channel) 46, 109
Generate
Waveform file 13

H

H-ARQ Mode 35, 86

I

I/Q-Swap 57, 69
Infinite 27, 88
Infinite Packets (Packet) 49, 105
Inject RPC Pattern 90
Installation 8
Instrument tour
see Manual "Getting Started" 5
Interleave Factor 33, 86
Invert Q for Correct Baseband Output 57, 69

L

LEDs description
see Manual "Getting Started" 5
Length (ACK Channel) 47, 96
Length (DRC Channel) 46, 109
Length (DSC Channel) 45, 110
Link Direction 14, 61
Long Code Mask I channel 43, 111
Long Code Mask Q channel 43, 113

M

MAC Index 32, 87
MAC Level 33, 87
Manual Trigger 70
Marker Delay 21, 74
Marker Mode 75
Marker Period 76
Maximum Revision (Control Channel) 39, 78
Measured External Clock 23
Minimum Payload (Auxiliary Pilot Channel) 44, 98
Minimum Revision (Control Channel) 39, 79
Mode (Access Terminal) 43, 111
Modulation (Packet) 50, 106
Multi Carrier Configuration 36
Multiplier 23, 77

N

Number of Packets to Send 27, 88
Number of Packets to Send (Packet) 49, 102, 107
Number of Sub-packets (Packet) 50
Nyquist filter 54, 68

O

ON/OFF Ratio Marker 76
Other User Count 40, 79

P

Packet
Channel Coding 51
Data List 52
Data Rate 51
Data Source 51
FCS 52
Infinite Packets 49
Modulation 50
Number of Packets to Send 49
Number of Sub-packets 50
Pattern 52
Payload Size 50
Relative Gain 49
Packet:Channel Coding 101
Packet:Data List 103
Packet:Data Pattern 103
Packet: Data Rate 104
Packet:FCS 104
Packet:Infinite Packets 105
Packet:Modulation 106
Packet:Number of Packets to Send 102, 107
Packet:Payload Size 106
Packet:Relative Gain 105
Packet Size 32, 89
Packet Start Offset 27, 88
Packet Start Offset (Control Channel) 39, 78
Packet State (Data Channel) 48, 107
Pattern 51, 53
Pattern (Data Channel) 100
Pattern (Packet) 52, 103
Payload Size (Packet) 50, 106
Physical Layer Subtype 81
Physical Layer Subtype (Access Network Settings) 27, 38
Physical Layer Subtype (Access Terminal) 43, 114
Pilot Channel
Gain 44
State 39, 44
Pilot Channel:Gain 112
Pilot Channel:State 80, 112
PN Offset 14, 61
Preamble Length 43, 112
Predefined Settings 42
UL setting of Terminal 1 94

Preparing for Use
see Manual "Getting Started" 5

R

RAB Length (Reverse Activity Bit) 40, 80
RAB Level (Reverse Activity Bit) 40, 80
RAB MAC Index 40
RAB Offset (Reverse Activity Bit) 40, 81
Rate (Control Channel) 39, 78
Rate Index 28
Rear panel connectors
see Manual "Getting Started" 5
Relative Gain (ACK Channel) 47, 95
Relative Gain (Auxiliary Pilot Channel) 44, 98
Relative Gain (Data Channel) 52, 101
Relative Gain (DRC Channel) 46, 108
Relative Gain (DSC Channel) 45, 110
Relative Gain (Packet) 49, 105
Relative Gain (RRI Channel) 45, 113
Retrigger 16, 69
Reverse Activity Bit
RAB Length 40
RAB Level 40
RAB Offset 40
State 39
Reverse Activity Bit:RAB Length 80
Reverse Activity Bit:RAB Level 80
Reverse Activity Bit:RAB Offset 81
Reverse Activity Bit:State 81
Roll Off 54, 66
RPC Mode 33, 91
RPC Pattern 34, 92
RPC Range Count 34, 91
RRI Channel
Relative Gain 45
State 45
RRI Channel:Relative Gain 113
RRI Channel:State 113
Running - Trigger 71

S

Save/Recall
1xEV-DO 13
Sequence Length (ARB) 56, 63
Set to default 12, 61
Signal Duration 71
Signal Duration Unit 16, 72
Signal generation status 17
Single 16
Slot Count 32, 92
Standard settings 12, 61
State 63
User 26
State (Access Terminal) 43
State (ACK Channel) 47, 97
State (Auxiliary Pilot Channel) 44, 99
State (Control Channel) 39, 79
State (Data Channel) 52, 107
State (DRC Channel) 46, 109
State (DSC Channel) 45, 110
State (Pilot Channel) 39, 44, 80, 112
State (Reverse Activity Bit) 39, 81
State (RRI Channel) 45, 113
State (User) 93
State - Clipping 65
Sync. Output to External Trigger 18
System Time 14, 63

T

Transmission direction 14, 61
Trigger Delay 19
Trigger Delay Other Baseband 70
Trigger Inhibit Other Baseband 71
Trigger Mode 16, 69
Trigger Signal Duration 17
Trigger Source 17

U

Uplink 14, 61
User
State 26
User:State 93
User manual 5
User Period 76

V

Values (ACK Channel) 48, 97
Values (DRC Channel) 46, 109
Values (DSC Channel) 45, 111
Version 13, 64

W

Waveform file
Create 13